

USER MANUAL

Wireless Speaker

 
 
MODEL: S505

Thank you for purchasing this product! Please carefully read this instruction manual before use.


SPECIFICATION

Wireless Version	CSRV4.0
Output Sound Channel	2.0
Input Voltage	DC—5V/1.5A
Output Power	10W*2RMS
Battery	18650battery 3.7V/4400mAh
Speaker	50mm 4Ω/10W
SNR	≥80dB
Pairing Range	Up to 10 meters under barrier-free condition
Playing Time	About 15 hours at 70% volume (depends on different music)
Standby Time	4200 hours
Chrging Time	About 8 hours
Material	ABS/Silicone/Metal
Product Dimension	190mm(L)*55mm(W)*68mm(H)
Net Weight	450g

ACCESSORIES

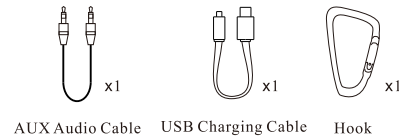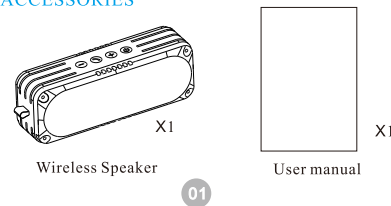


PRODUCT DIAGRAM

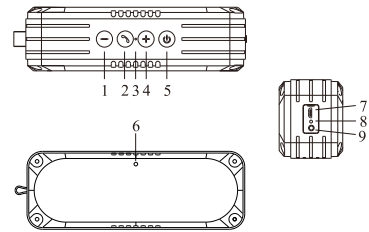 

- ① Previous Track/Volume down
- ② Play/pause/Hands-free
- ③ Working indicator light
- ④ Next Track/Volume up
- ⑤ Power on/off
- ⑥ Microphone
- ⑦ USB Charging Socket
- ⑧ Charging indicator light
- ⑨ AUX Input(external input)

CHARGE THE SPEAKER

 You must charge the speaker fully before using this product for the first time. When the sound begin to trail off or distort, the red working indicator light will light up, it is time to charge the speaker.

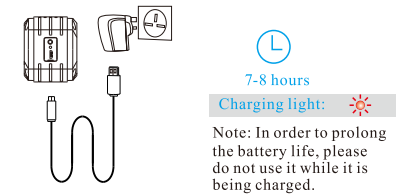

1. Connect one end of the provided USB charging cable to the USB charging socket on the speaker.
2. connect the other end of the provided USB charging cable to computer or adapter.
3. the charging indicator light is red when the speaker is being charged.
4. It takes about 8 - 10 hours to fully charge it if it is connected to computer. About 7 - 8 hours it connected to adapter(5V1.5A)
5. The charging indicator is extinguished when the speaker is full of electricity

POWER ON/OFF

1. Power on: long press the button "⏻" to trn on the speaker.
2. Power off: long press the button"⏻"again to turn off the speaker.

WIRELESS PAIRING

- ① Long press the power button"⏻" to turn on the speaker, the blue working indicator light will flash fast
- ② turn on the Wireless function on your phone. Search for Wireless devices and select " S505 ". (Enter code "0000" if needed.)
- ③ You will hear sound prompt when it is connected.
- ④ Now, you can play music, long press the power button once again to turn off the speaker when it is playing music.

Remark: The speaker has memory function. When you turn on the speaker next time, it will automatically connect to pre-paired phone if the Wireless function on you phone is on.(Please make sure your phone is in the range of pairing)

WIRELESS PLAYING

1. Hands-free call function: when a call comes in, short press "☎" to answer it, long press it to reject, short press it again when you finish the call.
2. Redialing: double press the button "☎" to redial the last called number. And short press it again when you finish the call.
3. Long press "☎" to disconnect with the paired Wireless devices.
4. Short press the button "➡" to skip to next track, long press to turn up the volume; short press the button "⏪" to skip to previous track, long press to turn down the volume.

AUX PLAYING

Some devices(such as MP3,MP4)have no Wireless function, so you can use the 3.5mm AUX audio cable to connect your device to the speaker to play music you can adjust volume on the speaker.
Note: After the speaker is on and without any operation for 10 minutes, it will turn off automatically.

CAUTIONS & WARNINGS

1. It is normal tat the speaker will produce slight heat when it is working or being charged.
2. DO NOT disassemble, dismantle , repair, modify, open, incinerate, paint, or insert foreign objects into the speaker without approval. Such actions may result in damage.
3. DO NOT expose your speaker to extremely high or low temperatures.
4. DO NOT leave your speaker in direct sunlight for extended periods of time.
5. DO NOT leave your speaker near open flames such as cooking burners, candles, or fireplaces.
6. DO NOT put the speaker on high places such as shelves. For safety, please put the speaker out of reach of children.
7. DO NOT make your speaker to be in contact with any sharp objects. It could cause scratches and damage.

CLEANING & MAINTENANCE

1. If you need to clean the speaker, please turn off the speaker and disconnect it with all external devices before cleaning.
2. Please use dry and clean cloth to clean the speaker.

3. DO NOT use alcohol, benzene or other chemicals to clean the speaker.
4. If your speaker has malfunction, please turn to professional personnel. Wrong operation may lead to damage to the speaker.

CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment)
This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.
Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

尺寸：90*60mm