


## HANDHELD MIC

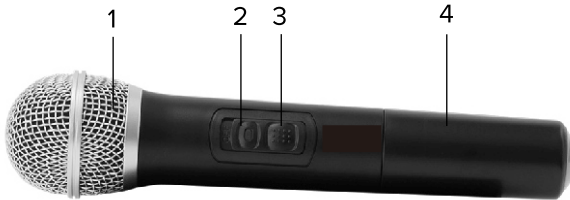

1. Grill (Capsule inside)
2. Power / low battery indicator
3. Power ON/OFF/MUTE Switch
4. Battery Compartment/Cover

## OPERATION

1. Open battery cover. Install the provided 2pcs 1.5V AA batteries and then close the cover. Pay attention to the correct polarity.
2. Push power switch to ON position, power indicator should flash once briefly indicating that the transmitter has sufficient power. If the power LED indicator stays on, it indicates that the battery has insufficient power and should be changed. If the power LED indicator does not light at all and the transmitter does not work, it indicates the battery is dead and you should change the battery.
3. Now receiver RF indicator should light (Please confirm frequency of microphone is the same as that of receiver before operation).
4. Push power switch to MUTE position to mute the sound.
5. During operation if the power indicator lights red, this indicates the battery is low. Please replace new battery.
6. If the microphone is not going to be used for any length of time, push power switch to OFF position and remove the battery.

### RF Exposure:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment is in direct contact with the body of the user under normal operating conditions. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.