

**Label Location:**

**Host label:**

Stick it in the limit slot at the bottom of the host.

**Warning label:**

It is attached to the bottom of the host, close to the side of the universal wheel,  
opposite to the side brush