
M5STACK -CoreS3

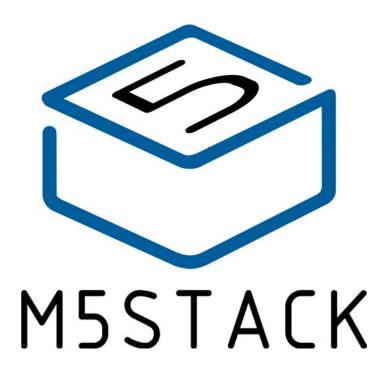

2023

TABLE OF CONTENTS

1	. QU	ICK START	3
	1.1.	ARDUINO IDE	(')
	1.2.	BLUETOOTH SERIAL	(1)
	1.3.	WIFI SCANNING	



1.QUICK START

1.1.ARDUINO IDE

Visit Arduino's official website(https://www.arduino.cc/en/Main/Software), Select the installation package for your own operating system to download.

- >1.Open up Arduino IDE, navigate to `File`-> `Peferences`-> `Settings`
- >2.Copy the following M5Stack Boards Manager url to `Additional Boards Manager URLs:`

https://raw.githubusercontent.com/espressif/arduino-esp32/gh-pages/package_esp32_dev_index.json

- >3.Navigate to `Tools`->`Board:`->`Boards Manager...`
- >4.Search `ESP32` in the pop-up window, find it and click `Install`
- >5.select `Tools`->`Board:`->`ESP32-Arduino-ESP32 DEV Module



1.2.BLUETOOTH SERIAL



Open the Arduino IDE and open the example program `File`->`Examples`->`BluetoothSerial`->`SerialToSerialBT`. Connect the device to the computer and select the corresponding port to burn. After completion, the device will automatically run Bluetooth, and the device name is `ESP32test`. At this time, use the Bluetooth serial port sending tool on the PC to realize the transparent transmission of Bluetooth serial data.



#include "BluetoothSerial.h"

#if !defined(CONFIG_BT_ENABLED) || !defined(CONFIG_BLUEDROID_ENABLED)
#error Bluetooth is not enabled! Please run `make menuconfig` to and en
able it
#endif



```
BluetoothSerial SerialBT;

void setup() {
    Serial.begin(115200);
    SerialBT.begin("ESP32test"); //Bluetooth device name
    Serial.println("The device started, now you can pair it with bluetoot
h!");
}

void loop() {
    if (Serial.available()) {
        SerialBT.write(Serial.read());
    }
    if (SerialBT.available()) {
        Serial.write(SerialBT.read());
    }
    delay(20);
}
```

1.3. WIFI SCANNING

Open the Arduino IDE and open the example program `File`->`Examples`->`WiFi`->`WiFiScan`. Connect the device to the computer and select the corresponding port to burn. After completion, the device will automatically run the WiFi scan, and the current WiFi scan result can be obtained through the serial port monitor that comes with the Arduino.

```
WiFiScan | Arduino 1.8.12
File Edit Sketch Tools Help
X
   WiFi.disc
                                                                                                           Send
   delay(100);
                       scan start
                     de scan done
   Serial.println("Setup
                      17 networks found
                      1: cam (-47)
                      2: M5-2.4G (-50) *
void loop()
                      3: WirelessNet (-55)*
  Serial.println("scan sta 4: M5-2.4G (-60) * 5: M5-2.4G (-62) *
  Serial.print (Wi
         Serial.print("
         Serial.print(Wi
         Serial.print(")
          Serial.println(
         delay(10);
   Serial.println("");
   // Wait a bit before so
                       Autoscroll Show timestamp
                                                                            Newline
                                                                                       ∨ 115200 baud ∨ Clear output
   delay (5000);
```



```
#include "WiFi.h"
void setup()
    Serial.begin(115200);
    WiFi.mode(WIFI_STA);
    WiFi.disconnect();
    delay(100);
    Serial.println("Setup done");
void loop()
    Serial.println("scan start");
    int n = WiFi.scanNetworks();
    Serial.println("scan done");
    if (n == 0) {
        Serial.println("no networks found");
    } else {
        Serial.print(n);
        Serial.println(" networks found");
        for (int i = 0; i < n; ++i) {</pre>
            Serial.print(i + 1);
            Serial.print(": ");
            Serial.print(WiFi.SSID(i));
            Serial.print(" (");
            Serial.print(WiFi.RSSI(i));
            Serial.print(")");
            Serial.println((WiFi.encryptionType(i) == WIFI_AUTH_OPEN)?"
 ":"*");
            delay(10);
    Serial.println("");
    delay(5000);
```



M5STACK-CORES3



2023

TABLE OF CONTENTS

1	•	OUT	TLINE	3
	1.	1 H	ARDWARE COMPOSITION	3
2	•	PIN	I DESCRIPTION	1
	2.	1.	USB INTERFACE	4
	2.2	2.	GROVE INTERFACE	4
3	•	FUN	NCTIONAL DESCRIPTION	5
	3.	1.	CPU AND MEMORY	5
	3.2	2.	STORAGE DESCRIPTION	5
		3.2.	.1. External Flash and SRAM	5
	3.3	3.	CPU CLOCK	6
	3.4	4.	RTC AND LOWPOWER MANAGEMENT	5
4	•	ELE	ECTRICAL CHARACTERISTICS	7
	4.	1.	ABSOLUTE MAXIMUM RATINGS	7
	4.2	2.	WIFI RADIO AND BASEBAND	7
	4.3	3.	BLUETOOTH LE RF TRANSMITTER (TX) SPECIFICATIONS	3
	4	4	BLUFTOOTH LE RE RECEIVER (RX) SPECIFICATIONS	2



1.OUTLINE

M5Stick CORES3 is ESP32 board which based on ESP32-S3 chip, contained 2-inch TFT screen. The board is made of PC+ABC.



1.1 Hardware Composition

The hardware of CORES3: ESP32-S3 chip, TFT screen, Green LED, Button, GROVE interface, TypeC-to-USB interface, Power Management chip and battery.

ESP32-S3 The ESP32 is a dual-core system with two Harvard Architecture Xtensa LX6 CPUs. All embedded memory, external memory and peripherals are located on the data bus and/or the instruction bus of these CPUs. With some minor exceptions (see below), the address mapping of two CPUs is symmetric, meaning that they usethe same addresses to access the same memory. Multiple peripherals in the system can access embeddedmemory via DMA.

TFT Screen is a 2-inch color screen driven **ILI9342C** with a resolution of 320 x 240. Operating voltage range is 2.6~3.3V, working temperature range is -25~55°C.

Power Management chip is X-Powers's AXP2101. The operating voltage range is 2.9V~6.3V and the charging current is 1.4A.

CORES3 equips ESP32 with everything needed for programming, everything needed for operation and development



2.PIN DESCRIPTION

2.1. USB INTERFACE

M5CAMREA Configuration Type-C type USB interface, support USB2.0 standard communication protocol.



2.2. GROVE INTERFACE

4p spacing 2.0mm M5CAMREA GROVE Ports.A, Port.B, and Port.C, the internal cables are connected to GND, 5V, GPIO1, GPIO2, GPIO8, GPIO9, GPIO17, and GPIO18.





3. FUNCTIONAL DESCRIPTION

This chapter describes the ESP32-S3 various modules and functions.

3.1.CPU AND MEMORY

Xtensa® dual-core 32-bit LX7 microprocessor,up to 240 MHz

- 384 KB ROM
- 512 KB SRAM
- 16 KB SRAM in RTC
- SPI, Dual SPI, Quad SPI, Octal SPI, QPI and OPI interfaces that allow connection to multiple flash and external RAM
- Flash controller with cache is supported
- Flash in-Circuit Programming (ICP) is supported

3.2. STORAGE DESCRIPTION

3.2.1.External Flash and SRAM

ESP32-S3 supports SPI, Dual SPI, Quad SPI, Octal SPI, QPI and OPI interfaces that allow connection to multiple external flash and RAM.

The external flash and RAM can be mapped into the CPU instruction memory space and read-only data memory space. The external RAM can also be mapped into the CPU data memory space. ESP32-S3 supports up to 1GB of external flash and RAM, and hardware encryption/decryption based on XTS-AES to protect users' programs and data in flash and external RAM.

Through high-speed caches, ESP32-S3 can support at a time up to:

- External flash or RAM mapped into 32 MB instruction space as individual blocks of 64 KB
- External RAM mapped into 32 MB data space as individual blocks of 64 KB. 8-bit, 16-bit, 32-bit, and 128-bit reads and writes are supported. External flash can also be mapped into 32 MB data space as individual blocks of 64 KB, but only supporting 8-bit, 16-bit, 32bit and 128-bit reads.



3.3. CPU CLOCK

The CPU clock has three possible sources:

- External main crystal clock
- Internal fast RC oscillator (typically about 17.5 MHz, and adjustable)
- PLL clock

The application can select the clock source from the three clocks above.

The selected clock source drives the

CPU clock directly, or after division, depending on the application. Once the CPU is reset, the default clock

source would be the external main crystal clock divided by 2.

3.4. RTC AND LOWPOWER MANAGEMENT

With the use of advanced power-management technologies, ESP32-S3 can switch between different power modes. (see table1).

- Active mode: CPU and chip radio are powered on. The chip can receive, transmit, or listen.
- Modemsleep mode: The CPU is operational and the clock speed can be reduced. The wireless baseband and radio are disabled, but wireless connection can remain active.
- Lightsleep mode: The CPU is paused. The RTC peripherals, as well as
 the ULP coprocessor can be woken up periodically by the timer.
 Any wake-up events (MAC, host, RTC timer, or external interrupts)
 will wake up the chip. Wireless connection can remain active. Users
 can optionally decide what peripherals to shut down/keep on (refer
 to Figure 1), for power-saving purpose.
- Deepsleep mode: CPU and most peripherals are powered down.
 Only the RTC memory is powered on and RTC peripherals are optional. Wi-Fi connection data are stored in the RTC memory. The ULP coprocessor is functional.

Current Consumption in LowPower Modes: TABLE 1

Work mode	Description	Typ (μ A)	
Light-sleep	VDD_SPI and Wi-Fi are powered down, and all GPIOs are high-impedance.		
Deep-sleep	RTC memory and RTC peripherals are powered on.	8	
Deep-sieep	RTC memory is powered on. RTC peripherals are powered off.	7	
Power off	CHIP_PU is set to low level. The chip is powered off.	1	



4. ELECTRICAL CHARACTERISTICS

4.1. ABSOLUTE MAXIMUM RATINGS

Table 2: Absolute Maximum Ratings

Symbol	Parameter	Min	Max	Unit
VDDA, VDD3P3, VDD3P3_RTC,	Voltage applied to power supply pins	-0.3	3.6	V
VDD3P3_CPU, VDD_SPI	per power domain			
loutput *	Cumulative IO output current	_	1500	mA
T_{STORE}	Storage temperature	-40	150	°C

1. VIO to the power supply pad, Refer ESP32 Technical Specification Appendix IO_MUX, as SD_CLK of Power supply for VDD_SDIO.

4.2. WIFI RADIO AND BASEBAND

The ESP32-S3 Wi-Fi radio and baseband support the following features:

- 802.11b/g/n
- 802.11n MCS0-7 that supports 20 MHz and 40 MHz bandwidth
- 802.11n MCS32
- 802.11n 0.4 μs guard-interval
- Data rate up to 150 Mbps
- RX STBC (single spatial stream)
- Adjustable transmitting power
- Antenna diversity:

ESP32-S3 supports antenna diversity with an external RF switch. This switch is controlled by one or more

GPIOs, and used to select the best antenna to minimize the effects of channel imperfections.



4.3. BLUETOOTH LE RF TRANSMITTER (TX) SPECIFICATIONS

Table 3: Transmitter Characteristics Bluetooth LE 1 Mbps

Parameter	Description	Min	Тур	Max	Unit
RF transmit power	RF power control range	-25.00	0	20.00	dBm
nr transmit power	Gain control step	_	3.00	_	dB
	$\text{Max } f_n _{n=0,\;1,\;2,\;k}$	_	2.50	_	kHz
Carrier frequency offset and drift	$Max f_0 - f_n $	_	2.00	_	kHz
Carrier frequency offset and drift	$Max \left f_{n-} f_{n-5} \right $	_	1.39	_	kHz
	$ f_1-f_0 $	_	0.80	_	kHz
	$\Deltaf1_{ ext{avg}}$	_	249.00	_	kHz
Modulation characteristics	Min Δ $f2_{\text{max}}$ (for at least		198.00	_	kHz
	99.9% of all Δ $f2_{\rm max}$)	_	190.00		KITZ
	$\Delta~f2_{ m avg}/\Delta~f1_{ m avg}$	_	0.86	_	_
	±2 MHz offset	_	-37.00	_	dBm
In-band spurious emissions	±3 MHz offset	_	-42.00	_	dBm
	>±3 MHz offset	_	-44.00	_	dBm

4.4.BLUETOOTH LE RF RECEIVER (RX) SPECIFICATIONS

Table 4: Receiver Characteristics Bluetooth LE 1 Mbps

Parameter	Description	Min	Тур	Max	Unit
Sensitivity @30.8% PER	_	_	-97.5	_	dBm
Maximum received signal @30.8% PER	_	_	8	_	dBm
Co-channel C/I	F = F0 MHz	_	9	_	dB
	F = F0 + 1 MHz	_	-3	_	dB
	F = F0 - 1 MHz	_	-3	_	dB
Adjacent channel selectivity C/I	F = F0 + 2 MHz	_	-28	_	dB
	F = F0 - 2 MHz	_	-30	_	dB
	F = F0 + 3 MHz	_	-31	_	dB
	F = F0 - 3 MHz	_	-33	_	dB



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This M5CoreS3 meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the device kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 10mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.