1. BEFORE YOU START CHECKLIST

- ☐ A compatible alarm system
- ☐ 2.4 GHz Wi-Fi Internet connection
- ☐ Mobile device with enabled Bluetooth
- ☐ Access to alarm system panel
- □ Phillips screwdriver
- ☐ Master alarm code (used to arm/disarm your alarm)
- ☐ For Honeywell / Ademco / ADT / Safewatch / First Alert alarm systems: the installer code to enable a keypad address (see video for more details)



Video tutorial of the installation process, reset instructions, and more:

getnexx.com/nexxalarm/videos

If you need help, just send an email to support@getnexx.com

5. CONNECT CABLE TO NXAL-100 AND ALARM PANEL

DISCONNECT AC POWER AND BATTERY!

DSC:

Black wire → "BLK" or "AUX -" Red wire → "RED" or "+ AUX"

Green wire → "GRN"

Yellow wire → "YEL"

Honeywell / Ademco / ADT /

 
Safewatch / First Alert:

Black wire → 4

Red wire → 5

Green wire → 6

Yellow wire → 7



* ONLY FOR Honeywell / Ademco / ADT / Safewatch / First Alert Alarm Systems * SKIP FOR DSC Systems

You must assign an unused keypad number for Nexx Alarm. If this keypad number is already used by another existing keypad, then Nexx Alarm WILL NOT WORK.

There are typically 8 available keypad numbers: 16 -23. If unused, we suggest using 23 as the address number for Nexx Alarm. To enable address 23, enter the following sequence from your alarm keypad:

Installer code (default is 4112) → 800 → *196 → $1 \rightarrow 0 \rightarrow \text{to exit: *99}$

If successful, you should hear 3 beeps.

Safewatch / First Alert Alarm Systems * SKIP FOR DSC Systems

* ONLY FOR Honeywell / Ademco / ADT /

The typical reason for failure to enable a keypad address is an invalid installer code.

The default installer code is 4112. If that does not work, you may have to reset your installer code.

2.1. ENABLE KEYPAD ADDRESS (SKIP FOR DSC SYSTEMS)

Follow the instructions in this video to reset your installer code:

getnexx.com/nexxalarm/videos

If you need help, contact our support team: support@getnexx.com

3. INSTALL MOBILE APP

Download and install from Apple App Store or Google Play Store:



Nexx Home





4. CREATE ACCOUNT

Open Nexx Home app and create an account with Nexx.



6. NXAL-100 PLACEMENT



For good WiFi connection, use the included Velcro tape and attach Nexx Alarm on the exterior of the alarm panel enclosure.

Make sure you have enough space below Nexx Alarm in case you need to reset it.

7. CHECK STATUS

A. Green LED Nexx light is blinking - CONTINUE to next step

B. Green LED Nexx light is NOT blinking - RESET device

To reset the device to factory default, use a paper clip or something similar to press and hold the reset button until the green Nexx LED light starts blinking.



8. ADD NEXX ALARM NXAL-100 TO NEXX HOME

Before starting, make sure you have the following information:

- ☐ Brand and model number of your alarm system ☐ Master alarm arm/disarm code
- ☐ For models other than DSC: Installer code
- ☐ For models other than DSC: Keypad address number
- ☐ Wi-Fi network name
- ☐ Wi-Fi password

Log in Nexx Home app and tap 🕕 to add device.

⇒ Follow the configuration process.





9. TEST

From Nexx Home mobile app, go to detail screen for Nexx Alarm.

Press and hold the activation button. After about 1.5 seconds, your alarm system should arm or disarm.



CONGRATULATIONS!

You are good to go.

For issues or questions, please email:

support@getnexx.com

For troubleshooting tips, visit:

help.getnexx.com