



Getting Started

Check the speaker from the box.

- Please return the packaging unit if you have checked and counted all the parts and the contents against the parts list.

Package Contents


- Tower Bluetooth Speaker with Fabric Grid
- Instruction Manual

Key Features

- Bluetooth wireless speaker with fabric grid connects to any Bluetooth-enabled device.
- Streams wireless music from your Phone, iPad and other wireless smartphones and tablets.
- Speaker offers crisp stereo sound.
- Portable light stand.
- Built-in microphone for hands-free calls.
- Built-in auxiliary jack and Micro SD card slot (Micro SD card not included).
- Built-in rechargeable battery.

SAFETY INSTRUCTIONS

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any other fluids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquid to prevent electrical shock, fire and/or motor injury. Do not use the speaker if it has been dropped or damaged in any way.
- Do not use the speaker with wet hands.
- Do not use the speaker with electrical equipment that is performed by a qualified electrician. Improper repairs may cause the user at serious risk.
- Do not use the speaker for anything other than its intended use.
- Do not put objects into any of the openings.
- Do not use the speaker for anything other than its intended use.
- Keep the speaker free from dust, dirt etc.
- The speaker is not a toy.
- The speaker is not a toy.
- Batteries (battery pack or battery module) shall not be exposed to excessive heat, direct sunlight, fire or the like.

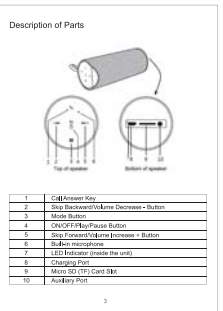

INSTRUCTIONS FOR USE

Charging the Speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker will turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Micro USB and the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices that can charge USB LED Light. A red light indicator indicating that the device is being charged.

It takes 3-4 hours to fully charge the speaker. Once the speaker is fully charged, LED light will turn off.

It is recommended to fully charge the speaker before its first use.

Turning ON/OFF the Speaker

Press and hold the ON/OFF button 3-5 seconds to turn on the unit. The red light will glow. Press and hold the ON/OFF button 3-5 seconds to turn off the unit.

Connect using Bluetooth Technology

Press and hold the ON/OFF button 3-5 seconds to turn on the unit. The red light will glow. Press and hold the ON/OFF button 3-5 seconds to turn on the unit. The red light will glow. Press and hold the ON/OFF button 3-5 seconds to turn on the unit. The red light will glow.

Using the Speaker

Press and hold the ON/OFF button 3-5 seconds to turn on the unit. The red light will glow. Press and hold the ON/OFF button 3-5 seconds to turn on the unit. The red light will glow.

Function	Operation	Button
Answer Incoming Call	Answering Call	Press and hold the P.H. button to answer an incoming call.
Reject Incoming Call	Rejecting Call	Press and hold the P.H. button to reject an incoming call.
Call End	Ending Call	Press and hold the P.H. button to end the call.
Volume Volume Up	Volume Up	Press and hold the P.H. button to increase the volume.
Volume Volume Down	Volume Down	Press and hold the P.H. button to decrease the volume.
Power Off	Power Off	Press and hold the P.H. button to power off the speaker.

Stream Wireless Music

Stream music from your phone, tablet or other smart phone is paired with the speaker. Stream music from your phone, tablet or other smart phone is paired with the speaker.

Function	Operation	Button
Stream Music	Stream Music	Press and hold the P.H. button to stream music.
Stream Music	Stream Music	Press and hold the P.H. button to stream music.
Stream Music	Stream Music	Press and hold the P.H. button to stream music.
Stream Music	Stream Music	Press and hold the P.H. button to stream music.
Stream Music	Stream Music	Press and hold the P.H. button to stream music.
Stream Music	Stream Music	Press and hold the P.H. button to stream music.

(Note: The above functions only can be used in Bluetooth mode only. Stream music will start when the volume is adjusted to the minimum or maximum level. In Aux mode, because the volume non-dependence, you still need to control through your source device.)

Stream music from Micro SD (TF) Card

- Insert the Micro SD (TF) Card preloaded with songs into the Micro SD (TF) Card Slot of the speaker. (You would hear "Open" sound). Speaker would automatically start playing songs from the Micro SD (TF) Card.
- Press the Mode Button to select the Micro SD (TF) Card mode.
- To Skip Track Forward - Short press the Skip Forward button.
- To Skip Track Backward - Short press the Skip Backward button.
- To Pause the Track - Short press the Play/Pause button.
- To Play the Track - Short press the Play/Pause button.
- Long press + to increase the volume or - to decrease the volume.

Use Micro SD Card as music

Listening to FM radio

- Turn ON the speaker.
- Press the Mode button each time (you would hear "Open" sound) and to AUTOMATIC the stations, press the Play/Pause button twice.
- If it take time to search all the stations, Once all the stations are searched, it will start playing automatically.
- Press + or - to skip selected stations.
- Long press + to increase the volume or - to decrease the volume.

Play music through "Auxiliary" mode

- Turn ON the speaker.
- Insert one end of the Auxiliary cable (included) into the Auxiliary port (on the back of the speaker) and the other end to the audio device (such as phone, MP3 Player, computer, tablet etc.).
- Short press the Mode button to select the source device to play.
- Long press + to increase the volume or - to decrease the volume. Note: Music can be controlled only through the source device, while playing music in Auxiliary mode.

Tips!

1. Press the "Mode button" to switch different functions of the speaker: Bluetooth / Micro SD (TF) / AUX / FM radio.
2. When the speaker is not in use, turn it OFF in order to save the battery power.

Specifications

Bluetooth Version:	3.0
Wireless Streaming Range:	20-30 Feet
Speaker Power:	20W
FM Frequency Range:	87.5-108MHz
FM Frequency Range:	87.5-108MHz
Speaker Impedance:	4Ω, 2x4Ω, 8Ω, 16Ω, 32Ω
Weight:	1.2kg (approx)
Power Input:	DC 5V
Charging Time:	3-4 hours
Play time:	6-8 hours (min. volume)
Built-in Rechargeable Battery:	3.7V / 1000mAh
Micro SD (TF) Card:	Support up to 32GB

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

Troubleshooting

Problem	Possible Cause	Solution
Unsound	Source device, audio cable, battery, battery level	Check source device, audio cable, battery level
Unsound	Speaker volume	Check speaker volume
Unsound	Speaker volume	Check speaker volume
Unsound	Speaker volume	Check speaker volume

Care and maintenance

Read the following instructions before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the speaker from being damaged.
- Do not use the unit in extremely high or low temperatures as this will shorten the life of the device, destroy the battery or cause other damage.
- Do not touch the unit in the case it will result in an infection.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not use the unit with open flame. The internal circuit might get damaged.
- Do not attempt to disassemble the unit as you may get damaged if you are not professional.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not properly installed and used, in accordance with the instructions, may cause harmful interference to radio communications; however, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device can be used in prohibited frequency condition without restriction.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Further, the manufacturer or any other company involved in the sale or promotion of the product is a co-warranty of this manufacturer's warranty.

WARRANTY DURATION:

Manufacturer's product warranty extends to the original consumer purchaser of the product. Further, the manufacturer or any other company involved in the sale or promotion of the product is a co-warranty of this manufacturer's warranty.

WARRANTY COVERAGE:

This product is warranted against defective materials or workmanship, but does not cover the product if the product has been damaged by accident, in-home, commercial use, misuse, neglect, improper service, commercial use, or if the product has been damaged by other causes not listed in this warranty. This warranty is void if the product is not used in accordance with the instructions furnished by manufacturer or to units which have been altered or modified. It does not cover accessories or parts thereof which have not been included in the original purchase. This warranty is void if the product is not used in accordance with the instructions furnished by manufacturer or to units which have been altered or modified. It does not cover accessories or parts thereof which have not been included in the original purchase.

WARRANTY DISCLAIMERS:

This warranty is in full of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other warranty in connection with the sale of our products. There shall be no claim for damages or compensation for consequential, incidental, or special damages, including lost profits, arising out of the use of our products. This warranty is void if the product is not used in accordance with the instructions furnished by manufacturer or to units which have been altered or modified. It does not cover accessories or parts thereof which have not been included in the original purchase.

WARRANTY PERFORMANCE:

During the above warranty period, a product with a defect will be either repaired or replaced with a non-damaged comparable product.

(at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 12-month warranty period and an additional 90-day period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR:

If service is required for the product, you should first contact Midwest Trading Group Customer Service at MidwestTrading@midwesttrading.com or call 1-866-614-4774. Warranty to Repair: Return to Origin.

NOTE: Manufacturer cannot assume responsibility for loss or damage during moving, installation, or if a previously mentioned defect is repaired by the product's original manufacturer. If you have any questions about the warranty details with the product, your retailer, return address and shipping charges, or any other questions, please contact your retailer, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D.S. shipments cannot be accepted.

