

## YTK-332 Wireless Speaker



### INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE USE

#### Getting started

- Remove the product from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

#### Packaging Contents

- Bluetooth Clock Radio Speaker
- USB Charging Cable
- 3.5mm auxiliary cable
- Instruction Manual

#### Features


- Digital Alarm Clock
- Connects to Bluetooth enabled devices; stream wireless music
- Built-in mic for phone-calls; never miss a phone call whilst enjoying your favorite tunes
- Built-in FM radio
- LED clock display
- 3.5mm Aux Jack
- Built-in Micro SD (TF) slot and USB slot to stream music

#### IMPORTANT SAFETY INFORMATION

- Read all instructions before using this product.
- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.

2

#### Description of Parts

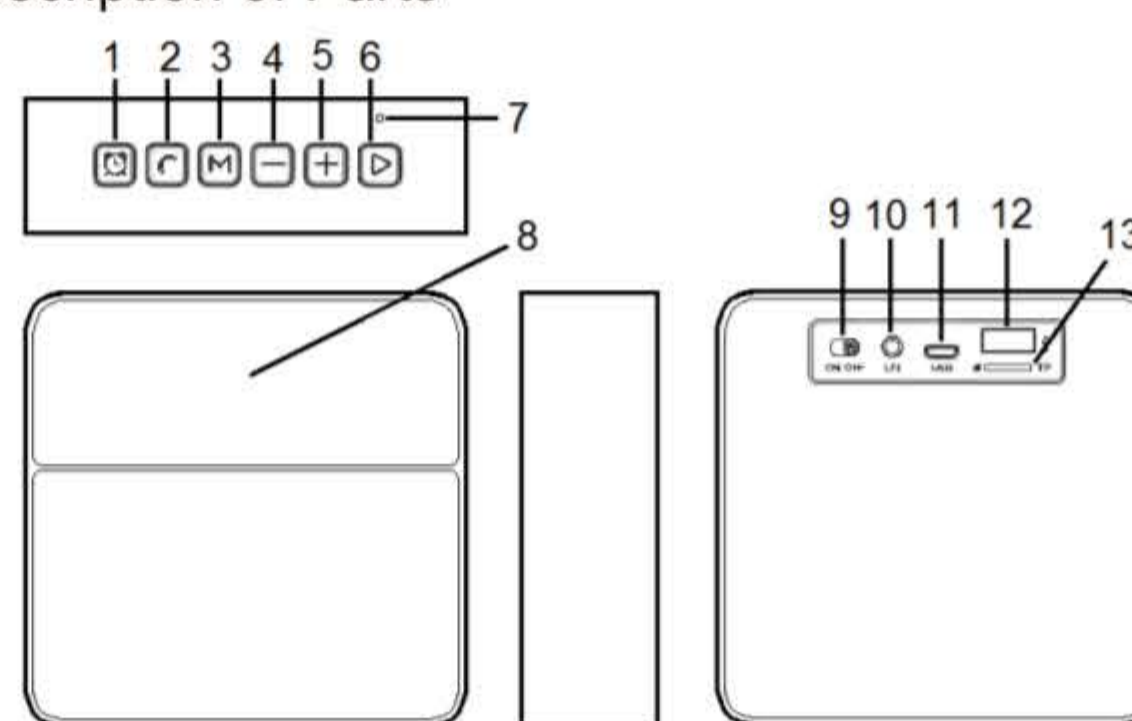

|   |                           |    |                           |
|---|---------------------------|----|---------------------------|
| 1 | Clock Button              | 8  | LED Display               |
| 2 | Phone Button              | 9  | ON/OFF Switch             |
| 3 | Mode Button               | 10 | AUX-IN Port               |
| 4 | Previous Track / Volume - | 11 | USB Charging Port (DC 5V) |
| 5 | Next Track / Volume +     | 12 | USB Slot                  |
| 6 | Play / Pause / > Button   | 13 | Micro SD (TF) Card Slot   |
| 7 | Built-in Mic              |    |                           |

#### INSTRUCTIONS FOR USE

##### Charging Instructions

- The Bluetooth Clock Radio Speaker comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Only use the supplied USB cord to charge the Bluetooth Speaker. Please charge for about 3-4 hours.
- Connect the USB charging cable to a computer USB port or other suitable charging source and the Micro USB plug to the charging port of the device. The battery indicators will flash alternately while the device is charging. It takes about 3-4 hours for the unit to fully charge. When the battery is fully charged, only the full battery indicator will stay on.

3

#### Turning on/off the device



- Slide the On/Off switch to ON/OFF position to turn on/off the device.

#### Time Setting

- Press the **Clock** button once to time setting (hour & minute).
- Hour value will flash, press + and - to set the desired hour.
- To confirm the hour, press > button once.
- Then, minute value will flash. Press + and - to set the desired minute.
- To confirm the minute, press > button once.
- Press the **Clock** button once or wait for about 8-10 seconds to return to normal time display.

**Note:** Time is displayed in 24-hour format.

#### Alarm Clock Setting

- Press the **Clock** button once.
- Press > button twice going to enter alarm clock setting (hour & minute).
- Hour value will flash, press + and - to set the desired hour.
- To confirm the hour, press > button once.
- Then, minute value will flash. Press + and - to set the desired minute.
- To confirm the minute, press > button once.
- Alarm OFF will flash, press + and - to set the alarm ON with the icon , or OFF without the icon .
- Press the **Clock** button once or wait for about 8-10 seconds to return to normal time display with alarm function.

**Note:** Time is displayed in 24-hour format.

#### Stop the Alarm Function

To stop the alarm, press the **Clock** button once when alarm goes off, or the alarm sound will turn off after about 30 seconds.

#### Bluetooth Operation

##### Pairing with Bluetooth devices (phone or music device)

- Slide the On/Off switch to ON position to turn on the device.
- An indication tone would be heard, and the LED display will show "BT" flashing.

4

- Place the Speaker and Bluetooth device (phone or music device) no further than 3 feet apart from each other.
- Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your device, select the unit "SL BT CLOCK RADIO" from the list of available Bluetooth devices.
- If required, enter the password "0000" to confirm & finalize pairing.
- Once paired successfully, you would hear another indication tone, and the word "BT" will stay on without flashing.
- You can now start to use the speaker.
- If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps.
- Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.
- The speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

#### Listening to Music

Once the speaker is paired with your device you can stream music wirelessly using your mobile device. Select the track you wish to listen to and it will be streamed to your Bluetooth speaker. Should you encounter any problems while streaming please refer your device's user manual for further information.

| Function        | Operation           | Button   |
|-----------------|---------------------|--|
| Increase Volume | Playing music       | Long press the <b>Next Track / Volume +</b> button will increase the volume                  |
| Decrease Volume | Playing music       | Long press the <b>Previous Track / Volume -</b> button will decrease the volume              |
| Pause           | Playing music       | A short press on the <b>Play / Pause</b> button will pause the music                         |
| Play            | Pausing             | A short press on the <b>Play / Pause</b> button will resume the music                        |
| Next Track      | While playing music | Short press the <b>Next Track / Volume +</b> button and it would move one track forward      |
| Previous Track  | While playing music | Short press the <b>Previous Track / Volume -</b> button and it would move one track backward |

5

An indication tone will alert you when the volume is adjusted to the maximum level.

#### Answering a call with the speaker

##### Basic operation

| Function             | Operation                              | Button  |
|----------------------|--|---|
| Answer Incoming Call | Incoming Call                          | Short press the <b>Phone Button</b> to answer an incoming call                  |
| Reject Incoming Call | Incoming Call                          | Long press the <b>Phone Button</b> for 2-3 seconds                              |
| End Call             | Incoming Call                          | After your phone conversation, short press the <b>Phone Button</b>              |
| Increase Volume      | During a call                          | Long press the <b>Next Track / Volume +</b> button will increase the volume     |
| Decrease Volume      | During a call                          | Long press the <b>Previous Track / Volume -</b> button will decrease the volume |
| Redial last number   | Standby mode and connected to a device | Short press the <b>Phone Button</b> twice                                       |

#### Aux function of the Speaker

(to play music from non-Bluetooth devices)

- Turn on the speaker.
- Plug the 3.5mm auxiliary cord (included) in to the auxiliary port of the speaker, an indication tone would be heard, and the LED display will show "AUX".
- Connect the other end of the cable to the audio device (such as MP3 Players / computer / tablet etc.).
- Select your favorite song at the source device.

**Note:** Functions like **Play / Pause**, **Skip Backward**, **Skip Forward** etc can be only controlled through source devices, while playing music in Auxiliary mode.

#### Listening to Music using Micro SD (TF) card / USB slot

- Turn on the speaker.
- Insert Micro SD (TF) card or USB flash drive into the Micro SD (TF) card slot or USB slot. An indication tone would be heard, and the LED display will show "TF" or "USD" accordingly. Music will stream automatically.

6

- Press the **Next Track / Volume +** or **Previous Track / Volume -** button to move forward or backward on your playlist.
- Press the **Play / Pause** button to Play or Pause a track.

**Note:** While using Bluetooth, if you insert Micro SD (TF) card or USB flash drive, speaker would disconnect the Bluetooth connection and switch to Micro SD (TF)/USB function. You can press **MODE** button again, to select the Bluetooth mode.

#### FM Radio

- Turn ON the Speaker.
- Insert the Micro USB end of the included USB charging cable into the charging port, and leave the other end of the cable open. USB charging cable serves as FM Antenna while in FM Radio mode.
- Press "**MODE**" button until FM mode is selected; the LED display will show "FM" with sound.
- Press the **Play / Pause** button once and the device would automatically search and store all the FM Radio stations.
- Press the **Next Track / Volume +** or **Previous Track / Volume -** button to change the FM Radio stations.

#### Tips!!

- Press the "**MODE**" button to switch different functions of the speaker. The modes appear in the following sequence – Bluetooth / Micro SD (TF)-USB / FM Radio / AUX-In.
- When the unit is not in use, turn OFF the device to save the battery power.

#### Specifications

|                                 |  |
|---------------------------------|--|
| Bluetooth version :             | 4.2  |
| Bluetooth Range :               | 33 feet                                      |
| Speaker Output :                | 3W   |
| Music play time :               | 2 to 3 hours (max. volume)                   |
| Clock only :                    | up to 6 months with 1 alarm sounding per day |
| Charge Voltage :                | DC5V (USB)                                   |
| Built-In Rechargeable Battery : | 3.7V / 1200mAh                               |
| Dimension :                     | 4.25" (L) x 4.25" (H) x 1.42" (D)            |
| Weight :                        | 8.7 Oz                                       |

(Note: Battery life & charging time may vary based on usage & types of devices used.)

7

#### Troubleshooting

| Problem         | Possible Cause  | Solution  |
|-----------------|---|---|
| Low sound level | Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.<br>Battery dead.  | Adjust source volume.<br>Charge battery.  |
| Sound distorted | Battery nearly dead   | Charge Battery.   |
| No sound        | Source (Tablet, Mobile Phone, and Laptop) turned off.<br>Speaker turned off.<br>Volume turned down source.<br>Media paused on source. | Turn the source on.<br>Turn the speaker on.<br>Adjust volume source.<br>Play media from source. |

#### Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.  
Keep this unit away from wet or damp surroundings.

#### FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**NOTE:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

8

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

9

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

10

90mm

尺寸：64x90mm

80g书写纸，正反面印刷

64mm