

**Getting Started**

- Remove the speaker from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

**Package Contents**

- Plasma Ball Wireless Speaker
- Power Adapter
- Instruction Manual

**Key Features**

- Plasma Ball Wireless Speaker
- Stream wireless music
- Spark any gathering or set the mood with the Plasma Speaker
- Pair any Bluetooth enabled device to the speaker and enjoy your favorite tunes in high-definition audio with stunning light show
- Built-in AUX jack to connect any device using 3.5mm jack
- Built-in Micro SD (TF) card slot
- Powered by Adapter


**SAFETY INSTRUCTIONS**

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.

Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

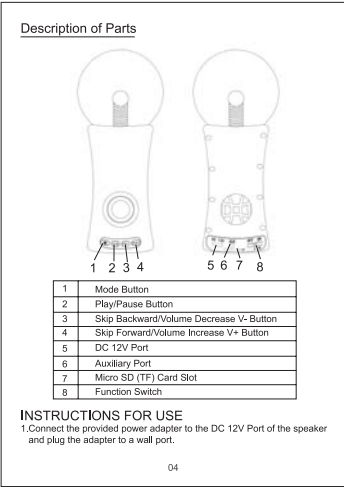

2. To turn ON the speaker - Slide the Function Switch to the "I" position for getting spark effect with the playing music beat; and to the "II" position for normal mood with the Plasma Speaker.

3. To turn OFF the Speaker - Slide the Function Switch to "OFF" position.

4. If the unit is not used for a long time, unplug the provided power adapter from wall outlet.

**Pairing your device with the Speaker -**  
Your Bluetooth Speaker can stream wireless audio from any Bluetooth enabled device within the range of 27-33 Feet. Simply follow the below steps.

- Turn ON the speaker. You would hear an indication tone, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "SL PLASMA SPEAKER" - Pair it with this device.
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, you will hear another indication tone.
- You can now stream wireless music on your speaker through your source device.

**Listening to Music Wirelessly**

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press and hold the V+ button to increase the volume
Decrease Volume	Playing music	Press and hold the V- button to decrease the volume
Pause	Playing music	Short press the Play/Pause button will pause the music

Play	Pausing	Short press the Play/Pause button will resume the music
Previous track	Playing music	Short press the Skip Backward button will return you to the previous track
Next track	Playing music	Short press the Skip Forward button will take you to the next track

(Note: The above functions only can be used in Bluetooth mode only. An indication tone will alert you when the volume is adjusted to minimum or maximum level. In Aux mode, besides the volume increase/decrease, you will need to control through your source device.)

**Stream music from Micro SD (TF) Card -**

- Turn ON the speaker.
- Insert the Micro SD (TF) Card preloaded with songs, into the Micro SD (TF) Card Slot of the speaker. Speaker would automatically start playing songs from the Micro SD (TF) Card.
- Note: Micro SD (TF) Card not included.
- To Skip Track Forward - Short press the Skip Forward button.
- To Skip Track Backwards - Short press the Skip Backward button.
- To Pause the Track - Short press the Play/Pause button.
- To Play the Track - Short press the Play/Pause button.
- Press and hold the V+ button to increase the volume or V- button to decrease the volume.

**Play music through "Auxiliary" mode**

- Turn ON the speaker.
- Insert one end of the Auxiliary cable (not included) into the Auxiliary port, and the other end to the audio device (such as phone / MP3 Player / computer / tablet / ....etc.).
- Select your favourite song at the source device to play.
- Press and hold the V+ button to increase the volume or V- button to decrease the volume.

**Note:** Media can be controlled only through the source devices, while playing music in Auxiliary mode.

**Tips!**

- Press the "Mode button" to switch different functions of the speaker between - Bluetooth / Micro SD (TF) / AUX-In.
- When the speaker is not in use, turn it OFF in order to save the battery power.

**Specifications -**  
Bluetooth® Version: 4.2  
Wireless Streaming Range Distance: 27-33 Feet  
Speaker power: 3W  
Size: 1.5" x W5" x H11"  
Unit weight (not including the Power Adapter): 13.3 oz approx.  
Power Input: DC 12V  
Micro SD (TF) Card: Support up to 32GB

**Troubleshooting**

Problem	Possible Cause	Solution
No power	AC/DC adapter plug not connected to the wall outlet.	Plug to the wall outlet.
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
No sound at all.	Source (Tablet, Mobile Phone, Laptop) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

**Care and maintenance**

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the unit in fire as it will result in an explosion.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall down onto the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the unit as it may get damaged if you are not professional.

**FCC Instructions**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**NOTE:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Limited Warranty**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@midtradinggroup.com](mailto:info@midtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

说明书尺寸: 135x96mm 正反面印刷

135mm

96mm