

SOUNDLOGIC™

YTK-349

WIRELESS ANIMAL SHAPED  
wireless speaker



INSTRUCTION MANUAL  
PLEASE READ ALL INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE USE

Getting Started

- Remove the speaker from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Cute Animal Shape Bluetooth Speaker
- USB Charging Cable
- Instruction Manual

Key Features

- Cute Animal Shape Bluetooth Speaker
- Small size with rich, clear and quality sound
- Connect & stream wireless music anytime, anywhere
- Built-in mic for hands free calls
- Built-in rechargeable battery
- Great gift for any occasion
- USB recharge cable included
- Lanyard included


SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.

2

- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Description of Parts

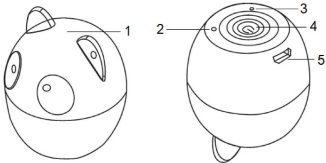

|   |   |
|---|---|
| 1 | Speaker                                   |
| 2 | LED indicator                             |
| 3 | Built-in mic                              |
| 4 | MF (Power On/Off/Play/Pause/Phone) button |
| 5 | Charging port                             |

INSTRUCTIONS FOR USE

Charging Instructions

- The Bluetooth Speaker comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery

3

- fully. Only use the supplied USB Cord to charge the Bluetooth Speaker. Please charge for 1-2 hours.
- Connect the USB charging cable to a computer USB port or other suitable charging source and the Micro USB plug to the charging port of the device. The Red LED light turns on while the device is charging. It takes 1-2 hours for the unit to fully charge. When the battery is fully charged, Red LED light will turn off.

Turning on/off the device

Press and hold the MF button for 2-3 seconds to turn on/off the device

Pairing your device with the Speaker –

Your Bluetooth Speaker can stream wireless audio from any Bluetooth enabled device within the range of 27-33 Feet. Simply follow the below steps.

- Turn ON the speaker. You would hear an indication tone, and Blue LED light will flash rapidly, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "SL ADORABLES" – Pair it with this device.
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, you will hear another indication tone, and Blue LED will stay on.
- You can now stream wireless music on your speaker through your source device.

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

4

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

9

| Function | Operation     | Button   |
|----------|---------------|--|
| Pause    | Playing music | Short press the MF button once will pause the music  |
| Play     | Pausing       | Short press the MF button once will resume the music |

(Note: Besides play/pause, you will need to control through your source device for volume increase/decrease and next/previous track.)

Making a call with the Bluetooth Headphones in Bluetooth mode

Basic operation

| Function      | Operation     | Button  |
|---------------|---------------|---|
| Answer a call | Incoming Call | Short press the MF button once to answer an incoming call |
| End a call    | Incoming Call | After your phone conversation, short press the MF button. |

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tone maybe vary depending on your mobile phone.

Using the Wireless Shutter Remote

1. Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker. Short press the MF button twice for changing to Wireless Shutter Remote.
2. Adjust your device to camera mode and then press the MF button once each time to take photo.
3. Short press the MF button twice for changing back from Shutter to Music mode.

5

Tips!!

When the speaker is not in use, turn it OFF in order to save the battery power.

Specifications –

Bluetooth® Version: 4.2+EDR  
Wireless Streaming Range Distance: 27-33 Feet  
Speaker output: 2W  
Size: 1.68"L x 1.68"D x 1.89"H (Cat Shape)  
1.68"L x 1.68"D x 1.81"H (Dog Shape)  
1.68"L x 1.68"D x 1.89"H (Panda Shape)  
1.68"L x 1.68"D x 2.40"H (Rabbit Shape)

Weight: 1.3 Oz approx.

Power Input: DC 5V

Charging Time: about 1-2 hours

Play time: up to 1 hour (max. volume)

Built-In Rechargeable Battery: 3.7V / 150mAh

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

Troubleshooting

| Problem          | Possible Cause   | Solution  |
|------------------|--|---|
| Low sound level  | Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.  | Adjust source volume.   |
| No sound at all. | Source (Tablet, Mobile Phone, Laptop.) turned off.<br>Speaker turned off.<br>Volume turned down source.<br>Media paused on source. | Turn the source on.<br><br>Turn the speaker on.<br>Adjust volume source.<br>Play media from source. |

Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.

6

- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

8

size: 64x90mm

90mm

64mm

10