

wireless speaker

YTK-388



Getting Started

- Remove the speaker from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Wireless Speaker with Fabric Grill
- Carabiner
- USB rechargeable cable
- Instruction Manual

Key Features


- PORT – Fashionable Wireless Speaker with high quality fabric speaker grill
- Works with Bluetooth enabled devices including iPhone, iPad, Android and more for listening to music and hands-free speaker phone
- Easily mounts via included carabiner
- Speaker recharges via included USB cable

SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

02

Description of Parts

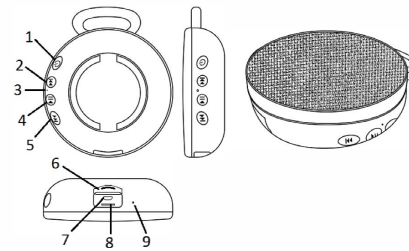

1	Mode/ON/OFF Button
2	Skip Forward/Volume Increase Button
3	LED Indicator
4	Play/Pause/Phone Button
5	Skip Backward/Volume Decrease Button
6	Rubberized Cover
7	Charging Port
8	Micro SD (TF) Card Slot (Micro SD Card Not Included)
9	Built-in Mic

INSTRUCTIONS FOR USE

Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

03

It takes 1-2 hours to fully charge the speaker. Once the speaker is fully charged, LED Light would turn OFF.

It is recommended to fully charge the speaker before its first use.

Turning ON/OFF the Speaker –

Before Turning ON the speaker, please ensure that it is fully charged. Press and hold the ON/OFF button 2-3 seconds to turn on/off the unit.

Connect using Bluetooth Technology

- Press and hold the ON/OFF button 2-3 seconds to turn on. You would hear an indication tone and Blue LED would flash rapidly, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "SL PORT" – Pair it with this device.
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, you will hear another indication tone, and Blue LED stays on.
- You can now stream wireless music on your speaker through your source device.

Talking using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.
Reject Incoming call	Incoming Call	Press and hold the Phone button for 2 seconds
End Call	Incoming Call	After your phone conversation, short press the Phone button
Increase Volume	During a call	Press and hold the Volume Increase button to increase the volume
Decrease Volume	During a call	Press and hold the Volume Decrease button to decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

04

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press and hold the Volume Increase button to increase the volume
Decrease Volume	Playing music	Press and hold the Volume Decrease button to decrease the volume
Pause	Playing music	Short press the Play/Pause button will pause the music
Play	Pausing	Short press the Play/Pause button will resume the music
Previous track	Playing music	Short press the Skip Backward button will return you to the previous track
Next track	Playing music	Short press the Skip Forward button will take you to the next track

(Note: An Indication tone will alert you when the volume is adjusted to either minimum or maximum level.)

Stream music from Micro SD (TF) Card –

- Turn ON the speaker.
- Insert the Micro SD (TF) Card preloaded with songs into the Micro SD (TF) Card Slot, speaker would automatically start playing songs from the Micro SD (TF) Card.
- Note: Micro SD Card not included.
- To Skip Track Forward – Short press the Skip Forward button.
- To Skip Track Backwards – Short press the Skip Backward button.
- To Pause the Track – Short press the Play/Pause button.
- To Play the Track – Short press the Play/Pause button.
- Long press the Volume Increase button to increase the volume or Volume Decrease button to decrease the volume.

Tips!!

- Short press the "Mode button" to switch different functions of the speaker between – Bluetooth / Micro SD (TF) Card.
- When the speaker is not in use, turn it OFF in order to save the battery power.

05

Specifications –

Bluetooth® Version: 4.2
 Wireless Streaming Range Distance: 26-33 Feet
 Speaker output: 3W
 Size: 1.4-1/8" x W3-1/2" x H1-5/8"
 Weight: 4.7 oz approx.
 Power Input: DC 5V
 Charging Time: 1-2 hours
 Play time: up to 1 hour (max. volume), or 2 hours (moderate volume)
 Built-in Rechargeable Battery: 3.7V / 300mAh
 Micro SD (TF) Card: Support up to 32GB
 (Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop,) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.

06

- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

The device has been evaluated to meet general R₀ exposure requirement. The device can be used in portable exposure condition without restriction.

- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.

07

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

08

100mm

正反面黑白印刷 80g书写纸

SIZE: 100 X 90MM

90mm