正面

Hayes Street Eco-Friendly Wireless Power Bank

Instruction Manual PWB263

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL


In the Box

- Hayes Street Eco-Friendly Wireless Power Bank (x1)
- Power Cable (x1)
- User Manual (x1)

Safety Precautions

- This product is NOT a toy, keep away from children and pets.
- . Only use the device according to the instructions in this manual.
- Never use the device for anything other than its intended purpose
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or power cable to extreme temperatures (heat or cold), open flames, humid or wet conditions
- Do not submerge in water. Do not use in a location where the device or power cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or power cable is damaged. If device or power cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.

Product

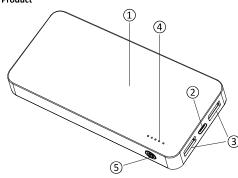

- Wireless Charging Surface
- Type C Port
- USB-A Output
- LED Indicators
- ON/OFF Button

Instructions

Charge the power bank fully before usage

Charging the Power Bank

. Connect the provided power cable to a power source and to the Type C port on the power bank. The LED indicator will flash while the power bank is in charging and stay solid when the power bank is fully charged.

Charging mobile phones and other electronic devices

- Using the cable of the device you wish to charge, connect the charging cable to your mobile phone/device with the appropriate connector and the USB-A end to the USB-A output/Type C port of the power bank.
- The LED indicator will illuminate when charging.
- Remove the charging cable from your mobile phone/device when it is fully charged.

130 mm

反面

Wireless Charging Instruction

- Press the ON/OFF button to turn on the wireless charging function. The LED Indicator will glow GREEN indicating the power bank is in wireless charging
- Place a wireless charging enabled device on the charging surface, the device will begin to charge automatically. The LED will glow RED while device is

Note: If the LED indicator is flashing when the wireless charger is in use, either the device is NOT wireless charging enabled, or there is an object between the device and charging pad interfering with the charging process.

Tech Specifications

- Battery Capacity: 10000mAh/3.7V/37Wh
- Type C Input: DC 5V/2A
- Type C Output: DC 5V/2.4A (Max)
- USB-A Output: DC 5V/2.4A (Max)
- Wirelss Output: 10W

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FC.

mm

8