


Wireless Power Bank

MSL-W005Q

Instruction Manual

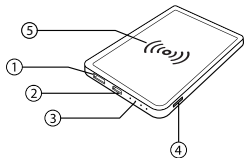

1. USB Output
2. Micro USB Input
3. Capacity Indicator
4. ON/OFF Button
5. Wireless Charging Pad

What's included:

- 1 x 3,000 mAh Power Bank
- 1 x USB to Micro-USB charging cable
- 1 x Instruction Manual

Tech Specifications

- 3000mAh poly-li battery
- Input power: 5V/1A
- Output power: 5V/1A
- Wireless Output: 1A/5W

LED Indicators:

- ON/OFF Button: Press Once to check LED indicators; Press the button twice to turn OFF power bank.

LED Lights	●●●●	●●●○	●●○○	●○○○
Capacity Remaining	100%	75%	50%	25%

Instructions:

1. Charging the power bank:
 - a. Using your mobile phone's USB adapter, connect a USB cable to your phone's USB adapter. Using the Micro-USB connector, connect the other end of the USB cable to the input port on the power bank. Plug the USB adapter into the outlet to begin charging.
 - b. Using your computer, connect a USB cable to a USB outlet on your computer. Using the Micro-USB connector, connect the other end of the USB cable to an input port on the power bank. Make sure the computer is on to begin charging the power bank.
2. Charging mobile phones and other electronic devices:
 - a. The power bank has a USB output port which has the maximum output current of 1A.
 - b. Connect the Micro-USB cable to your mobile phone/device using the appropriate connector. Connect the other end of the power bank. Your mobile phone/device should display the status of charging.
 - c. Remove the USB cable from your mobile device when it is fully charged.
3. Charging Mobile phones and other electronic devices with wireless output.
 - a. To use the wireless charging mode the mobile device needs to be a wireless device. If necessary, enable wireless charging in the settings of your mobile device. Next simply stick your device to the wireless charging pad and charging will start automatically.

SAFETY PRECAUTIONS:

WARNING—When using this product, basic precautions should always be followed,

1. Read all the instructions before using the product.
2. Charge the power bank fully before initial use. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
3. To reduce the risk of injury, close supervision is necessary when the product is used near children.
4. Do not expose the device to moisture.
5. Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
6. Do not use the device if damaged or modified.
7. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
8. Do not disassemble the device. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
9. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 212°F may cause explosion.
10. Have servicing performed by a qualified repair person using only identical replacement parts.
11. This will ensure that the safety of the product is maintained.
12. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time.

13. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating. Please remove attachments from the phone before charging on this device.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- * Warning:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.