


# Wireless power bank

## Instruction Manual MSL-M2011Q, SM-2826

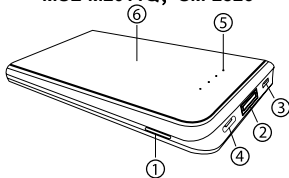

### Features:

1. Powerbank ON/OFF Button
2. USB Output
3. Micro-USB Input
4. Type-C Input
5. LED Indicator
6. Wireless Charging Surface

### What's included:

- 1 x 4,000 mAh Wireless Power Bank
- 1 x USB to Micro-USB Charging Cable
- 1 x Instruction Manual

### Tech Specifications

- 4000mAh/3.7V/14.8Wh
- Micro-USB input:DC 5V/2A
- Type-C input:DC 5V/2A
- USB A output:DC 5V/2A
- Wireless output:5W

### LED Indicators

- Press the Powerbank ON/OFF Button(1) once to view the remaining power capacity.
- Press the button twice to turn OFF.

Number of LEDs	●●● Blue	●●● Blue	○○○ Blue
Capacity Remaining	about 100%	about 66%	about 34%

### Instructions:

#### 1. Charging the Powerbank:

- Charge the powerbank fully before usage.
- Connect the provided charging cable to a power source and to the micro-USB Input port(3) or Type-C Input(4) on the powerbank.
- Once connected the LED Indicator(5) will begin to flash BLUE color when charging, once fully charged, BLUE LED will stop flashing.

#### 2. Charging Electronic Devices with the Power Bank:

- Connect the charging cable to your mobile phone/device using the appropriate connector.
- Connect the USB part of the cable to the USB Output(2) port, the LED Indicator will illuminate BLUE when charging.
- Remove the charging cable from your mobile device when it is fully charged.

#### 3. Charging Electronic Devices with the Wireless Charging:

- Press the Powerbank ON/OFF button(1) to turn on the wireless charging function,
- LED indicator will glow green when in standby mode.
- Place wireless charging supported mobile device on the wireless charging surface(6).
- The device will automatically begin to charge, LED will glow red when device is charging.

*\*\* Note: When wireless charging, if the LED indicator will flashes the device is either NOT a wireless charging device or there is an object between the device and charging surface interfering with the charging process.*

### SAFETY PRECAUTIONS:

- **WARNING-**When using this product, basic precautions should always be followed:
  1. Read all the instructions before use.
  2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
  3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
  4. The unit will only achieve full performance after 2 or 3 completed charge and discharge cycles.
  5. To reduce the risk of injury, close supervision is required when the product is used near children.
  6. Do not expose the device to moisture.
  7. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury
  8. Do not use the device if damaged or modified.
  9. Do not disassemble the device. For repairs, seek a qualified service professional. incorrect reassembly may result in a risk of fire or injury.
  10. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion.
  11. Ensure that qualified service professionals use only identical replacement parts to ensure product safety.
  12. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating.
  13. Please remove any attachments from the phone before charging on this device, attachments can interfere with wireless charging and lead to over heating.

#### FCC Informat on

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.