


Glisten 4000 mAh Light Up Wireless Powerbank Instruction Manual 7121-52

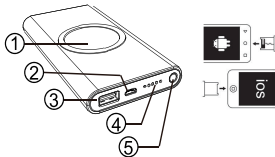

Features:

1. Wireless Charging Pad
2. Micro USB Input
3. USB Output
4. LED Indicator
5. ON/OFF Button

What's included:

- 1 x 4000 mAh wireless Power Bank
- 1 x 2-in-1 charging cable (see above diagram)
- 1 x Instruction Manual

Tech Specifications

- 4000 mAh/3.7V/14.8WH
- USB Input: DC 5V/2A
- USB Output: DC 5V/2A
- Wireless Output: 5V/1A

LED Indicators:

- ON/OFF Button: Press once to view the remaining power capacity.

Light Panel:

- Will illuminate whenever the power bank charges or discharges.

Instructions:

1. Charging the power bank:

- a. Charge the power bank fully before usage.
- b. Using 2-in-1 charging cable, insert the USB A port into a certified USB AC adapter or USB port of a computer, insert the 2-in-1 tip (the side with pins upwards) into power bank micro input. Then charge begins.
- c. When Charging LED Indicator will flash BLUE, and will stop when once fully charged.

2. Charging mobile phones and other electronic devices:

- a. Connect the 2-in-1 cable to your mobile phone/device. If Android device, the tip with pins upwards; If iOS device, the tip without pins upwards. Connect the other end to the power bank. Device will begin to charge automatically.
- b. Remove the USB cable from your mobile device when it is fully charged.

3. Charging Mobile phones and other electronic devices with wireless output.

- a. Press and hold the ON/OFF button, LED indicator will show Green once the powerbank is in wireless charging standby mode.
- b. Place wireless charging enable device on Wireless Charging Pad. The device will begin to charge, LED indicator will turn RED when charging.

- *Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.*

SAFETY PRECAUTIONS:

WARNING—When using this product, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. Charge the power bank fully before initial use. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
3. To reduce the risk of injury, close supervision is necessary when the product is used near children.
4. Do not expose the device to moisture.
5. Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
6. Do not use the device if damaged or modified.
7. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
8. Do not disassemble the device. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
9. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 212°F may cause explosion.
10. Have servicing performed by a qualified repair person using only identical replacement parts.
11. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time.
12. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating. Please remove attachments from the phone before charging on this device.

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



MADE IN CHINA