High Sierra Kodika IPX7 **Outdoor Speaker**

Instruction Manual XJ0820(8053-08)

- 1. Micro-USB Input
- 2 Vol +/Next Track
- Power ON/OFF
- Vol-/Previous Track
- Bluetooth LED indicator
- 6 Red LED
- 7 Green LED
- 8. Wireless charging receiver

What's included:

- 1 x Bluetooth Speaker (8053-08)
- 1 x USB to Micro-USB Charging Cable
- 1 x Instruction Manual

Tech Specifications

- Playing time: up to12hrs at max volume
- Charging time: up to 8hrs
- Pairing Name: "High Sierra IPX7"
- Capacity: 5000mAh
- Micro-USB Input: DC 5V/1000mA
- Wireless Charging Input: 5V/1A(5W)

Instructions:

Be sure to fully charge the speaker before using for the first time.

1. Charging the Speaker

- . Connect the provided charging cable to a power source and to the Micro USB port 1 on the speaker, or To wirelessly charge the speaker, place the wireless charging input surface(8) onto a wireless charging pad.
- Red LED light when charging the speaker. and light turn to Green when the speaker is fully charged Red/Green LED will turn off once speaker unplugged or remove it from a wireless charging pad.
- . Remove the USB cable from your mobile device when it is fully charged.

2. Bluetooth® Setup:

- Press and hold Speaker ON/OFF Button(3) to turn ON the speaker, Bluetooth LED indicator(5) will flash BLUE.
- Turn on the Bluetooth function on mobile device. Select "High Sierra IPX7 pairing name, LED will turn solid BLUE if successfully paired.
- · Speaker will automatically pair if the mobile device has been paired before.
- Press and hold Speaker ON/OFF Button(3) to turn off the device.

3 Using the Speaker

- . When receiving a phone call, press ON/OFF button to answer and again to hang up.
- · Double press to redial the last call.
- "Vol+/Next track":
- Long press next track. Short press - increase volume.
- "Vol-/Previous track": Long press - previous track Short press - reduce volume

SAFFTY PRECAUTIONS:

- · WARNING-When using this product, basic precautions should always be followed:
- 1 Read all the instructions before use
- 2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
- 3. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time
- 4. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles. 5. To reduce the risk of injury, close
- supervision is necessary when the product is used near children.
- Do not expose the device to moisture. 7. Do not use the device in excess of its
- output rating. Overload outputs above rating may result in a risk of fire or injury.
- 8. Do not use the device if damaged or Damaged or modified batteries may exhibit
- unpredictable behavior resulting in fire. explosion or risk of injury. 10 Do not disassemble the device. For
- repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
- 11. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion.
- 12. Ensure that qualified service professionals use only identical replacement parts to ensure product safety
- 13. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating. Please remove attachments from the phone before charging on this device.

ECC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

- (2) this device must accept any interference received. including interference that may cause undesired
- operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device. pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

harmful interference in a residential installation.

- -- Regrient or relocate the receiving antenna.
- interference by one or more of the following measures: -- Increase the separation between the equipment and -- Connect the equipment into an outlet on a circuit
- different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV
- technician for help.

To maintain compliance with FCC's RF Exposure auidelines.

This equipment should be installed and operated with minimum 20cm distance between the radiator your body: Use only the supplied antenna

MADE IN CHINA