 
Bluetooth Speaker Wireless Powerbank

Instruction Manual



Functions:

- 1. Wireless Charging LED 2. Battery Capacity LED
- Powerbank ON/OFF
- 4. Micro-USB Input
- 5. USB Output
- 6. Vol-/Previous Track
- 7. ON/OFF
- 8. Vol +/Next Track
- Speaker LED Indicator
- 10. Wireless Charging Surface
- 11. Wireless Charging Receiver

What's included:

1 x Bluetooth Speaker

1 x USB to Micro-USB Charging Cable 1 x Instruction Manual

Tech Specifications

- · Playing time: up to 30hrs at max volume
- Charging time: up to 3hrs
- · Pairing Name: "Power Speaker,
- · Battery: 5000mAh
- Micro-USB Input: 5V/2A
- USB Output: 5V/2A
- Wireless Input: DC 5V/800mA
- · Wireless Output: DC 5V/1000mA 5W

Instructions:

(Be sure to fully charge the speaker before using for the first time).

1. Charging the Speaker

- . Connect the provided charging cable to a power source and to the micro USB port on the speaker (4). The Battery Capacity LED indicator light
- will flash BLUE when charging and will turn solid BLUE when fully charged.

2 Charging mobile phones and other electronic devices:

- · Connect the charging cable to your mobile phone/device using the appropriate connector. Connect the USB A Part of the cable into the USB Output(5). Battery Capacity LED Indicator will illuminate when charging.
- · Remove the USB cable from your mobile device when it is fully charged

3. Wireless Charging:

- . Press the Powerbank ON/OFF button to turn on the wireless charging function.
- Wireless Charging LED(1) will glow green Place wireless charging supported mobile
- device on top charging surface, LED will glow red when device is charging
- . The wireless charging supported device will begin to charge automatically, when the device is fully charged, the wireless charging LED (1) will keep RED and Battery Capacity LED (2) keep BLUE. The two LEDs will turn OFF when the device is removed away from the Wireless Charging Surface (10) and let idle for 30s or more.
- . To Wireless Charge the power bank, place Wireless Charging Receiver(11) on a wireless charging surface, Wireless Charging LED (1) will keep GREEN, Battery Capacity LED (2) will flash BLUE when charging and keep BLUE once fully charged.

4. Bluetooth® Setup:

- Do not use the device in excess of its Press and hold Speaker ON/OFF Button(7) to turn ON the speaker. Bluetooth LED indicator(9) will flash BLUE.
- . Turn on the Bluetooth function on mobile device. Select "Power Speaker" pairing name. LED will turn solid BLUE if successfully paired.
- · Speaker will automatically pair if the mobile device has been paired before.
- Press and hold Speaker ON/OFF Button(7) to turn off the device

5. Playing Music:

- "Vol+/Next track": Long press - next track.
- Short press increase volume "Vol-/Previous track":
- Long press previous track Short press - reduce volume

SAFFTY PRECAUTIONS:

- · WARNING-When using this product, basic precautions should always be followed:
- Read all the instructions before use.
- 2. Never store or use this product in temperatures below 32°F(0°C) or above
- 115°F(45°C). 3. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for
- more than 7 hours at a time 4. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
- 5. To reduce the risk of injury, close supervision is necessary when the product is used near children.
- 6. Do not expose the device to moisture.

- output rating. Overload outputs above rating may result in a risk of fire or injury. 8. Do not use the device if damaged or
- modified.
- Damaged or modified batteries may exhibit unpredictable behavior resulting in fire. explosion or risk of injury.
- 10 Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
- 11. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause
- 12. Ensure that qualified service professionals use only identical replacement parts to ensure product safety
- 13. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating. Please remove attachments from the phone before charging on this device.

ECC WARNING STATEMENT

This device complies with part 15 of the ECC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the
- equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/
- TV technician for help.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.