

## Bamboo 10000mAh Dual Port Power Bank with Wireless Charger

### Instruction Manual

#### EPB-BM22

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.**

 
#### In the Box

- EPB-BM22 Bamboo 10000mAh Dual Port Power Bank with Wireless Charger (x1)
- Charging Cable (x1)
- Instruction Manual (x1)

#### Safety Precautions

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual.
- Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or power cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or power cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

#### Product

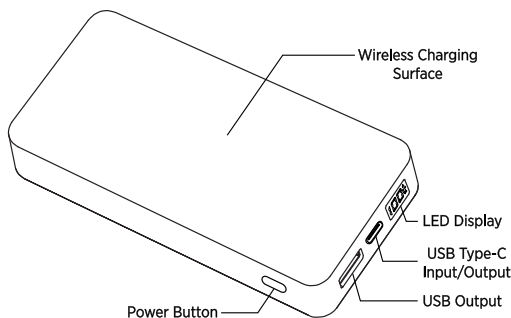


#### Instructions

Charge the power bank fully before using for the first time.


#### Charging the Power Bank

 - Plug the small connector of the included charging cable into the USB Type-C port on the power bank.
- Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The digits in the LED display will flash while power bank is in charging and stop flashing when the power bank is fully charged.
- **Note:** When the power bank is being charged with 18W or above power adapter, the fast charging icon will appear in display.

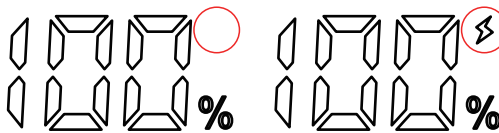


#### Charging Electronic Devices with the Power Bank

 - Using the cable of the device you wish to charge, connect the charging cable to your device with the appropriate connector.
- Connect the other end of the cable to the USB or USB Type-C port of the power bank.
- The power bank will begin to charge automatically.
- The LED display will illuminate when charging.
- Remove the cable from your mobile device when it is fully charged.
- **Note:** When the charged device support fast charging, the power bank will charge the device with up to 22.5W power. The fast charging icon will appear in display indicating that the power bank is in fast charging mode.

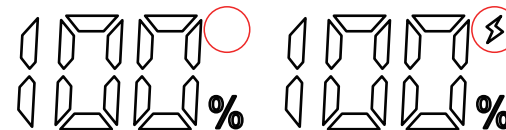

#### Using Wireless Charging

 - Press the Power button. The wireless charging icon in display will flash for 3 times and disappear indicate the wireless charging is in standby mode.
- Place a wireless charging enabled mobile device on the wireless charging surface, the mobile device will begin to charge automatically. The wireless charging icon will appear in display to indicate that your device is charging properly.

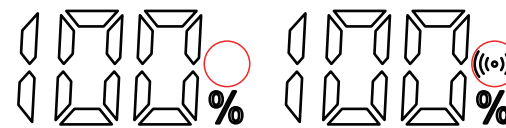

- If your device does not begin to charge, try repositioning your device on the wireless charging surface. You may need to remove the case of your device to charge properly.
- Remove your device from the wireless charging surface when it is fully charged.


正面

240 mm

120 mm

#### Note:

- If the wireless charging icon is flashing in display when the wireless charging is in use, either the device is NOT wireless charging enabled, or there is an object between the device and charging surface interfering with the charging process.
- When the charged device support fast wireless charging, the power bank will charge the device with up to 15W power. The wireless charging icon and fast charging icon will appear in display indicating that the power bank is in fast wireless charging mode.

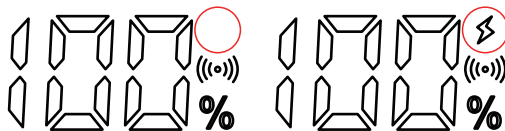 

#### Note on Safety Features:

The wireless charging will automatically power OFF when the wireless charging surface is overheated or when a metal object, such as a coin, is placed on the wireless charging surface. The wireless charging icon will flash in display to warn of automatic shutoff.

#### Tech Specifications

- Battery Capacity: 10000mAh/3.7V/37Wh
- USB Type-C Input: DC 5V/3A, 9V/2A, 12V/1.5A
- USB Type-C Output: DC 5V/3A, 9V/2.22A, 12V/1.67A
- USB Output: DC 5V/3A, 9V/2A, 12V/1.5A
- Wireless Charging Output: 10W (Max)
- Combined Output: DC 5V/3A
- Working Temperature: 32°F - 122°F (0°C - 50°C)

#### FCC Information

This device complies with Part 15 of the FCC Rules.

 
**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



背面

 28.5mm



13MM

FSC 2MM

120 mm