

Front

Einkorn

Touch TWS Earbuds

SKU:EP130
User Guide

Please read this guide carefully before using Einkorn Eco-Friendly TWS Earbuds, and keep it in a safe place for future reference.

① Multi-function sensor
② Charging status indicator
③ Charging port



-1-

Specifications

Bluetooth Version	V5.0
Bluetooth Mode	A2DP1.3/HFP1.6/HSP1.2/AVRCP1.6/D11.3
Bluetooth Frequency	20Hz-20KHz
Bluetooth Range	32.8 feet (10 meters) without obstacles
Battery Capacity	Earbuds: 35mAh each Charging Box: 500mAh
Charging Time	Earbuds: 1 hour each Charging Case: 1.4 hours
Talk/Play Time	2.5 to 3 hours at max volume

Pairing

Remove both earbuds from the charging case. You'll hear a voice prompt in both earbuds that says "Power On" followed by one indicating that the earbuds are paired with each other.

Open the Bluetooth menu on your device and connect to "Einkorn TWS". A voice prompt will say "connected" to indicate that the earbuds are ready to use.

-2-

64mm

Back

Controls


- To answer or make a phone call, press the multi-function sensor once, and again to end the call.
- To play music, press the multi-function sensor ① to pause, and again to resume.
 - Right Earbud
 - Double tap to increase the volume.
 - Triple tap to play the next song.
 - Left Earbud
 - Double tap to decrease the volume.
 - Triple tap to play the previous song.
- To turn off the earbuds, place both back in the charging case. You can also turn them off by pressing the multi-function sensors of both earbuds until you hear the voice prompt "power off".
- To charge the earbuds, place them inside the charging case. The LED indicator will be red when charging, and will turn off when fully charged.

-3-

- To charge the charging case, connect the included USB-C cable to the charging port ③, and plug it into a 5V USB power source.

Caution

- Do not attempt to replace the earbuds' or charging case's battery yourself.
- Do not put the device near extreme heat sources or liquids.
- Use the earbuds within a 32 foot range of the paired device.
- Keep the earbuds away from WiFi routers and other high-frequency devices for the best connection.



MIX
Packaging from
responsible sources
FSC® C161647

-4-

64mm



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.