
Dual Speakers Wireless Charging Desk Clock Instruction Manual MSL- 6019Q

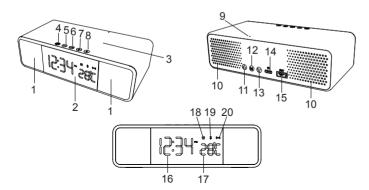

- 1. Speakers
- 2. Display Screen
- 3. Wireless Charging Surface
- 4. Screen Display Brightness Adjustment&ON/OFF
- 5. Previous Music Switch
- 6. Music Pause or Play (FM)
- 7. Next Music Switch
- 8. BT ON/OFF
- 9. Microphone hole
- 10. Speaker Diaphragms
- 11. Clock Setting-Up
- 12. Clock Menu
- 13. Clock Setting-Down
- 14. Type C Input
- 15. USB Output
- 16. Time(or Date)Display
- 17. Temperature Display
- 18. Alarm on Display
- 19. BT Connection on Display
- 20. Wireless Charging on Display

WHAT'S INCLUDED:

- 1 x Dual Speakers Wireless Charging Desk Clock
- 1 x USB to Type C charging cable
- 1 x Instruction Manual

TECH SPECIFICATIONS:

Input power: 5V/3A USB Output: 5V/1A

Wireless Output: 5V/1A 5W

INSTRUCTIONS:

- 1. Press the ON/OFF button. LED display will display the Time and Temperature after warm up.
- 2. Press (M) to choose desired mode (Time/Date/A1/A2/A3 shown below).

To choose a mode, long press $\textcircled{\textbf{w}}$ when the desired mode appears on the screen

$$\downarrow$$
 Time \rightarrow Date \rightarrow A1 \rightarrow A2 \rightarrow A3

3.Press and hold 4 to enter the setting state, and to adjust the setting digit, press and hold the arrow buttons: 2 3 to advance or decrease the digit rapidly.

TIME:

A. Setting range:

• Hour: 1-12 hour or 0-23 hour

Minute: 00--59

B. PM (evening) is indicated by an illuminated dot next to the time (left side). 11.05

DATE:

A. Setting range:

• Month: 1-12

• Day: 1-31

Year: 2000-2099

B. Setting detail: If idle for 15 seconds, the settings menu will changev to the chosen display mode: In the setting state, it will exit the setting state automatically after no operation for several seconds.

- Dp-1:Will return to the time pattern, time/date alternating display.
- Dp-2: The set interface, such as date, time, alarm, etc., will always be displayed.
- Dp-3 :It goes back to the time touch and keeps showing the time.

ALARM:

A.When Alarm is set, an indicator light will illuminate next to the time (right side). 12:05

B.Press "��/�)"/ "�"/"�]" key to stop the sound.If Alarm is not silenced, it will turn off after 60 seconds and reset for the next day.

TEMPERATURE:

A. At start up, the current temp is automatically detected and displayed. Default temp unit is 0°C -50°C (32°F - 122°F). Temp will automatically update every 60 seconds.

B. To switch to Fahrenheit/Celcium, press the down arrow button for 2 seconds.

C. The temperature will always display except for Power-save mode (ON).

POWER-SAVING:

Turn on/off the power-saving function by pressing the "DOWN" button.(ON with display oNSd and OFF shows --Sd). Press twice to switch Standby or Power saving status.

1. Speaker

- a. Long press "①", blue tooth stands by with "\$" flashing on display, then on your phone find "BT Speaker" and connect it, now "\$" stops flashing and stays bright, meaning the speakers are ready to play music or make calls on your phone.
- b. Press " \ominus " and " \oplus " for previous song and next song, press " \odot " to pause or play.

c. With no operation after blue tooth stands by, it will automatically be off in 5 mins.

2. FM

- a. Long press "③", blue tooth stands by with " \$ " flashing on display, Then double-click "" to enter FM mode.
- b. Click "😂" to enter the automatic frequency search. After the automatic frequency search is completed, the channel with good quality will be saved automatically. Please press " \ominus " and " \bigodot " to tune in.(Note: When bluetooth is on, you don't need to connect the phone.)
- c. Long press "\(\)" and "\(\)" to adjust the volume. To turn off FM, turn off Bluetooth directly. (It is recommended not to use wireless charging when FM is in use, as the mobile phone will interfere with the channel and affect the FM effect).

3. Brightness control

Please press "" to adjust the brightness. There are four modes for adjustment.

EXTERNAL POWER-OFF PROTECTION:

If power supply is inerrupted, clock function will keep time though the LED display will turn off and buttons will be unresponsive. Once powered is restored, the time will resume appropriately.

SAFETY PRECAUTIONS:

WARNING-When using this product, basic precautions should always be followed, including the following:

- 1. Do not use on an aircraft or in a hospital.
- 2. To reduce the risk of injury, close supervision is necessary when the product is used near children.
- 3. Do not expose the device to any moisture.
- 4. Do not use the device in excess of its output rating. Overloaded outputs above rating may result in a risk of fire or injury.
- 5. Do not use the device if damaged or modified. Damaged or modified device may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- 6. Do not disassemble the device. Seek assistance from a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
- 7. Do not expose the device to fire or excessive temperature. Exposure to extreme heat may cause explosion.
- 8. Have servicing performed by a qualified repair person using only identical replacement parts to ensure that the safety of the product is maintained.
- 9. This device is not a toy.
- 10. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time.
- ***KEEP OUT OF REACH OF CHILDREN***

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsi -ble for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception ,which can be determined by turning the rquipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver si connected.
- -Consult the dealer or an experienced radio/ TV technician for help.

WARNING

Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

FC MADE IN CHINA

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technic ian for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.