 
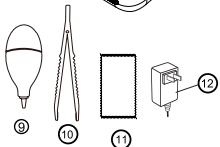 
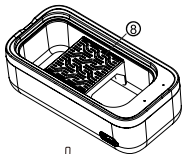 


Ultrasonic Cleaner with Wireless Charging Sanitizer

Instruction Manual 7143-43



Functions:

1. Wireless Charging Surface
2. Wireless Charging LED
3. UV-C Sanitizer Button / LED
4. Ultrasonic Cleaner Button / LED
5. DC Input Port
6. UV-C Lights
7. LED Lights
8. Accessory Stand
9. Mini Air Blower
10. Tweezers
11. Cleaning Cloth
12. AC Adapter
13. Power Connecting Dots

What's included:

- 1 x Ultrasonic Cleaner
- 1 x UL Listed AC adapter
- 1 x Instruction Manual
- 1 x Accessory Stand
- 1 x Mini Air Blower
- 1 x Tweezers
- 1 x Cleaning Cloth

Tech Specifications

- AC Adapter Input: 12V/2A
- Rated Power: 15W
- Tank Capacity: 500ML
- Wireless Output: 5W/7.5W/10W

Instructions:

1. Wireless Charging Mobile Devices:

- Connect the provided UL Listed AC adapter cable to the DC input port(5) of the charging station, then connect the AC adapter to a power source. Wireless charging LED indicator (2) will flash BLUE twice and turn OFF, when the device is in wireless charging standby mode.
- Place the wireless charging supported mobile device on the wireless charging surface(1), wireless charging LED indicator will glow BLUE when device is charging.
- Phone will begin to charge automatically,

- Remove the device once fully charged.

**** Note:** When wireless charging, if the wireless charging LED(2) flashes BLUE the device is either not a wireless charging device or there is an object between the device and charging surface interfering with the charging process.

2. Using the UV Sanitizer Function:

- Lift the lid and place the items desired to be sanitized into the tank, then close it.
- Touch the UV-C Sanitizer Button(3) to turn ON the UV lights, UV-C Sanitizer LED (3) will glow WHITE when UV Sanitizer has started.
- The UV lights/LED will turn off by itself after 5 minutes once sanitizer is completed or touch the UV-C Sanitizer Button(3) to manually turn off UV lights.

**** DO NOT LIFT UP THE LID ONCE THE SANITIZING PROCESS HAS STARTED:** The UV LED will automatically shut off when you open the lid during sanitizing process.

3. Using the Ultrasonic Cleaner Function:

- Lift the lid and fill the tank with water to the max level mark, DO NOT exceed the max water level.
- Be sure to keep the power connecting dots(13) dry before usage.
- Place the accessory(Jewelry/Glasses/ Knife/Fork..) desired to be cleaned into the tank.
- **** Please confirm the accessory is washable before placing inside the tank.**
- Touch the Ultrasonic Cleaner Button(4) to turn ON the Ultrasonic Cleaner LED, Ultrasonic Cleaning LED(4) will glow WHITE when Ultrasonic Cleaning has started.
- The Ultrasonic Cleaner/LED will turn itself OFF after 3 minutes once cleaning is

completed or touch the Ultrasonic Cleaner Button(4) to manually turn OFF cleaner.

- After cleaning, you can take out your items using the provided tweezers(10) then use the cleaning cloth(11) to dry it off. Or use the provided mini air blower to air drying your accessory.
- Use the accessory stand(8) if needed by placing your accessories on the stand surface to clean accordingly. Once cleaning is done, pour water out of tank and dry it up.
- The ultrasonic cleaner function can be turn on at the same time as the UV sanitizer function.

**** Note:** While using the Ultrasonic Cleaner function the wireless charging function will NOT turn on until cleaning is complete.

SAFETY PRECAUTIONS:

- WARNING-When using this product, basic precautions should always be followed:
 1. Read all the instructions before use.
 2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
 3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
 4. To reduce the risk of injury, close supervision is required when the product is used near children.
 5. Please not expose the device to moisture.
 6. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury
 7. Do not use the device if damaged or modified.
 8. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, or explosion or risk of injury.
 9. Do not disassemble the device. For

repairs, seek a qualified service professional. incorrect reassembly may result in a risk of fire or injury.

10. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion.
11. Ensure that qualified service professionals use only identical replacement parts to ensure product safety.
12. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating.
13. Please remove any attachments from the phone before charging on this device.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- * Warning:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING:
Direct ultraviolet light could irritate eyes and skin.
Do not look directly into the light.
Do not ultrasonic clean electronic devices.
EPA Est. NO.: 97922-CHN-1
23.4MM



MADE IN CHINA

FCC WARNING

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body:
Use only the supplied antenna.