


10000mAh Wireless Power Bank

Instruction Manual
MSL-W167(7003-66)

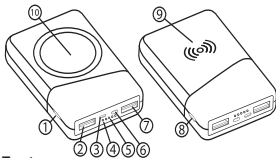

Features:

1. Micro-USB Input Port
2. USB Output 1
3. Lightning Input Port
4. Wireless Charging LED Indicator
5. LED Indicator
6. ON/OFF Button
7. USB Output 2
8. Type-C Input Port
9. Wireless Charging Input Surface
10. Wireless Charging Output Surface

What's included:

- 1 x Covert 10000 mAh Wireless Power Bank
- 1 x USB to Micro-USB Cable
- 1 x Instruction Manual

Tech Specifications

- Capacity: 10000mAh/3.7V/37Wh
- Micro-USB Input: DC 5V/2A
- Type-C Input: DC 5V/2A
- 5-pin Input: DC 5V/1A
- Wireless Input: DC 5V/0.8A
- USB Output 1/2: DC 5V/2A (Max)
- Wireless Output: 5V/1A

LED Indicators

- ON/OFF Button(6): Press once to view the remaining power capacity.

| | | | | |
|--------------------|------------|-----------|-----------|-----------|
| Number of LEDs | ●●●● Blue | ●●●● Blue | ●●●● Blue | ●●●● Blue |
| Capacity Remaining | about 100% | about 75% | about 50% | about 25% |

INSTRUCTIONS:

1. Charging the Powerbank:

- Charge the powerbank fully before usage.
- Connect the provided charging cable to a power source and to the micro USB port on the powerbank(1).
- Once connected the LED Indicator will begin to flash blue when charging, once fully charged LED will stop flashing

**** Powerbank can be charged using a Type-C , lightning or 2-in-1 cable as well by connecting either charging cable to a power source and to the appropriate input port (These cables are NOT included).**

2. Wirelessly Charging the Powerbank:

- To wirelessly charge the power bank, place the wireless charging input surface(9) of the power bank onto a wireless charging surface, LED indicator will flash BLUE when charging.

3. Charging mobile phones and other electronic devices:

- Connect the charging cable to your mobile phone/device using the appropriate connector. Connect the USB part of the cable into the USB Output 1 or 2(2/7). LED Indicator will illuminate BLUE when charging.
- Remove the USB cable from your mobile device when it is fully charged.

4. Charging Mobile phones and other electronic devices with wireless output:

- Press the Powerbank ON/OFF button(6) to

turn on the wireless charging function. Wireless Charging LED Indicator(4) will show Green once the Power bank is on wireless charging standby mode.

- Place wireless charging supported mobile device on the charging surface(10), LED (4) will glow RED when device is charging.
- ** Note: When wireless charging, if the LED indicator will flashes the device is either NOT a wireless charging device or there is an object between the device and charging surface interfering with the charging process.**

SAFETY PRECAUTIONS:

- WARNING-When using this product, basic precautions should always be followed:
 1. Read all the instructions before use.
 2. Never store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).
 3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
 4. The unit will only achieve full performance after 2 or 3 completed charge and discharge cycles.
 5. To reduce the risk of injury, close supervision is required when the product is used near children.
 7. Do not expose the device to moisture.
 8. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury.
 9. Do not use the device if damaged or modified.

10. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.

11. Do not disassemble the device.

For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.

12. Do not expose the device to fire or excessive temperatures. Exposure to fire or temperatures above 104°F (40°C) may result in explosion.

13. To ensure product safety, ensure that qualified service professionals use only identical replacement parts.

14. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating. Please remove attachments from the phone before charging on this device.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator your body. Use only the supplied antenna

MADE IN CHINA