


Swift Universal 10000 mAh Wireless Power Bank Instruction Manual

7121-63

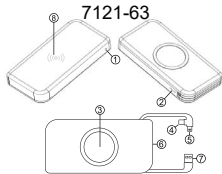

Features:

1. ON/OFF button
2. LED Indicator
3. Wireless Output Pad
4. Type C Output
5. 2-in-1 Output
6. Micro-USB Input
7. USB A Input
8. Wireless Input Pad



What's included:

- 1 x 10000 mAh Power Bank
- 1 x Instruction Manual

Tech Specifications

- Micro Input: 5V 2A
- 2-in-1 Output: 5V 2A
- Type C Output: 5V 2A
- Wireless Input: 5V 0.8A
- Wireless Output: 5V 1A

LED Indicators:

- ON/OFF Button: Press once to view the remaining power capacity.
- LED indicator will show Green once the Power bank is on wireless charging standby mode.

Instructions:

1. **Charging the power bank:**
 - a. Charge the power bank fully before usage.
 - b. Insert the USB A input(7) into a certified USB AC adapter or USB port of a computer, the charge will begin.
 - c. LED indicator will flash BLUE when charging, and will stop once fully charged.
 - d. To Wireless Charge the power bank, place the power bank(8) on a wireless charging pad /surface, power bank will flash BLUE when charging and will stop once fully charged.

2. **Charging mobile phones and other electronic devices:**

- a. Connect the 2-in-1 Output(5) or Type C Output(4) to your electronic device, it would be charged automatically.
Android device: The tip with pins upwards;
iOS device: The tip without pins upwards.
- b. Remove the USB cable from your mobile device when it is fully charged.

3. **Charging Mobile phones and other electronic devices with wireless output.**

- a. Place wireless charging enable device on Wireless Charging surface(3). The device will begin to charge with LED indicator will turn RED.

* Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.

SAFETY PRECAUTIONS:

- WARNING-When using this product, basic precautions should always be followed:
 1. Read all the instructions before use.
 2. Never store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).
 3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
 4. The unit will only achieve full performance after 2 or 3 completed charge and discharge cycles.
 5. To reduce the risk of injury, close supervision is required when the product is used near children.
 6. Do not expose the device to moisture.
 7. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury. Do not use the device if damaged or modified.
 8. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
 9. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
 10. Do not expose the device to fire or excessive temperatures. Exposure to fire or temperatures above 104°F (40°C) may result in explosion.
 11. To ensure product safety, ensure that qualified service professionals use only identical replacement parts.
 12. Attachments on the back of your phone

can impede the effectiveness of the wireless charger, and lead to overheating. Please remove attachments from the phone before charging on this device.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

- * Warning:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.