



Operating instructions

SHET FN Z < X > C L V<sub>Pap</sub> B<sub>Pap</sub> N<sub>tore</sub> M<sub>totel</sub> Alt

## Remote control handle the main function description

- 1. Wireless keyboard input function.
- 2. One-way voice transmission function
- 3. Two-way voice transmission function. 4. Gamepad function.
- 5. Low voltage automatic detection function
- 6. Touch control function.
- 7. Rechargeable power management functions. 8. Window/Android working mode switching function.


Intelligent features:

Longer remote distance than traditional wired. Users can move freely at random. Enjoy the wireless digital life.


New and more accurate 3D space moving calculation engine to achieve Fast and accurate positioning, precise control, support Android and PC two modes of operation, flexible users function configuration, play games cheerfully.

Meet ergonomic design, easy to control.

Microphone input, headphones output, it also has a voice call. voice assistant and other functions if the final device has corresponding functions. Achieves human-computer interaction applications.

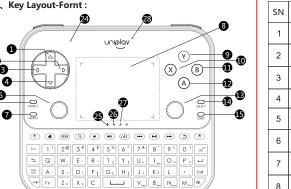

Key Layout-Back

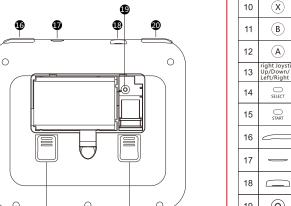

## **Button functions** Android mode Axis Hat Y-Up Arrow Axis Hat X+ Right Arrow Axis Hat X Left Arrow Axis Hat Y-Down Arrow Y-/Y+/X-/X+ W/S/A/D Button L Thumb

Button R Thumb Button Y Button X RZ-/RZ+/Z-/Z+ Button Select **Button Start** 4. No. 26/27 indicators lights on, means the product is in PC (Micro USB charging por

(Headphone port)

( Pairing function key

# Button L1 ( Power on/off) Button R2&Axi Triaaer **Button L2&Axis** Triaaer

## Indicator Description of Pemote Control:

dicator Description of Remote Control:				
SN	Indicator name	Color	Function description of indicator	<b>Pairin</b> The ga
25	Android indicator	blue	In Android mode low voltage state	
26	WIN indicator	blue	In Windows mode	specia 1. Pull
27	Voice indicator light	blue	In two-way voice	key or then p
28	Charging indicator light	red	In charging/ Power state	

Note: 1. No. 25 indicators lights on, means the product is i Android working mode, supporting one-way Voice, touch function, gamepad and mini keyboard function 2. No. 26 indicators lights on, means the product is in PC

- working mode, supporting one-way Voice, touch function gamepad and mini keyboard function 3. No. 25/27 indicators lights on, means the product is in
- Android working mode and two-way voice function is on, supporting gamepad and mini keyboard function, no touch
- working mode and two-way voice function is on, supporting gamepad and mini keyboard function, no touch function. 5. No. 28 indicators is bright on in charging status, lights off when charing is completed.
- 6. All lights off when the product is in sleep/shutdown.

## Using instructions:

Open the battery cover and take out the USB receiver, plug the USB receiver into the USB port of the windows / android

The remote control handle has already paired with USB receiver when it is ex-factory. So turn on this product an the Android indicator light is on, the game key, game joysticks and mini keyboard are in working mode.

 


amepad is defaults to one-to-one pairing with US re delivery. Pairing method as below. There has a al pairing metal key in battery house.

- I out the USB receiver from the products, press any Two-way voice mode on / off on mini keyboard, the 4 blue LED lights is in flash mode press the special pairing key, the 4 LED lights will fast nes, means in pairing mode.
- Plug the USB into final device, the 4 blue LED lights will ast flashes few second until Android indicators is lighting

**Note:** The pairing effective time is 10s. If pairing is not successful after enter pairing mode 10 seconds, the 4 blue ED lights flashes 20 seconds and light turn off, means If the two-way voice function is needed, please press Fn

Pairing distance: the recommended distance between receiver and gamepad be kept within 50cm.



### Android working mode/PC working mode switch: The gamepad supports two kinds of working systems.

Android system and PC system. If the device is Android system, switching the gamepad operating mode to And mode, then can use the game control keys and joysticks the device is Window system, switching the gamepad

- Press the Fn + MODE1 button at the same time. And indicator lights up after flashes twice, means switches to the Android work mode successfully, and press Fn + MODE1 is no function
- 2. Press the Fn + MODE2 button at the same time. WIN indicator lights up after flashes twice, means switches to PC work mode successfully, and press Fn + MODE2 is no

## he gamepad supports one-way voice function

microphone voice input) and two-way voice function microphone into the sound, headphones sound). The one-way voice function is turned on by default when the gamepad is power on, then it can upload voice information to the terminal device through terminal device recording software or voice assistant.

buttons **Fn**+ ( **n ! !** at the same time to turn on two-way voice function, the current working mode indicator and two-way voice work indicator lights up, at this point, plug headphone into headphone hole of the gamepad and open the music player of terminal device to play music, users can listens to this music. Users can also speak to the microphone of remote control handle, if this controller already opens recording or other software, then user's words will be pass to the terminal device through this

When two-way voice function is on, if press the switch combination key at the same time, then controller is turned off two-way voice function, the two-way voice work light is

### Touch function

function will be default to turn on. The touch function operating mode to PC mode, then can use the game includes cursor positioning function and wheel function. 1. Cursor positioning function: single finger moves in the control keys and joystick. The switching method is as

- touch are can moves mouse. Wheel function: two fingers slides up and down parallelly
  - 3. Left mouse button: single finger moves the cursor to the desired location, click the touch area is equivalent to click left mouse, double click the touch area is equivalent to double click left mouse button. Or click (double click) the
  - 4. Right mouse button: Click the left mouse button on the mini kevboard.

### Gamepad function:

power-on, it can control the generic game of Android system. If you need to control the game of PC system, you need to press the Fn + MODE2 key, WIN indicator will brights after light flashes twice, this is indicates the device is switched to PC mode, then it can control the generic game of PC system

confirm whether the corresponding work indicator has response when button is pressed, or through the game interface to select the key setting option to set the

## Key description of mini keyboard:

The gamepad is equipped with a mini keyboard to meet the users to text, letters, digital input and the use of multimedia shortcuts to control the multimedia playback volume adjustment and other needs 1. Press grey color button can achieve the key function of

is gamepad has touch function, when its power on, touch

- is equivalent to the mouse wheel scroll up and down.
- left mouse button on the mini keyboard.
- Mini keyboard function—table 1 (Multimedia shortcuts

The device supports gamepad function. When it's

**Note:** If you find the device is out of control, please

I. In Fn state, it can outputs the key function of blue character, it means if have to output + characters, there

need to press Fn & | P | at the same time to output

. Hold P+ button more than 0.8s can also output character +, long press and hold the button, the device is also output a character +, won't continuous output.

Button functions

Mouse Left

Home

Menu

Search

/off two-way voice

(H44)

Volume Down

Two-way voice switch button, Press this

button and Fn at the same time, turn on

Media Previous

Media Play/Pause

Volume Up



Mini kevboard function-table 3(Press this button and Shift button at the same time to output this character. press and hold this button more than 0.8 seconds to output this character.)

Media Next

Mouse Riaht

Back

Mini keyboard function-table 2(independent keys)



Mini keyboard function-table 4(Press this button and button at the same time to output this character, or press and hold this button more than 0.8 seconds to output this character.)



1. Long press the alphabets and characters of Mini keyboard (the four row button in arc area) is only send characters and letters in blue color. Except for **Esc. Tab.** Caps Lock, Shift, Fn. Alt. Ctrl. Enter, Backspace.

Press Fn + Backspace this two button is equate to pr Delete, long press Fn + Backspace has continuous Delete

## Low voltage automatic detection function:

This game controller supports the function for battery lov voltage detection LED indication. When the battery voltage of remote control is less than 3.5 v. each time when press one button, the low voltage status indicator will flashes until it is sleep, reminding users to recharge the remote

Battery Charging:

Charging the Gamepad when charging indicator of th gamepad flashes to indicate that battery is low.

Charge Current: 0.5A The charging light indicator lights up constantly when

The charging light indicator lights out when charging

Power supply: 800mAh rechargeable lithium battery (Detachable replacement)

Rated Voltage:3.7V

Standby Current: 33mA (If no working with 20 seconds,

Sleeping Current: 30uA (If no press with 3 minutes, it will

Lowest Working Voltage:3.3V;

Wireless distance:>10 meters:( The maximum distance of voice transmission is 5 meters)

Voice Continuous working time:about 20 hours

Continuous standby time:about 1 year

Battery life: about 1 month (according to normal frequency

We reserve the right to make improvements to the products described in this operating instructions. The product is subject to change without notice. If the picture and words mentioned in the instructions are different. please prevail in kind.

### This equipment has been tested and found to comply with the limits

a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection nterference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures o Reorient or relocate the receiving antenna o Increase the separation between the equipment and receive o Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected. o Consult the dealer or an experienced radio/TV technician

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this

his device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**157**克铜版纸, **12**折页, 折后尺寸**75**MM\*125MM, 单色印刷