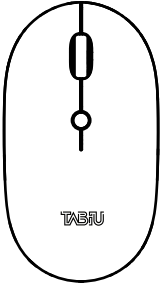
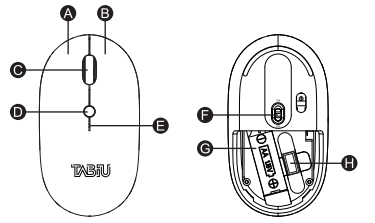


| | |
|---|---|
| <div><div>User Manual</div><div>Wireless Mouse</div><div></div><div>E100</div></div> | <div><div>Product Function</div><div></div><div><div><div>A</div>Left Button</div><div>B</div>Right Button</div><div><div>C</div>Scroll Wheel</div><div>D</div>DPI Switch Button</div> <div><div>E</div>Low Battery Indicator Light</div> <div>F</div> Power Switch |
|---|---|

G

Battery Compartment

H

06.11.01.1132

E100深圳市融创致远 说明书60x95mm展开240x95mm 80克书写纸 黑色单面印刷 风琴折