

SHARPER IMAGE®

TV WIRELESS HEADPHONES

Item No. 206077

User Guide




Thank you for purchasing the Sharper Image TV Wireless Headphones. This updated version has a new design with new features, including a digital audio connection for Smart TVs. Please take a moment to read this guide and store it for future reference.

FEATURES

- Works with all TV sets, including the latest Smart TVs
- Watch TV without disturbing others
- Easy to set up, charge and use
- Charge lasts up to 5 hours
- Wireless range: 160 ft.
- Adjustable volume
- Can also be used as wired headphones
- All cables included

PARTS IDENTIFICATION: TRANSMITTER BASE

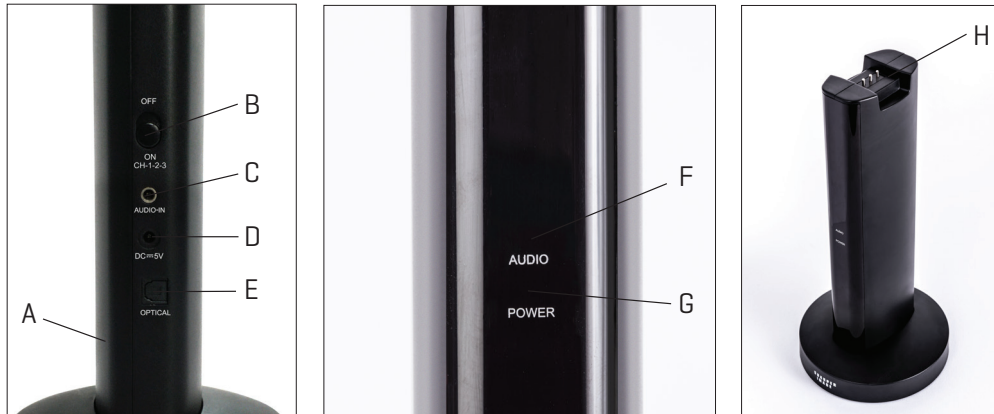

- A. Transmitter base
- B. Audio signal and channel switch
- C. Audio in jack
- D. 5V DC power jack
- E. Optical audio jack
- F. Audio indicator light
- G. Power light
- H. Charging dock

PARTS IDENTIFICATION: TV WIRELESS HEADPHONES



- A. Charging point
- B. Power button
- C. Signal indicator light
- D. Volume +
- E. Scan button
- F. Volume -
- G. Audio in jack

SET-UP

1. Plug the included AC adapter into the DC 5V jack in the back of transmitter base. Then, plug the other end into an AC outlet.
2. Slide the Audio Signal switch on the back of the transmitter base to the ON position.
3. If the blue power [lower] light illuminates, the unit is receiving power.

NOTE: This device must be used with the AC adapter supplied in the package. If your AC adapter is lost or damaged, please contact Sharper Image Customer Service. Do not use any other AC adapters or power cords.

CHARGING YOUR HEADPHONES

For optimum performance, the TV Wireless Headphones must be fully charged before the first use. This can take 5 hours.

1. Make sure the transmitter base is plugged in as described above.
2. Slide the Audio Signal switch on the back of the transmitter base to the OFF position.
3. Turn off the power on the TV Wireless Headphones, and place them on the transmitter base.
4. The power light on the transmitter base will turn RED while the headphones are charging. The power light on the transmitter base will turn BLUE when the headphones are fully charged or in use.
5. Store your TV Wireless Headphones on the base when not in use.

NOTE: There are two LED lights on the front of the transmitter base: Audio Indicator Light [upper] and Power Light [lower].

CONNECTING YOUR TV

1. The TV Wireless Headphones can be connected to the TV three different ways:
 - Headphone Jack** — Use the included 3.5mm audio cable. Plug one end into the TV headphone jack. Plug the other end into the Audio In jack on the back of the transmitter base.
 - Audio Out** — Check to see if your TV has red and white Audio Out jacks [also called RCA jacks]. If so, connect the included RCA to 3.5mm adapter cable to the Audio Out jacks on your TV. Then connect the included 3.5mm cable to the adapter, and plug the other end of the 3.5mm cable into the Audio In jack on the back of the transmitter base.
 - Digital Optical Cable** — Many new TVs do not have a headphone jack or Audio Out jacks. If this is the case, you must use the optical output on your TV. This jack is also called “optical audio,” “TOSLINK” or “Digital Audio Out [Optical].” Plug the included fiber optic cable into this jack on your TV. Then plug the other end into the Optical input on the back of the transmitter base. **NOTE:** [1] Please be sure to check the shape of the Digital Optical Cable before you plug it in. The shape of the cable must align with the shape of the jack. [2] Please be sure to remove the clear caps of the Digital Optical Cable before you plug it in. [3] Please be sure the 3.5mm audio cable is not plugged in before you use the Digital Optical Cable. Or it will default 3.5mm audio priority if both plugged in.
2. When the transmitter base is connected to the TV, turn on the power on both the transmitter base and your TV. Now turn on the TV. The Audio light on the transmitter base will turn BLUE. **NOTE:** Make sure your TV is not on mute.

USING THE TV WIRELESS HEADPHONES

1. Press the Power button on the right earcup of headphone. The indicator light will turn GREEN when successfully turned on; it will automatically connect in 2 seconds.
2. Place the headphones on your head. Adjust the volume using the Vol+ and Vol- buttons on the left earcup. You should now be able to hear your TV on the headphones.

Note: If you use more than 1 headphones in a space on different devices, you can set a separate channel for different transmitters to avoid interference each other. Just select channel 1, 2 or 3 by sliding [from top to bottom] the power button on the transmitter base, then you can select to connect the headphones to channel 1, 2 or 3 by pressing the SCAN button on the left ear cup of the headphones. Each transmitter can connect more than 1 headphones at the same time and same channel.



AUTO SHUTOFF

- To protect the battery, the TV Wireless Headphones will turn off automatically when the lithium battery power level drops below 2.7V. If this happens, please return the headphones to the charging base in order to recharge.

WIRED HEADPHONE USE

Your TV Wireless Headphones can also be used as wired headphones, for use outdoors or on a plane [with a smartphone, tablet, laptop, MP3 player, etc.].

- For wired use, connect the included 3.5mm audio cable to the Audio In jack on the headphones. Plug the other end into your mobile device.
- To conserve battery power, be sure headphones are powered off when using them as wired headphones.
- TV Wireless Headphones will not pick up wireless audio signals while the audio cable is plugged into the Audio In jack. When you want to watch TV again, make sure you unplug the 3.5mm audio cable.

SYSTEM RESET

In the rare event of a malfunction, you may need to perform a system reset.

1. Turn on the power of the transmitter base.
2. Turn on the power of the headphones.

TECHNICAL SPECIFICATIONS

Transmission Mode: UHF Stereo	Distortion: <0.5% at 1KHz
Carrier Frequency: 900MHz	S/N Ratio: <95dB
Operation Voltage [Base Unit]: DC5V	Wireless Range: 160ft
Operation Voltage [Headphones]: DC3.7V	Charge Time: 5 hours
Frequency Response: 20Hz-20KHz	Battery Capacity: 20 hours

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation. **Note:** *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

WARNING

- Modification of this device to receive cellular radio-telephone service signals is prohibited under FCC rules and Federal Law.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Do not change the batteries on this device.
- Do not expose this device or the batteries to fire, excessive heat or excessive humidity.
- Recycle rechargeable batteries in accordance with local laws.
- Prolonged exposure to excessive sound pressure from earphones and headphones may cause hearing loss.

RF Exposure Information

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

TROUBLESHOOTING

Problem	Possible Solution
No sound coming from Headphones.	<ul style="list-style-type: none"> · Ensure the AC adaptor is properly plugged into the Transmitter Base and a working AC outlet. · Ensure that the Transmitter Base is properly connected to your TV. · Ensure the the Audio Signal switch at the back of the Transmitter Base is switched ON. · Ensure the Headphones are charged and powered ON. · Increase the Headphone volume. · Ensure that you are in range. The wireless range is about 160 ft. but may be less if there are walls or doors between you and the transmitter base. · Ensure that the TV is on and that the volume is turned up [not muted]. · Ensure to only plug in either 3.5mm audio cable or optical cable at one time, or it will default 3.5mm audio priority if both plugged in. <p>Important: On some newer TV sets, it may be necessary to turn on or increase the output level of the headphone jack or the Audio Out jacks. Normally, you can check this by pressing the Menu button on your TV remote control and entering the Settings or Set Up menu. Consult your TV owner's manual for details.</p>
Sound is distorted, staticky or hissy.	<ul style="list-style-type: none"> · Ensure the volume level of the headphones is set to an appropriate level [not too loud]. · The Headphones are too far from the transmitter base. Move them closer. · The audio signal input level is too high or low. Adjust the volume of the TV. <p>Important: On some newer TV sets, it may be necessary to turn on or increase the output level of the headphone jack or the Audio Out jacks. Normally, you can check this by pressing the Menu button on your TV remote control and entering the Settings or Set Up menu. Consult your TV owner's manual for details.</p>

<p>Sound is distorted, staticky or hissy. [Cont.]</p>	<ul style="list-style-type: none"> · Ensure that the transmitter base is properly connected to your TV. · Ensure that you are in range. The wireless range is about 160 ft. but may be less if there are walls or doors between you and the transmitter base. · Ensure that the TV is on and that the volume is turned up [not muted].
<p>I can hear the TV through the Headphones, but now the TV itself is too loud.</p>	<p>Use your TV remote to turn down the volume on your TV.</p>
<p>I have tried everything suggested here, but the Headphones still do not work.</p>	<p>Connect TV Wireless Headphones to a different TV in your house. The problem may be with the internal settings of your TV. Refer to your TV owner's manual to adjust the Audio Out and Headphone volume levels.</p>

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.