

### Security Issues

- Please read carefully and keep well for later use.
- Please put the product in a place where children cannot reach.
- Don't throw the product.
- Don't throw it to the fire and keep it away from the heat source because it is built-in battery.
- To avoid to get an electric shock pls don't use it without grounding socket.
- Don't open it and repair it by yourself.
- Please contact the nearest dealer for after-sales service.

### Product Specifications

- Model : 72784/72786/72788
- Speaker : 4W/3Ω
- Lithium battery : 3.7V/400mAh
- Playtime : About 3h
- Charging time : About 3h
- DC input : DC3.7V/100mA
- Working temperature : -20~50°C
- Net weight : 0.2Kg
- Size : 59\*59\*45mm
- Bluetooth Distance : About 10m

2

# MINI SPEAKER

## Instruction Manual

### Thanks for buying this product


This is a MINI bluetooth speaker can answer your call and communicate, can use in home and outdoor sports. Please read and keep well this brochure, if any questions or missing in the brochure pls be free to contact us any time, thanks!

1

### Main functions

- Connect your phone and play music.
- Can answer your call and communicate after connect your phone.

### Product Overview

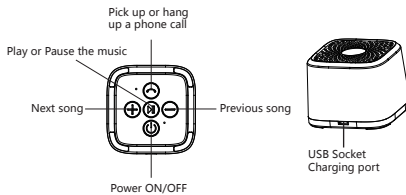

### Connect your phone

Long press the on/off button in 3 seconds and the speaker will turn on, so open your phone device and open the bluetooth control interface and then turn on the bluetooth. Find the bluetooth name " Zoko" ,click it and connect it.then the speaker will say bluetooth device is connected successfully.

3

### Instructions:

- ⏻ Press to switch the speaker on and off
- ⏪ Short press for the previous song, long press to turn the volume down.
- ⏩ Short press for the next song, long press to turn the volume up.
- ☎ Press to pick up or hang up a phone call(Tip: Press this twice to redial the last phone call).
- ⏸ Press to play or pause the music.

### Charging the Integrated Battery:

This product is powered by an integrated rechargeable lithium battery. A USB charging cable is included.

Charge the battery as follows:

1. Insert the charging cable into the USB socket on the unit.
2. Connect the USB plug into a PC or ACDC adaptor. When the blue LED indicator starts to flash, the battery is being charged. Charging will take approximately 3 hours.
3. When the battery is fully charged the LED indicator light will go out. Remove charging cable.

4

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.