



TWS

True Wireless Speakers **ON45** **2PK**

They sync to create
a surround sound effect



ITEM 24043-DI

User Manual

CHARGING THE SPEAKER

Plug the included cable into any USB wall charger (not included) and into the Micro USB charging port on the front of the speaker. The red LED by the port indicates the speaker is charging. When fully charged, the LED turns off. When using the speaker can be used on battery power or keeping plugged into the USB wall charger (not included).

ACCESSORIES:


Speaker x 2
Micro USB Charging Cable - 2pcs

SPECIFICATION:

Output Power: 5W
Speaker size: 4"
Product Size: 170*101*231mm
Control: On/Off/Volume and Mode,
Play/Pause, Forward, Back
Input: Bluetooth/AUX/USB/TF/FM
Signal to noise ratio: >90dB
Bluetooth version: V5.0
Operation Range: Up to 10 Meters
Built-in 1200mAh Lithium Battery
Recharge time: 3 hours full charge
Playing time: 6 hours
Seven colors LED Light

MANUAL FOR WIRELESS SPEAKER

Please read this manual carefully before using
your new "ON45" Wireless Speaker

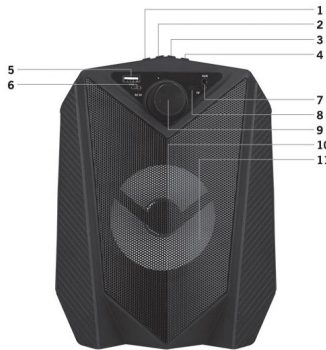

ENGLISH

Up to **6h**
Playing time

1200
mAh
Built-in
Rechargeable
Battery

1. Mode (LINE IN, MP3, FM, BT)
2. Previous song (FM: Previous channel)
3. Play/Pause (FM: Automatic Search)
4. Next song (FM: The next channel)
5. USB socket
6. Charging socket (DC 5V)
7. Audio input socket (AUX)
8. Micro SD card socket (TF)
9. Knob (Power Switch and Volume Control)
10. 4 inch Speaker
11. Colorful Lights

2

TWS Function

1. Turn on "A" and "B" speakers. Press and hold the "Mode" button on both speakers simultaneously, the speaker will play a chime sound and shortly after the message "your device has connected successfully" (this prompt means the 2 speakers have paired and connected with each other. Look for "ON45" on your Bluetooth device and select it from the list of available devices, you will get another voice prompt saying "your device has connected successfully".
2. Once paired and connected to your Bluetooth device you will get True Wireless Stereo Sound.

Bluetooth® connection

1. Turn the volume control knob to turn on the speaker and it defaults to Bluetooth mode, you will get a "ding dong" prompt.
2. Turn on your other Bluetooth device and search for "ON45" and click on the "ON45".
3. You will get a voice prompt "Your device has connected successfully", connection is successful.

Micro-SD Function

- Press "MODE" on the product to switch to TF mode or just insert a Micro SD card. TF mode will start automatically.
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.

USB Function

- Press "MODE" on the product to switch to USB mode or just insert a USB flash drive. USB mode will start automatically.
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.

3

FM Radio Function

- Press "MODE" on the product to switch to FM mode. Radio will start automatically.
- Press "PLAY/PAUSE" to enter into automatic FM channel searching.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.

3

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by CJ Global is under license. Other trademarks and trade names are those of their respective owners.

4

TWS

