

# CHE-629 User Manual

## First Use Note


Ensure the charging case and earbuds are full charged before you start to use.

## How to Wear


Select the best fitting ear tip and then wear earphones. Make sure that it fits snugly and seamlessly inside your ear to get the best sound and Noise Canceling performance.

## Power On

**Auto power on:** Take out the earphones from the charging case, the earphone will automatically power on.

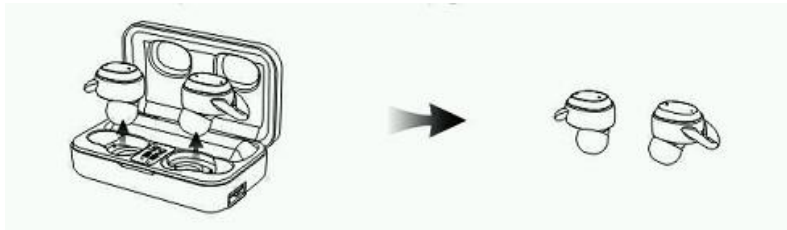

**Manual power on:** If earphone is power off, and the charging case is not available, please tap earphones touch control for 2-3 seconds in the meantime until the blue lights flash.

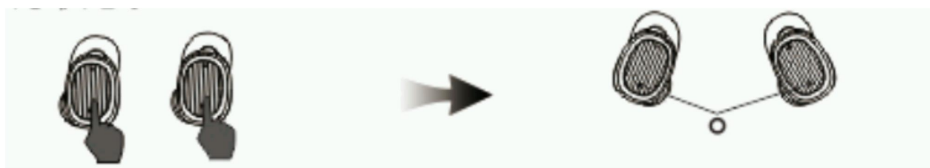

Long press 2-3s to power on

The earphone flashes blue light

## Power Off

1) Put the earphones into the charging case , they will enter into charging mode and power off automatically.



2) If the charging case is not available, just disconnect the Bluetooth connection between your cell phone and earphones, the earphones will power off automatically after 10 minutes.

## How to Connect

For the first time pairing, take the earbuds out of case and search bluetooth “**NYANBOARD EARPHONES**” on your phone, and tap to connect.

( Earbuds will auto re-connect to the last time device in connectivity records).

## How to Reset

If earbuds is not working properly, follow below steps to the Factory Setting:

Put the earbuds into case, click left and right earphones 5 times when earphone is in charging mode, and you will see red and blue lights will flash in the same time, then take earphones out of charging case, it will connect to each other automatically.

## How to Charge

**Earbuds:** Put earbuds into charging case, they will be charged automatically, the light will be on after about 5s.

**Charging Case:** Charging the case with included cable and your DC5V/1A adapter ( PC USB port or other DC5V also compatible).

LED blue light will show up when charging status, a long blue light when fully charged.

## Functional Operation

### Music

Press X1 : either earbud for Pause / Play.

Press X2: the left earbud for previous song; the right earbud for next song.

### Incoming Call

Press X1: either earbud to answer /end a call

Press X2: either earbud to reject a call.

### Mode Switch

Press X3: right earbud to activate siri voice assistant.  
Press X3: left earbud to switch gaming mode/normal mode.

### **Volume adjustment**

Long Press : the left earbud to reduce the volume (-); the right earbud to increase the volume (+).

### **Specification**

Bluetooth version	V5.2
Support profile	A2DP/AVRCP/HFP/HSP
Transmission distance	10M/32.8FT
Frequency range	2402MHz~2480MHz
Driver	Φ10MM*2 Hi-Fi Speaker
Voltage	3.7V
Talking time	About 5H
Playing time	About 5H
Charging Time	About 1H
Earphone battery	45mAh
Support system	IOS/Android/Windows
Certification	CE/FCC/ROHS

### **What's in the packing box?**

Charging Case\*1 piece  
Wireless Earbuds\*1 pair

Manual\*1 piece  
USB-C Charging Cable\*1 piece

### **FAQ**

Q: Earbuds can not be charged?

A: 1. Ensure the charging case is fully charged, then put earbuds into the charging case to charge.

2. Dry clean the charging points as there maybe dirty.

Q: No sound from left or right earbud?

A: Ensure two earbuds are paired successfully. You can follow the “ **How to Reset**” to pair the earbuds.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.