

Warranty Card / 免付費維修服務保固說明

TOPMORE 產品主機提供一年保固，保固期限，自消費者購買日起算一年，消費者需出示原始購買日之購買證明(發票或保固卡)始能享有保固服務，若用戶無法提供購買證明，TOPMORE 將無法提供保固服務。The limited warranty for the product extends for 12 months beginning on the date of purchase of the product. 若您購買的產品在保固期間內，於正常使用之下有任何不良或損壞發生您可先與原購買 TOPMORE 經銷商聯絡，透過原購買經銷商寄回 TOPMORE 進行維修。This warranty is provided only for product purchased from authorized dealer of TOPMORE Technology Inc.. Customers could return this product directly to TOPMORE when defect detected.

購買人 Name	TEL	
購買地點 Where to buy		購買日期 Order date
地址 Address		E-mail
商品異常現象(Remark):		

Copyright © 2018 TOPMORE 登錄著作權所有，並保留一切權利

TOPMORE 達墨科技股份有限公司 TOPMORE TECHNOLOGY INC.

總公司 Headquarters
新竹縣竹北市台元二街1-1號(台元科技園區)
No.1-1, Taiyuan 2nd St., Zhubei City, Hsinchu County 302, Taiwan
TEL : 886-3-6676771 MAIL : service@topmore.com.tw
FAX : 886-3-6681598 WEB : www.topmore.com.tw

深圳代表處 Shenzhen Office
深圳市南山区西麗鎮同沙路168號諾達爾集團中心大廈A棟1005室
Room 1005, Block A, 1007, Cadde Group Center, NO.168, Tongsha Road, Xili town, Nanshan District, Shenzhen, Guangdong 51800, China
TEL : 0755-88283050 FAX : 0755-82755885

品名:搖滾星球喇叭 ROCK PLANET

型號:BSM-01

傳輸距離:10m以內

音源輸入:Ø3.5mm Audio Jack

電池容量:3.7V/1000mAh

充電時間:3小時

包裝清單:音箱x1、USB充電線x1、音源線x1、使用說明書x1

Product: ROCK PLANET

Model:BSM-01

Transmission Distance: 10M

AUX-IN port: Ø3.5mm Audio Jack

Battery:3.7V/1000mAh

Charging time: 3 hours

Package contents: speaker x 1, USB cable x1, 3.5mm audio cable x1, Instruction manual x1

Input: DC 5V ≈ 0.5A

Playing time: 4 hours

TF card socket:TF card, support 4GB~64GB

Weight:220g

Product size:76x80x87mm

Package contents: speaker x 1, USB cable x1, 3.5mm audio cable x1, Instruction manual x1

限用物質含有情況標示聲明書

請見達墨官網(技術支援→檔案下載)

https://www.topmore.com.tw

CE FCC ESR RoHS

FCC ID:2ANHG-BS-01

Made in Taiwan 台灣製造

輸入電壓:DC 5V ≈ 0.5A

播放時間:4小時

擴充槽:TF卡,支援4GB~64GB

重量:220g

尺寸:76x80x87mm

保固:一年保固 免費提供技術支援

包裝清單:音箱x1、USB充電線x1、音源線x1、使用說明書x1

Input: DC 5V ≈ 0.5A

Playing time: 4 hours

TF card socket:TF card, support 4GB~64GB

Weight:220g

Product size:76x80x87mm

Package contents: speaker x 1, USB cable x1, 3.5mm audio cable x1, Instruction manual x1

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



FCC RF Radiation Exposure Statement:

This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

產品介面圖 Product rear drawing

- 1 電源開關鍵 / 電源開關鍵 / Power button
- 2 音量加 / 音量加 / Volume up button
- 3 音量減 / 音量減 / Volume down button
- 4 音源傳輸 / 音源傳輸 / (AUX-IN)
- 5 連結燈號模式切換鍵 / 連結燈號模式切換鍵 Connection / LED mode button
- 6 Micro USB
- 7 TF卡槽 / TF卡槽 / (4GB-64GB) TF card socket

產品介面圖 Product rear drawing

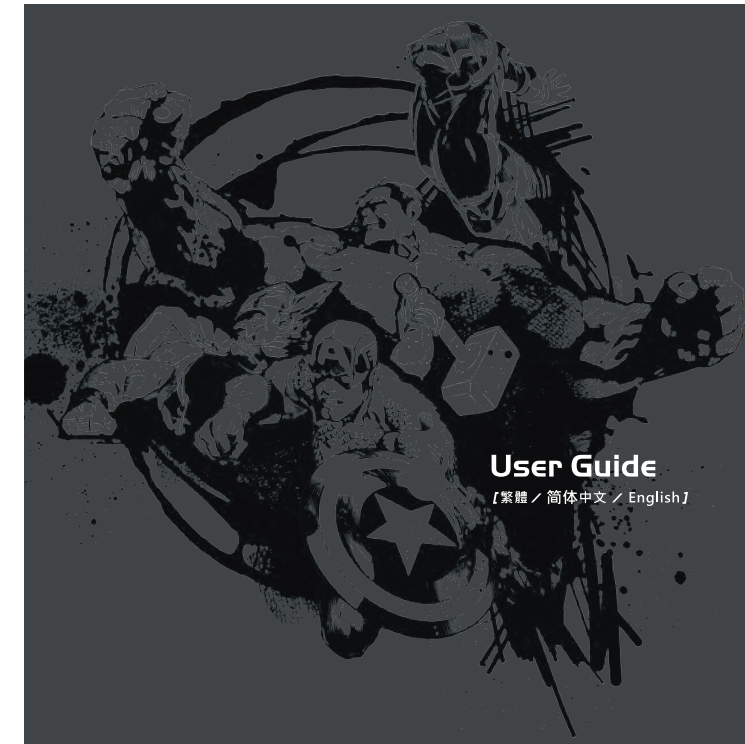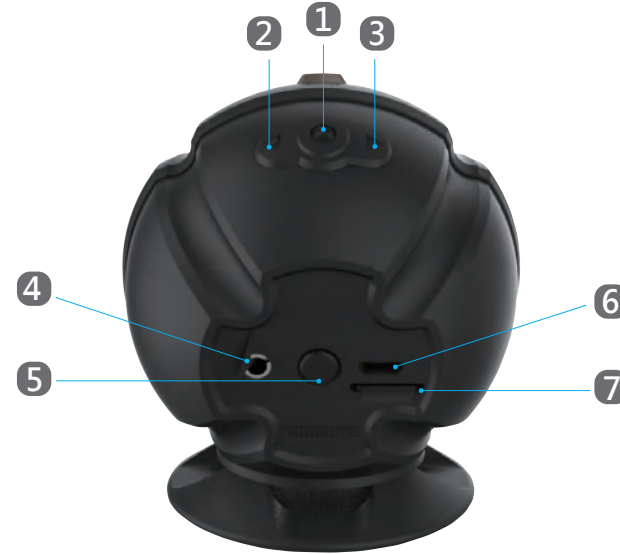


User guide

- 1 Play / Pause the music: Short press Power button can easily pause and play the music.
- 2 VOL + button: a. Short press: Increase Volume. When adjust to the highest volume you will hear "maximum volume" voice prompt. b. Press and hold the button for 3 seconds to play next song (Not support on AUX-IN mode)
- 3 VOL - button: a. Short press: Decrease Volume b. Press and hold the button for 3 seconds to play previous song (Not support on AUX-IN mode)
- 4 LED Lighting mode: Press and hold connection/LED mode to change lighting mode: a. Red, green and blue lighting on circular Breathing mode. b. The lights mode will change according to the beat of your music. c. White lighting mode. d. Turn off lights.

14 Note: Showing red light when its charging. Showing green light after charging completely.

Extra function: When you purchase two Rock Ball speakers at the same time, you can turn on this TWS pairing function. TWS pairing function: Only support Bluetooth mode. Switch both speakers into Bluetooth mode, and then double click one of the speakers of Connection / LED mode button to pair another. You will hear "TWS, waiting for connection". If the both speakers' connection is successfully completed, you will hear "TWS connected". The speaker which is double clicked button is the master device and controls the music play.

- 1 Power on: Press and hold the power button for 3 seconds, you will hear "power on" voice prompts. The indicator light will flash.
- 2 Power off: Press and hold the power button over 3 seconds, you will hear "power off" voice prompts. All indicator lights will be turned off.
- 3 Bluetooth mode for music streaming: a. After turn on the power, the default mode is Bluetooth mode and you will hear "Bluetooth, waiting for connection" voice prompt. b. Activate your mobile phone's Bluetooth function and set your mobile phone to search for "Rock Ball" from the Bluetooth device list and pairing. Note: if the Bluetooth connection is failure, the speaker will turn off automatically after 10 minutes.

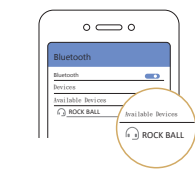

- 4 Connection mode selection: Short press Connection/LED mode button to toggle among Bluetooth/TF card and AUX-IN mode.(Bluetooth mode sets on startup)
- 5 AUX-IN mode: With the speaker switched on, plug 3.5mm audio cable to music device and the speaker AUX-IN port. Your music will be controlled via your music player with the volume being adjusted on the speaker's volume buttons.
- 6 TF card mode: Insert the card and select TF card mode, the speaker can be easily playing the song of TF card in supportive format audio file (Support audio format: WMA/WAV/APE/FLAC/MP3).

- 8 VOL+ 按鍵: a. 短按: 音量加一級，音量到最大有提示音 "maximum volume"。 b. 長按3秒: 下一首音樂 (AUX-IN不支援此功能)
- 9 VOL- 按鍵: a. 短按: 音量減一級 b. 長按3秒: 上一首音樂 (AUX-IN不支援此功能)
- 10 燈號切換: 長按燈號切換鍵: a. 紅綠藍三色呼吸循環模式 c. 單色白光模式 b. 紅綠藍跟隨音樂律動循環模式 d. 燈號關閉

充電: 紅燈長亮 充電完成: 綠燈長亮

- 11 選配: 同時購買2組搖滾音星球喇叭 TWS配對: 僅支援藍牙模式 將兩台喇叭切換至藍牙模式，對其中一台的切換鍵双击進行TWS組隊配對，組隊成功後，將會出現組隊成功提示音 "TWS connected"，双击的喇叭即為主機，主機負責所有的操作控制；主機作為副機與裝置連接的中介，電量消耗大於副機，此為正常現象。

簡體中文使用說明

- 1 开机: 长按开关键3秒钟，有开机提示音 "power on"。
- 2 关机: 在开机状态下，长按开关键3秒钟，有关机提示音 "power off"。
- 3 蓝牙模式: a. 开机后优先进入蓝牙模式，语音提示 "waiting for connection" 待連結藍牙模式。 b. 打开手机蓝牙介面，搜尋 "ROCK BALL" 配對名，並選擇點擊配對。



註: 藍牙模式10分鐘連接不成功，將自動关机。

- 4 模式切換: 短按燈號鍵，藍牙、AUX-IN、TF卡三個模式切換，到相對應的模式下，會有提示音。(开机默认在藍牙模式)
- 5 AUX-IN播放模式: 用3.5mm音源線與喇叭連接，切換AUX-IN播放模式，即可播放所連接的播放設備音樂。
- 6 TF卡播放模式: 將TF卡插入TF槽，切換TF卡播放模式，即可播放音樂。(支援音樂格式WMA/WAV/APE/FLAC/MP3)
- 7 音樂播放/暫停: 听音乐时，短按开关键，即可播放/暫停。

- 8 VOL+ 按鍵: a. 短按: 音量加一級，音量到最大有提示音 "maximum volume"。 b. 長按3秒: 下一首音樂 (AUX-IN不支援此功能)
- 9 VOL- 按鍵: a. 短按: 音量減一級 b. 長按3秒: 上一首音樂 (AUX-IN不支援此功能)
- 10 燈號切換: 長按燈號切換鍵: a. 紅綠藍三色呼吸循環模式 c. 單色白光模式 b. 紅綠藍跟隨音樂律動循環模式 d. 燈號關閉

充電: 紅燈長亮 充電完成: 綠燈長亮

- 11 選配: 同時購買2組搖滾音星球喇叭 TWS配對: 僅支援藍牙模式 將兩台喇叭切換至藍牙模式，對其中一台的切換鍵雙擊進行TWS組隊配對，組隊成功後，將會出現組隊成功提示音 "TWS connected"，雙擊的喇叭即為主機，主機負責所有的操作控制；主機作為副機與裝置連接的中介，電量消耗大於副機，此為正常現象。

繁體中文使用說明

- 1 開機: 長按開關鍵3秒鐘，有開機提示音 "power on"。
- 2 關機: 在開機狀態下，長按開關鍵3秒鐘，有關機提示音 "power off"。
- 3 藍牙模式: a. 開機後優先進入藍牙模式，語音提示 "waiting for connection" 待連結藍牙模式。 b. 打開手機藍牙介面，搜尋 "ROCK BALL" 配對名，並選擇點擊配對。



註: 藍牙模式10分鐘連接不成功，將自動關機。

- 4 模式切換: 短按燈號鍵，藍牙、AUX-IN、TF卡三個模式切換，到相對應的模式下，會有提示音。(開機默認在藍牙模式)
- 5 AUX-IN播放模式: 用3.5mm音源線與喇叭連接，切換AUX-IN播放模式，即可播放所連接的播放設備音樂。
- 6 TF卡播放模式: 將TF卡插入TF槽，切換TF卡播放模式，即可播放音樂。(支援音樂格式WMA/WAV/APE/FLAC/MP3)
- 7 音樂播放/暫停: 聽音樂時，短按開關鍵，即可播放/暫停。

根據NCC低功率電波輻射性電機管理辦法 規定:

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。