



**Power  Frisbee**


---

Wireless Charging Pad

English Manual

# User Guide

Thank you for purchasing TOPMORE Power Frisbee. Please read User Guide before using the Wireless Charging Pad to ensure safe and proper use.

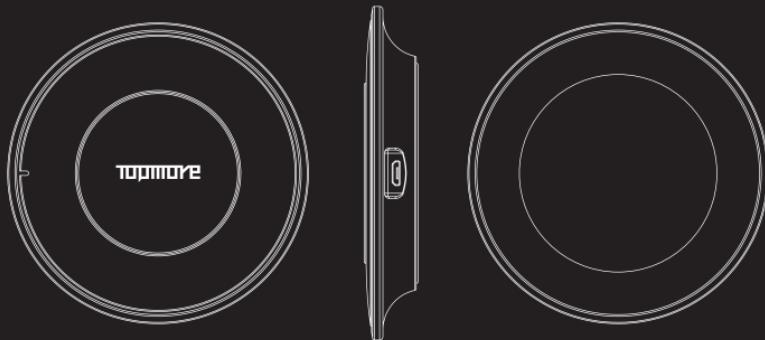

## Specifications

---

Input Voltage : DC 5V == 2A / DC 9V == 1.67A

Frequency : 110-205 KHz


Power Conversion : 70~78%

Device Size : L10 \* W10\* H1.2 cm

Product Weight : 58g

Charging Distance : 3~5mm

# Connecting Power Frisbee

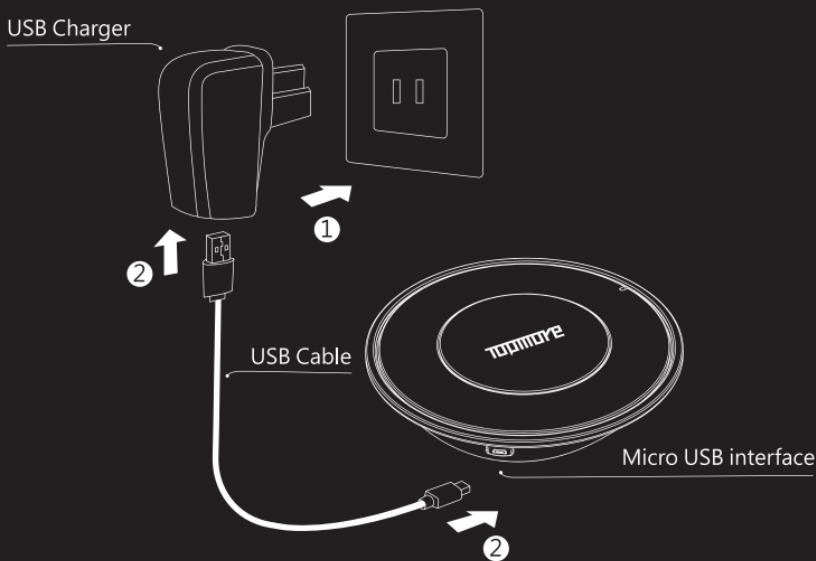

- ① Plug in the USB Charger.
- ② Connect the USB Changer and the Power Frisbee with USB cable.

Note : Charging Pad controlled by smart chip, available for Long-time standby.

## Connecting Notebook


---



Connect to laptop interface with USB cable.

## Connecting Desktop PC



---

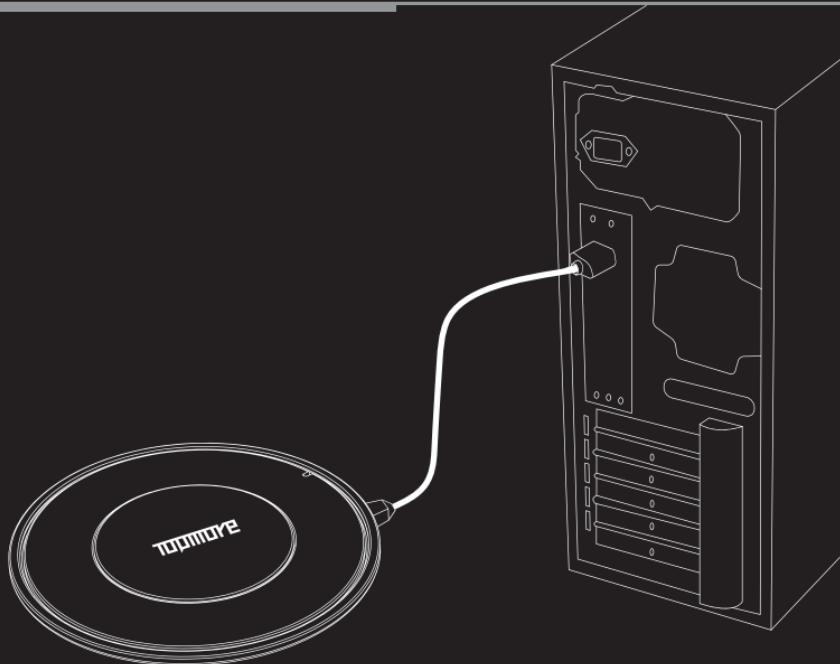

Connect to Desktop interface with USB cable.

# How to Charge

---

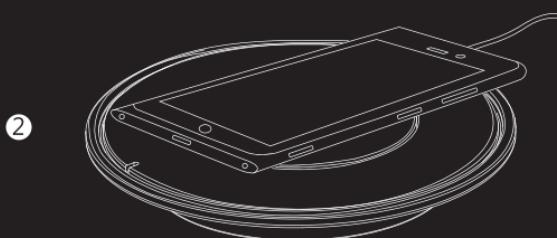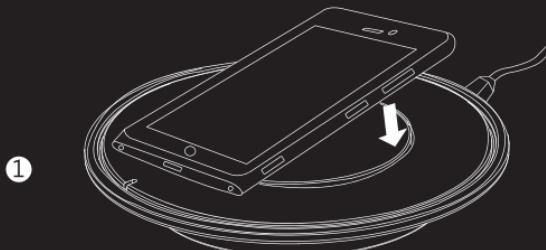

- ① Make sure charging pad is connected and prepared to be used.
- ② Devices with built-in wireless charging receiver module (Samsung S8, Iphone 8/8 Plus, Iphone X etc).  
Place device with wireless power receiver on charging pad, then charging starts immediately.

# Warning

---

1. Do not squeeze or collide.
2. Do not dismantle the product, throw into water or fire, it may result in short circuit and leakage.
3. Do not place charging pad under high temperature.
4. Please keep charging pad away from Magnetic stripe or chip card (such as Credit cards or Banking cards etc), for fear of the card demagnetize.
5. Please keep charging pad away from Medical equipments (at least 20 Centimeters ), the device may malfunction due to potential interference.
6. Please keep charging pad out of reach of children to ensure proper use and not taking it as toy.

User Guide and images used for Schematic only.

## Warranty

---

1. The product has 1 year warranty from the date you purchase.
2. Customer needs to provide purchasing invoice or warranty card to enjoy free maintenance. If cannot provide evidence of purchase, TOPMORE will not be able to provide warranty service.

Customer Name		Customer Phone	
Purchase Location		Purchase Date	
Address		E-mail	
Abnormal Product :			

TOPMORE guarantee that all products have been completely tested . During the warranty period, if there is any breakdown which cased by the product' s own quality, please contact your dealer by this warranty card and purchasing invoice to return product for maintenance.

# **TOPMORE Power Frisbee**

Product : Wireless Charging Pad

Model : WP-1

Device Size : L10 \* W10 \* H1.2 cm

Weight : 58g

Product Standard : WPC1.2.2 ( QI ) Standard

Profile Support : Support QI wireless charging

Input: DC 5V === 2A / DC 9V === 1.67A

Output : 10W (MAX)

Frequency : 110-205 KHz

Charging Distance : 3-5mm

Power Conversion : 70%-78%

FCC ID : 2ANH6-WP-1



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement.

