

**SYLVANIA**  
SP717

---

BLUETOOTH LIGHT UP SPEAKER  
USER MANUAL

2IN1



**PLEASE READ THESE INSTRUCTIONS THOROUGHLY  
BEFORE USE AND RETAIN FOR FUTURE REFERENCE.**

**SYLVANIA** is a registered trademark of OSRAM SYLVANIS Inc. used under licence.

## Important Safety Instructions

- Please read this manual carefully before use.
- Avoid the use of this speaker in the high-temperature and high humidity environment.
- Do not throw to avoid falling damage of the speaker.
- Avoid self disassemble of speaker, or it will result in the failure of warranty.
- Please charge speaker with power adaptor output rated voltage 5V.
- Long time high volume playing is likely to cause hearing damage.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

## Compliance with FCC Regulation 1

### FCC ID: 2ANH7-SP717

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Warnings

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Product Standard Accessories 2

- Water Bottle Speaker
- USB charge cable
- User Manual



## Technical Data 3

Technical Data	
Speaker Type	2 IN 1 Bottle Speaker
Output Power	4 Ohm 2W.
Bluetooth Version	V4.2
Connection Method	Wireless Bluetooth, TF Card Connection
Recharge Method	DC5V 500mA USB power source
Battery Capacity	400mAh
Rated Power	2.5W
Product Size	Diameter 68 x H 245mm
Product Weight	255 g

**Volume Up / Next Song**

Press once for next song, Press and hold to increase volume and have “Beep” sound you will heard on the max.

**Power / Light**

 
Press and hold for 3 seconds to power on the speaker, Press and hold for 3 seconds again to turn off the speaker. Press once to switch on the lights, press again to switch off the lights.

**Volume Down / Previous Song**

Press once for previous song, Press and hold to decrease volume.

**Play / Pause**

When music playback, press the button to pause and play. Press and hold this button to change the input source when the TF card is inserted.

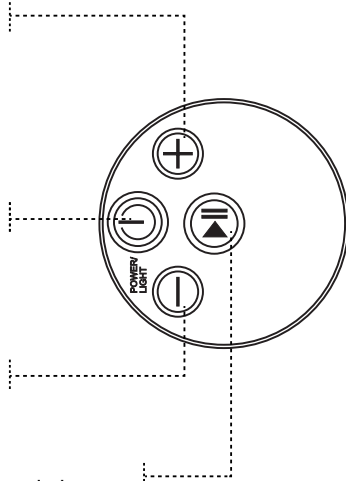

**TF Card mode**

When the TF card is inserted in this product, this unit will change to TF card mode automatically, then it can control the volume up and down and change to the next and previous track. The operation are same as above.

**Working LED indicator**

 
Power on: blue LED light flashes quickly;  
 Bluetooth paired: blue LED is solid;  
 Music playback: blue LED light flashes slowly in playing. When press to pause, the LED will be solid.  
 Charge Status: Red LED is on during charging. The red LED will turn off when the battery charged completely.

**RESET Function:**


Insert a needle to this hole and put it to reset this product when it's out of control.

**USB Charge Socket**

Use a computer USB port / power adapter to recharge speaker.

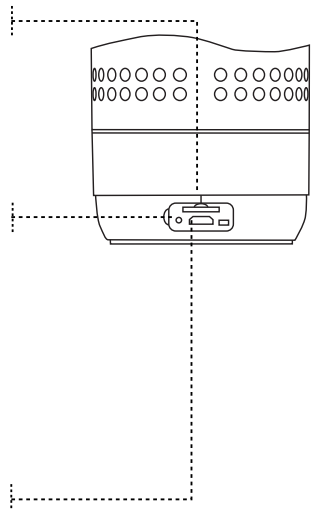

## Bluetooth Connection 5

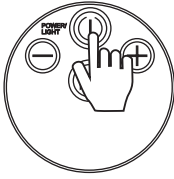 

Press "POWER / LIGHT" button and hold for 3 seconds, then prompt voice for Bluetooth connection, blue LED light flashing, Bluetooth is ready for connection.




Click the settings in Bluetooth devices, then search for device list and find "SYLVANIA SP717", then click for connection. Blue LED light will be solid and will have a voice "Bluetooth connected" coming up. Now the Bluetooth is connected successfully.

### Notes:

 1. TF card without insert the slot.
2. SP717 Bluetooth Speaker can be connected to mobile phone or tablets with a Bluetooth chip inside, and can be paired with notebook, compatible with ios, android and other mainstream operating system..
3. After connection successfully, restart the speaker, the Bluetooth will be connected last device automatically.


## TF card music playing mode 6

### Enter TF Card Music Playing Mode

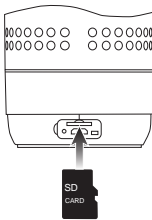

Insert TF card with music files into the TF slot, press and hold the "POWER / LIGHT" button to turn on the speaker, there will have a voice coming up "Music", then the speaker will be playback the music automatically.

### Exit TF Card Music Playing Mode

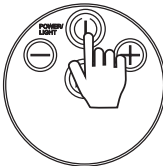 


When pull out the TF card, can exit TF card playing mode, and shift to Bluetooth playing mode.

**Note: Support music format MP3, WAV.**
 
## Power Charge 7

Use a computer USB port / power adapter to recharge the speaker. When battery is low, 80% power capacity can be recovered after two hours fast charging and it will take 3 hours to fully charge the speaker.

There will have a voice coming up "Battery low" when the battery is low. Please charge it immediately when you hear this voice.

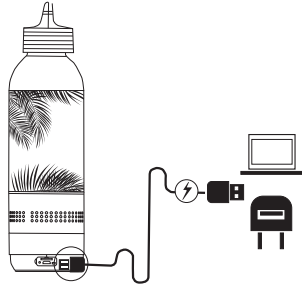

## Notes for the Bottle Cleaning 8

**Note:** When clean the speaker bottle, please separate bottle and bottom speaker by counter clockwise rotation with a little force. Clean bottle separately to avoid part damage to the speaker.



# SYLVANIA

## LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at [www.curtisint.com](http://www.curtisint.com) before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

### TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

### EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

### TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

**Canada**  
**C.I. Service Dept.**  
**315 Attwell Drive**  
**Toronto, ON**  
**M9W 5C1**

**U.S.A**  
**Curtis International Ltd**  
**c/o Lotus International Company**  
**6880 Commerce Blvd.**  
**Canton MI 48187**  
**U.S.A.**

**For service assistance and product information, please call: 1-800-968-9853.**

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

To begin the **warranty repair process**, please note that you **MUST** obtain a **return authorization number** prior to returning your product for warranty based support. This can be placed under the 1-800-968-9853 contact line.

Model No. \_\_\_\_\_ Date Purchased \_\_\_\_\_ Serial No. \_\_\_\_\_