 

BLUETOOTH KARAOKE STAGE WITH DUAL MICROPHONES AND LIGHT EFFECTS

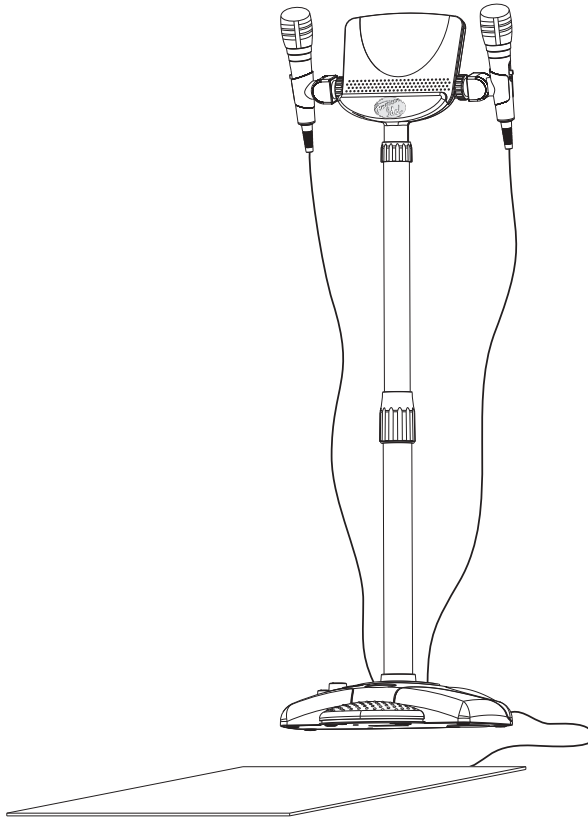

MODEL: MET567 USER MANUAL



CAUTION: THIS IS NOT A TOY!

Electrically Operated Product - Please use care when plugging into AC outlet. For best use: remove shoes before stepping on the mat.

WARNING

Follow the advice below for safe operations.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Only use attachments/accessories specified by the manufacturer.
9. This apparatus shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the mat or apparatus
10. Do not use this machine outdoor.
11. Stop operation immediately if any liquid or solid object should fall into the mat or cabinet.
12. Before use, check that the rated voltage of your unit matches your local voltage.
13. Ensure a minimum distance of 2 inches (5 cm) around the apparatus for sufficient ventilation.
14. Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table cloths, curtains, etc.
15. Do not place naked flame sources, such as lighted candles on the apparatus.
16. Use the apparatus only in moderate climates.
17. Do not expose the AC/DC adaptor and apparatus to dripping or splashing.
18. The AC/DC adaptor of apparatus should not be obstructed and should be easily accessed during intended use.
19. To be completely disconnected from the power input, the AC/DC adaptor of apparatus should be disconnected from the mains.
20. If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Unplug the AC adapter from the wall outlet. Make it a practice to remove the AC adapter by grasping the plastic body and not by pulling the cord.

Should any trouble occur, disconnect the AC Adapter and refer servicing to qualified personnel.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


CONTENTS OF YOUR PRODUCT

MET567 Karaoke Machine	x 1 set
Lighted Stage Mat	x 1 pc
Aux In Cable	x 1 pc
Microphone with Cable	x 2 pcs
AC Adapter	x 1 pc
User Manual	x 1 pc

INSTALLATION




CAUTION: This product contains small parts, only adults should install this product.

 1. Carefully remove all packing materials to find parts below for assembly.
 - A. Microphone stand and base Connector
 - B. Microphone stand (wider outer pole)
 - C. Height adjusting knob
 - D. Microphone stand (upper pole)
 - E. Microphone holder and cradle connector
 - F. Fixing screw
 - G. Main Unit Base

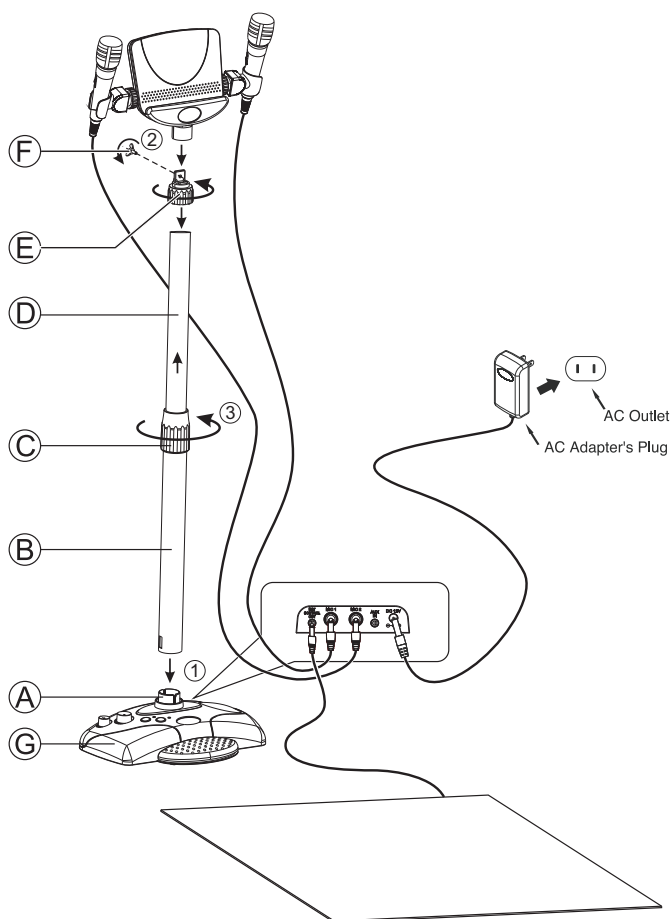

2. Fully insert the Microphone stand (wider outer pole) into the base connector ①
3. Fully insert the cradle connector into the Microphone stand (upper pole) and fix it by fixing screw (included) ②
4. Turn the height adjusting knob in counter-clockwise direction to loosen the joint, then move upper pole up and down to adjust the microphone stand to desired height.
5. After stand height is set, tighten it up by turning the Height adjusting knob in clockwise direction ③
6. Move the unit to the location you want to play and connect accessories by following operations in this manual.

   LOCATION OF CONTROLS

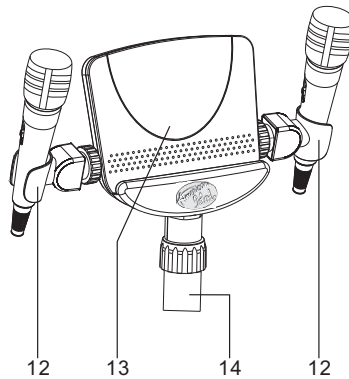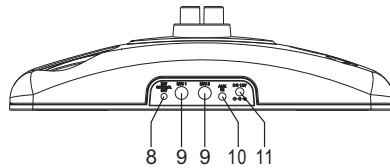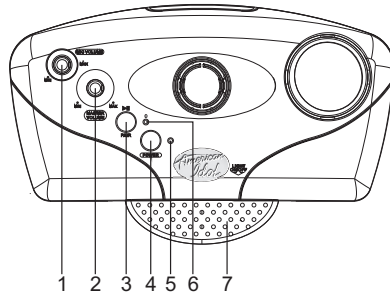

- | | |
|-------------------------------|----------------------------------|
| 1. Mic. Volume Control Knob | 12. Mic. Holders |
| 2. Master Volume Control Knob | 13. Tablet/Smartphone Holder |
| 3. ► Play/Pause/Pair Button | 14. Height adjustable Mic. Stand |
| 4. Power Button | |
| 5. Power Indicator | |
| 6. BT Pair Indicator | |
| 7. Light on/off Pedal | |
| 8. Mat Control Out Connector | |
| 9. Mic. Input Jack | |
| 10. AUX IN Jack | |
| 11. DC Input Jack | |

POWER SOURCES

AC OPERATION

Plug the supplied AC adapter into the DC jack (12V DC input) on the rear panel of the unit and connect to a standard AC wall socket. Press the POWER ON/OFF button on the Karaoke system to turn on and the POWER INDICATOR will light.

Note: When the unit is not operated for long periods of time, unplug the AC adapter from the unit and wall outlet.

REAR SIDE OF MAIN UNIT



CONNECTING LIGHTED STAGE MAT

WARNING - Please ensure the floor that you are going to use the lighted stage mat on is completely dry to avoid slipping.

To prevent the lighted stage mat from getting damaged:

- To keep away from water.
- Do not step on the LED strip surrounding 4 sides of mat.
- Do not fold the LED strip.
- Take off shoes before you step on the mat.

1. Plug the lighted stage mat into the MAT CONTROL OUT connector at rear panel of the base, change to period
2. LED surrounding 4 sides of the mat will be lighting and changing with the music.

 
Note: If the brightness is glaring, turn on room lights.

CONNECTING THE MICROPHONE

WARNING - Tapping or dropping the microphone while it is on can permanently damage your microphone. Do not swing the microphone around by the cord.

Note: To prevent feedback or whistling from occurring, please be sure that the microphone is not too close to unit's speaker.

REAR SIDE OF MAIN UNIT

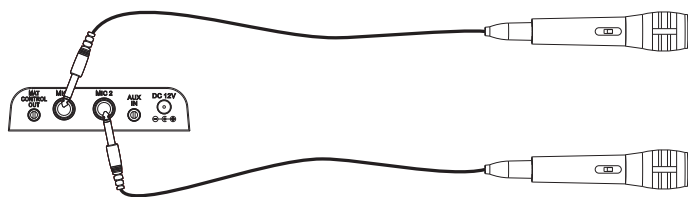

1. Connect the supplied Microphone to either one of the MIC input jacks.
2. Press the POWER button to turn on the unit, the POWER INDICATOR will light.
3. Slide the ON/OFF switch located on the Microphone to the ON position and speak or sing into the Microphone. The Microphone sensitivity and loudness can be adjusted as required by turning the MIC VOLUME control and/or MASTER VOLUME control.
4. Turn off the unit after use by pressing the POWER button again. The POWER INDICATOR will go off. Place the microphone (s) in the Mic Holder (s) of the stand.

USING AUX IN FUNCTION

This feature allows you to plug a tablet or smartphone (both not included) which contains downloaded music and lyrics for Karaoke singing.

1. Placed your external device in the Tablet/Smartphone Holder on Mic Stand.
2. Plug a 3.5mm audio cable (included) into the headphone jack of your tablet or smartphone and connect the other end (3.5mm plug) into the AUX IN jack on the rear side of this unit. The unit will automatic change to AUX IN mode.

 
WARNING - Please take extra care to plug in the AUX IN jack but not MAT CONTROL OUT connector to avoid damaging your external device.

3. Press the POWER button to turn on the unit, POWER INDICATOR will light. Turn on your external device as well.
4. Select a Karaoke song stored in your tablet or smartphone to play. Slide the ON/OFF switch located on the Microphone to the ON position and speak or sing into the Microphone. The Microphone sensitivity and loudness can be adjusted as required by turning the MIC VOLUME control and/or MASTER VOLUME control.

WARNING - Do not use excessive force to tap your tablet or smartphone screen when it's placed on Tablet/Smartphone Holder. It may cause stand falling down and damage to your external device.

5. Adjust the volume control of your audio player and then the MASTER VOLUME CONTROL of the unit to obtain the desired audio sound level.
6. Turn off both the external audio player and this unit after use, unplug the audio cable from AUX IN jack.

EXAMPLE OF EXTERNAL TABLET/SMART PHONE

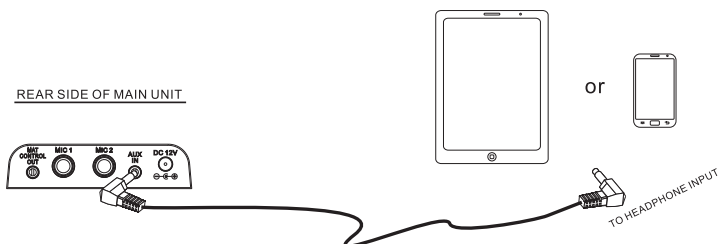

Note: If it is not in use AUX In function, please unplug the AUX In cable on the rear side of this unit.

Bluetooth OPERATION

External devices that have a built-in Bluetooth feature can connect wirelessly to the unit.

Getting Connected

Pairing a Bluetooth device

1. Make sure unplug the AUX In cable on the rear side of this unit.
2. Press the POWER button to turn on the unit, the unit is in BT mode. BT indicator will flash.
3. Set the Bluetooth function of your external device to on and begin searching for devices.
Note: The effective distance between your external device and this apparatus is 10 meters (30 feet).
4. Once "AI KARAOKE MAT" appears on the paired device list of your external device, select it.
5. If you are asked for a password, enter "0000"
6. An audible chime will be heard and BT indicator light blue steadily that indicates a connection has been established.
7. A few seconds later your Bluetooth connection should be ready to use.

Note: After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your devices should become unpaired or your find it is unable to connect, repeat the above steps or press & hold the PAIR button again.

Playing Music from an External Bluetooth Device

1. Follow the "Getting Connected" steps above to pair your external device.
2. Turn on the music player program on your external device and set it to play.
3. Audio played through the connected Bluetooth Device will now be heard through the speakers.
4. Short press the PLAY/PAUSE ►|| button to pause or resume play.
5. Adjust the MASTER VOLUME CONTROL of the unit to obtain the desired audio sound level.

RESETTING THE UNIT

If the system does not respond or exhibits erratic or intermittent operation, you may have experienced an electrostatic discharge (ESD) or a power surge that triggered the internal microcontroller to shut down automatically. If this occurs, simply disconnect the AC Adapter. Wait for at least 3 minutes and then setup the unit again as if you were using it for the very first time.


CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
No power when plugged in	AC adapter is not plugged into the AC outlet.	Insert the AC adapter into the AC outlet.
	The AC outlet may not have power.	Check the outlet with a working lamp or other electrical appliance.
No sound	MASTER VOLUME control is set to minimum.	Turn up the master volume.
	Unit is not linked with the Bluetooth enabled device.	Go through "Pairing a Bluetooth device" process to link the unit.
	Unit placement out of range	Relocate the unit within Bluetooth operating range (30 feet)
Cannot sing through the Mic.	Improper mic volume control.	Adjust MIC and MASTER volume level controls to appropriate levels.
	Mic is off.	Turn on mic with the ON/OFF switch located on the microphone.
	Mic is not properly plugged in.	Insert the mic plug into either MIC 1 or MIC 2 jack of the unit properly.

SPECIFICATIONS

Audio Output Power	:	2.5 W (RMS) (Mono)
Sound Source input	:	Bluetooth, Aux In
Aux In Jack	:	1 x 3.5 mm
Microphone Inputs	:	2 x 600 ohms Impedance with 6.3 mm jack
Microphone	:	2 x Dynamic Microphone
Power Source	:	AC Adapter: Input AC 100-240V~ 50/60Hz 0.8A Output DC 12 V \equiv 0.6A \ominus  \oplus

Due to continuing improvement, the features and the design are subject to change without notice.