



MODEL NO.: RPJ129

Smart Android Wi-Fi Home Theater Projector

INSTRUCTION MANUAL



PLEASE READ BEFORE OPERATING THIS EQUIPMENT

This product is manufactured and sold by Curtis International Ltd.

RCA, the RCA logo, the two dogs (Nipper and Chipper) logo, are registered trademarks or trademarks of RCA Trademark Management and are used under license by Curtis International Ltd. Any other product, service, company, trade or product name and logo referenced herein are neither endorsed nor sponsored by RCA Trademark Management or its affiliates.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifier) that product heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Additional Warnings and Precautions

1. Do not look directly into the projector light.
2. **Don't touch the projector lens**
3. Mains adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
4. **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
5. **WARNING:** Changes or modified to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
6. **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
7. **WARNING:** Shock hazard - Do Not Open.
8. Caution and marking information is located at the rear or bottom of the apparatus.
9. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
10. Objects filled with liquids, such as vases, shall not be placed on the apparatus.

FCC Warning

FCC ID:2ANH7696PJ38

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The distance between user and products should be no less than 20cm


In The Box



Remote

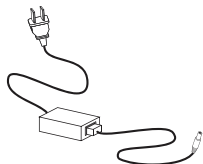

AC Power Adapter

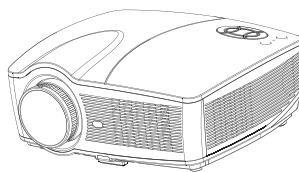 

Main unit



Lens Cover




User Manual

Table of Contents

Important Safety Instructions	P1
Additional Warnings and Precautions	P2
FCC Warning	P3
In The Box	P3
Table of Contents	P4
Remove & Close the Lens Cover	P5
Placement of Your Projector	P5
To Reduce Image Distortion	P6
Distance Between The Projector And Screen	P6
Installing your projector in the Ceiling	P6
Adjust the Vertical Position	P7
Adjust the Focus and Keystone	P7
Controls of Remote	P8
Install / Remove Batteries of Remote	P8
Controls of Projector	P9
Install Power Adapter	P10
Main Button Operation	P10
Connect HDMI show the Image On Projector Screen	P11
Connect AV Show The Image On Projector Screen	P11
Connect VGA Show The Image On Projector Screen	P12
Connect Audio Output (Aux Out / Line Out)	P13
Install USB Device	P13
Using USB Playback (Media Player)	P14
Using Projector Menu 1	P15
Using Projector Menu 2	P16
Using Projector Menu 3	P17
Using Projector Menu 4	P17
Projector Home Screen	P18
Connect to Wi-Fi	P18
The Menu Settings	P19
Install and Uninstall Apps	P20
Video Streaming (playing online TV and movies)	P20
Browser Function	P20
Multi-screen Interactive Connection for Phone and Projector	P21
Specifications	P22

 Remove & Close The Lens Cover

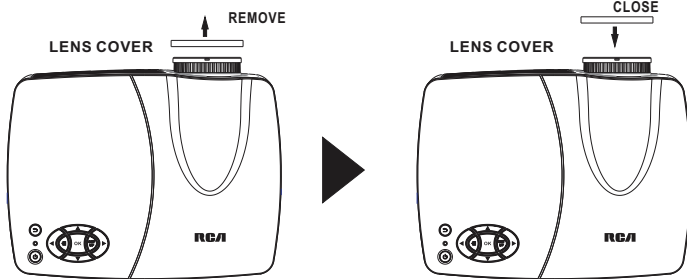

Placement of Your Projector

Your projector can be installed in four different configurations (see picture below):

 
Front Table



Front Table:

Select this location with the projector placed near the floor in front of the screen. This is the most common way to position the projector for quick setup and portability.

Rear Table

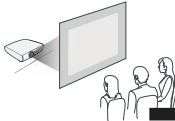


Rear Table:

Select this location with the projector placed near the floor behind the screen.

NOTE: A special rear projection screen is required.

 Front Ceiling

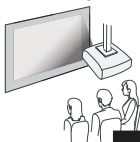


Front Ceiling:

Select this location with the projector suspended upside-down from the ceiling in front of the screen.

NOTE: A projector mount is required to install the projector in a ceiling.

 Rear Ceiling

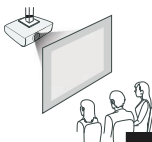


Rear Ceiling:

Select this location with the projector suspended upside-down from the ceiling behind the screen.

NOTE: A projector mount is required to install the projector in a ceiling.
A special rear projection screen is required.


To reduce Image Distortion

 - Move the projector as close to the center of the screen as possible.
- The light beam from the projector should be perpendicular to the screen for a rectangular or square image.

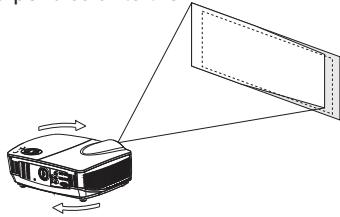

Distance Between The Projector and Screen

 Measure the distance between the projector and where you want to position the screen. This is the projection distance.

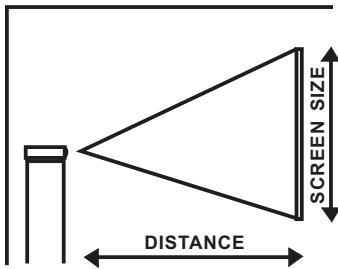


Distance	Screen Size
2.0m	60 inch
2.38m	72 inch
2.74m	84 inch
2.82m	86 inch
3.27m	100 inch
3.87m	120 inch
4.7m	140 inch
5.65m	160 inch

Installing Your Projector In the Ceiling

When installing the projector in the ceiling, please purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.




Before installing the projector in the ceiling, please check to make sure the ceiling structure can support the weight of the projector and the mount. If in doubt, please ask the advice from an installation professional.

 NOTE: Projector mount and screw(s) not included

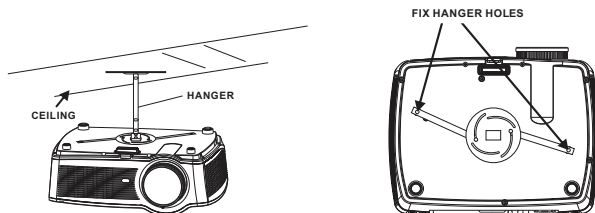

Adjust The Vertical Position

   Adjust the projector's vertical position by following the illustrations below:

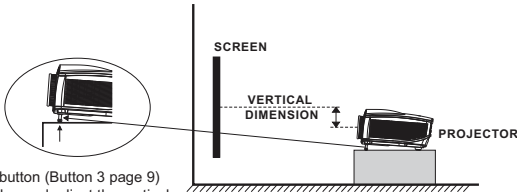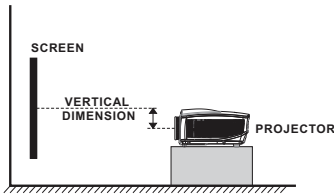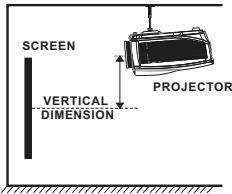



Press the "PUSH" button (Button 3 page 9) to extend the front leg and adjust the vertical height of the projector.

Adjust The Focus And Keystone


Follow below picture to adjust the focus and trapezoidal screen.

Adjust the focus by turning the lens while observing the image pixels near the center of the screen. Optimal focus is obtained when the pixels are clearly visible. Depending on the projected screen size, the focus near the screen edges may be less sharp than the screen center.

  Keystone image is created when the projector lens is projected from above or below the center of the screen. Keystone correction restores the distorted image to a rectangular or square shape.

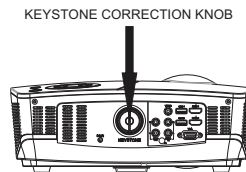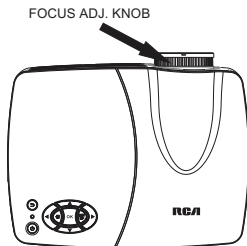

Controls of Remote

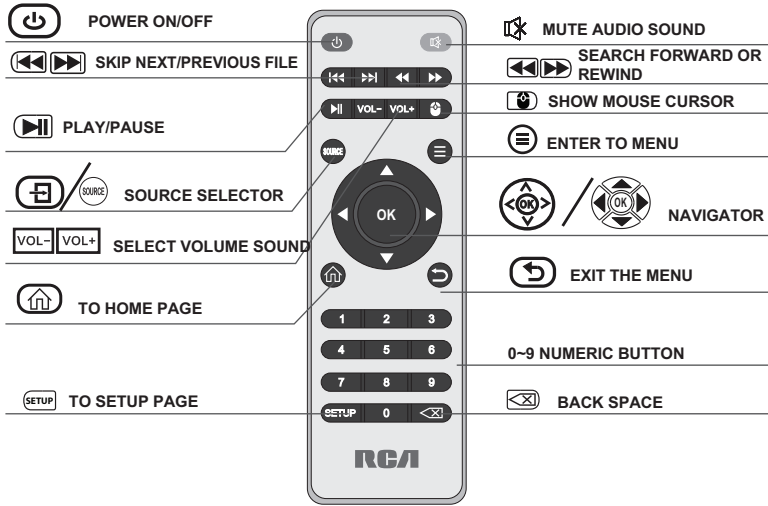 


Install / Remove Batteries of Remote

 
Remove the battery compartment cover on the back of the remote by carefully sliding to open. The battery cover can then be lifted away. Fit the correct batteries (not included), referring to the polarity markings. Finally, replace the cover.



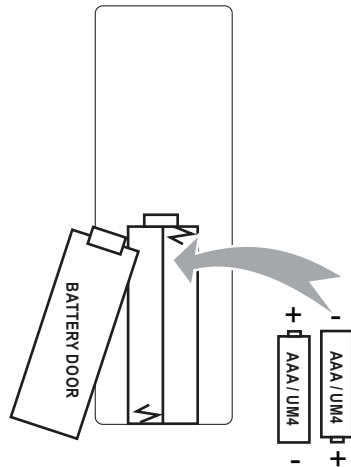

NOTES:

 - Batteries shall not be exposed to excessive heat such as placing under the sunlight or near a fire.
- Please make sure the batteries are installed with their correct polarities.
- Do not mix old and new batteries.
- Use only the same type of batteries.
- Do not dispose of the batteries in fire, battery may explode or leak.
- Do not recharge a non-rechargeable battery.

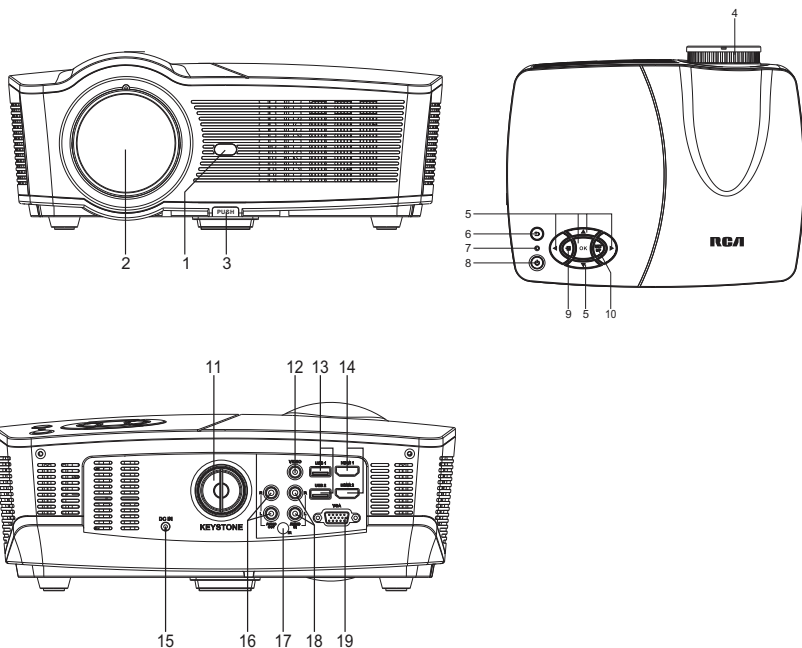

Controls of Projector




1. IR Sensor (Front Side)	11. KEYSTONE ADJ. Knob
2. LENS	12. VIDEO IN Jack
3. ANGEL ADJ. Button	13. USB1 / USB2 Port
4. FOCUS ADJ. Knob	14. HDMI 1/ HDMI 2 Port
5. NAVIGATOR  Buttons	15. DC IN jack
6. RETURN  Button	16. AUDIO OUT R/L Jack
7. POWER on Indicator	17. IR Sensor (Rear Side)
8. POWER  Button	18. AUDIO IN R/L Jack
9. SOURCE  Button	19. VGA IN Jack
10. SETUP Button	

Install Power Adapter


Follow below picture to connect power adapter

 Connect small end of adapter **FIRST**. Plug the adapter body to power outlet.

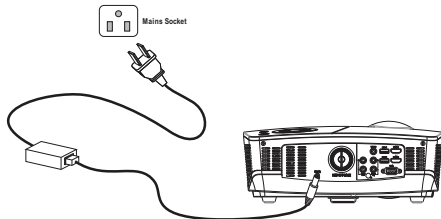

Main Button Operation

 - Press the button to switch on the unit, press again to turn off.


 / **SOURCE** - Press the button to select input source.

 - Press the button to enter Menu in Streaming Apps mode


 /  - Press the buttons to navigate and select screen item of menu.


 - Press the button to return to previous status or exit the menu.


 /  - Press the buttons to fast search forward and rewind.


 /  - Press the buttons to search next or previous file.

VOL+ / VOL- - Press the buttons to adjust the sound level.

 - Press the button to play/pause the playback.


 - Press the button to show mouse cursor in Streaming Apps input source, press the button again to switch back to navigation using the directional buttons. Please use the mouse cursor when entering text and selecting items, use the direction buttons for screen scrolling.

 - Press the button to return to Streaming Apps Home Screen.

 - Press the button to projector SETUP menu




 - Press the button to delete character and backspace in Streaming Apps mode

 
0~9 - Press the button to enter numbers in Streaming Apps mode

 - Press the button to mute the audio. Press again to resume.

Connect HDMI Show The Image On Projector Screen

Refer to the following picture to connect a set top box, a BD/DVD player or a streaming player to the HDMI input.

1. Turn off the unit before connect HDMI cable.
2. After connect, press the  button to turn on unit and power indicator will light GREEN
3. Press the  / **SOURCE** button to select HDMI 1 or HDMI 2 and the video from the connected device will be shown on projector screen.
4. Press the  button to turn off unit power.

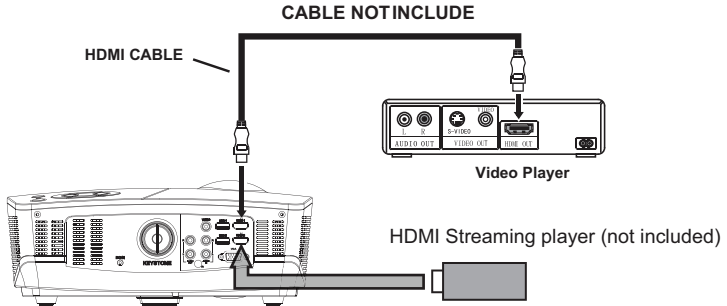




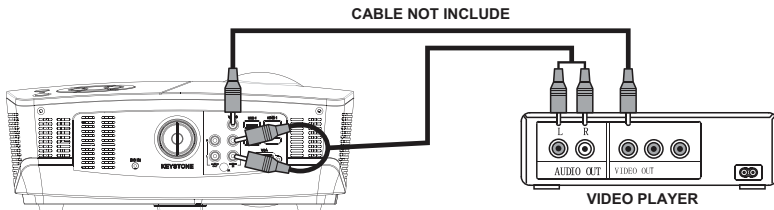 
Important Note:

If there is no sound from the internal speakers when playing media contents from a set top box, BD/DVD or streaming players connecting to the HDMI input, please check the set top box or the player's digital audio settings and make sure it is set to "PCM Stereo" mode.

Connect AV Show The Image On Projector Screen





Follow below picture to connect AV cable and device.

 
1. Turn off the unit before connect AV cable.
2. Use AV cable to connect follow below figure
3. After connect, press the  button to turn on unit and power indicator will light GREEN
4. Press the  / **SOURCE** button to select AV mode and the video of AV device will show on projector screen
5. Press the  button to turn off unit power.



Connect VGA Show The Image On Projector Screen

Follow below picture to connect VGA cable and device.

1. Turn off the unit before connect VGA cable.
2. Press the  button to turn off power of your projector before connection.
3. After connect, press the  button to turn on unit and power indicator will light GREEN
4. Press the  / **SOURCE** button to select VGA mode and the video of VGA device will show on projector screen.
5. Press the  button to turn off unit power.

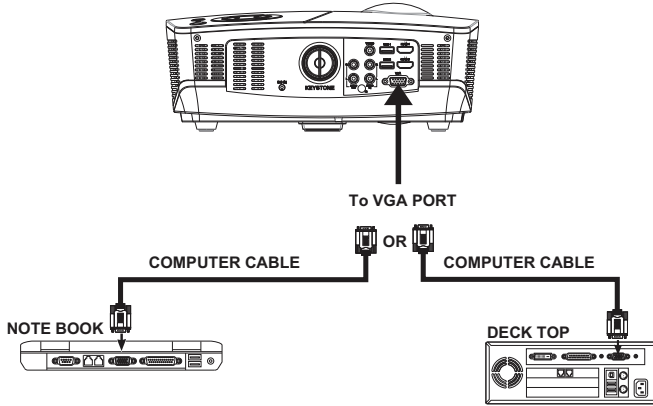


Please refer to the following table to adjust the output signal from computer


Type	Resolution		Frequency	Field Frequency
PC	VGA	640x480	31.5	60
			34.7	70
			37.9	72
			37.5	75
	SVGA	800x600	31.4	50
			35.1	56
			37.9	60
			46.6	70
			48.1	72
	XGA	1024x768	46.9	75
			40.3	50
			48.4	60
			56.5	70

NOTE: In order to get the sound from the unit, please connect AV in cable when you connect VGA input.

Connect Audio Output (Aux Out / Line Out)

Follow below picture to connect audio cable and device.

 1. Press the  button to turn off power of your projector before connection.
2. Use audio cable to connect follow below figure.
3. After connect and turn on both units. Your projector sound from external device now.
4. After using , turn off both unit

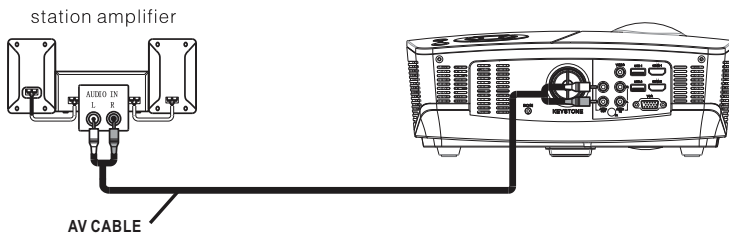


Important Note:

If there is no sound from the stereo audio output when playing media contents from a set top box, BD/DVD or streaming players connecting to the HDMI input, please check the set top box or the player's digital audio settings and make sure it is set to "PCM Stereo" mode.

 Install USB Device





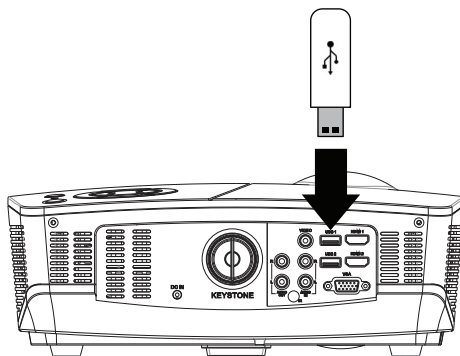











Follow below picture to install USB

Turn the unit off before install USB.








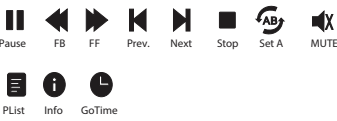



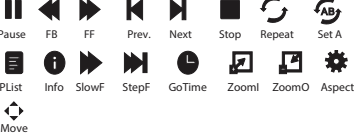

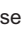




Using USB Playback (Media Player)

Install USB device:

1. Turn off the unit before install USB.
2. Install the USB device into USB port.
3. After connect, press the  button to turn on unit and the power indicator light GREEN.
4. Press the  / **SOURCE** button to select **USB Media Player** and press  button to enter.
5. Use  /  buttons to select **PHOTO/MUSIC /MOVIE/TEXT** icon and press  button to enter.
6. Use the  button to select **Remove disk(USB)** and press  button to enter.
7. Use  /  buttons to search the correct file and press the  button to preview playback file and press the  button to return to previous or  button of remote to start playback.
8. Press  button to fast search forward and rewind.
9. Press  button to search next or previous file.
10. During playback, press the  button to pause and press again to resume.


NOTE: Remove **USB** device, press the  button to turn off power **FIRST**.

Sub-Menu on Photo screen	
<ol style="list-style-type: none"> 1. When photo playback, press the  button and more function screen show on lower (figure 1). 2. Use the  button to select icon and press the  button to play special function. 	<p style="text-align: center;">Figure 1.</p> 
Sub-Menu on Music screen	
<ol style="list-style-type: none"> 1. When music playback, press the  button and more function screen show on lower (figure 2). 2. Use the  button to select icon and press the  button to play special function. 	<p style="text-align: center;">Figure 2</p> 
Sub-Menu on Movie screen	
<ol style="list-style-type: none"> 1. When movie playback, press the  button and more function screen show on lower (figure 3). 2. Use the  button to select icon and press the  button to play special function. 	<p style="text-align: center;">Figure 3</p> 
Sub-Menu on Text screen	
<ol style="list-style-type: none"> 1. When text playback, press the  button and more function screen show on lower (figure 4). 2. Use the  button to select icon and press the  button to play special function. 	<p style="text-align: center;">Figure 4</p> 

In rare cases, if the projector's speaker has no sound when playing a USB media file using USB Media Player, please play the video by installing a compatible media player app from an app store in Projector Home screen.

Using Projector Menu 1

 Press **SETUP** button to enter projector menu. Press again to previous status.

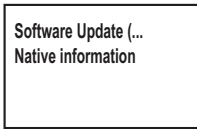

This **System** menu showed on right upper of view screen.

USE ▲/▼ TO SELECT

Software Update (...)

PRESS OK

 
For service center use only.

USE ▲/▼ TO SELECT

Native information

PRESS OK


Use the ▲/▼ button to show below information and press **SETUP** button to return.

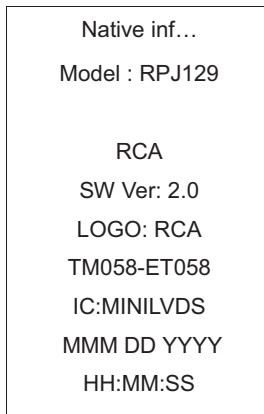


NOTE: MMM DD YYYY is representative date of software
HH:MM:SS is representative time of software

Using Projector Menu 2

 Press **SETUP** button to enter projector menu, press ◀/▶ buttons to select **picture** menu.

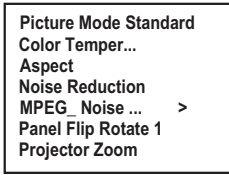

 This **Picture** menu showed on right upper of view screen.

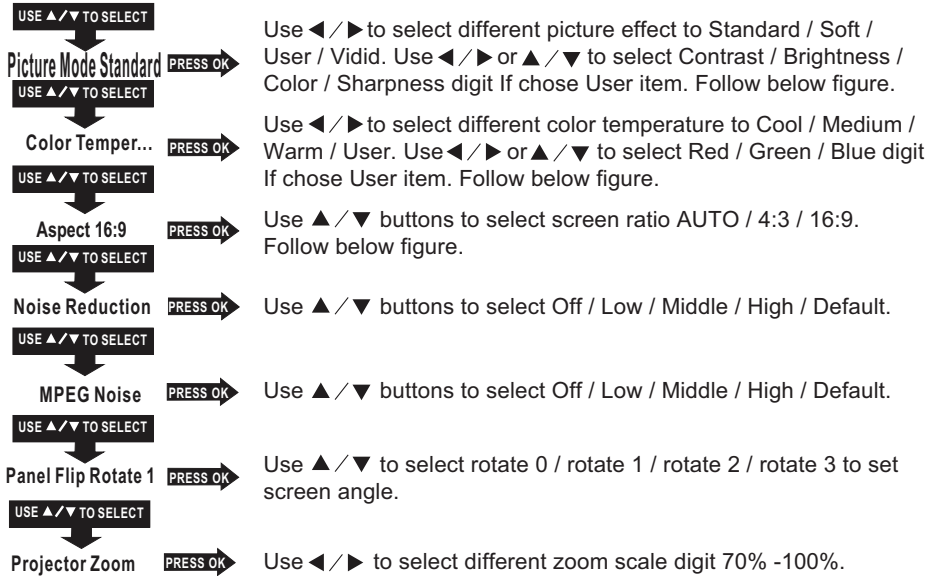


Picture Mode	
Customer define	Parameter
Contrast	0-100
Brightness	0-100
Color	0-100
Sharpness	0-100

Color temperature	
Customer define	Parameter
Red	0-100
Green	0-100
Blue	0-100

Aspect Ratio	
4:3	The signal in a 4:3 aspect ratio projection image
16:9	The signal in a 16:9 aspect ratio projection image

Using Projector Menu 3

 
Press **SETUP** button to enter projector menu, press ◀/▶ buttons to select **sound** menu.

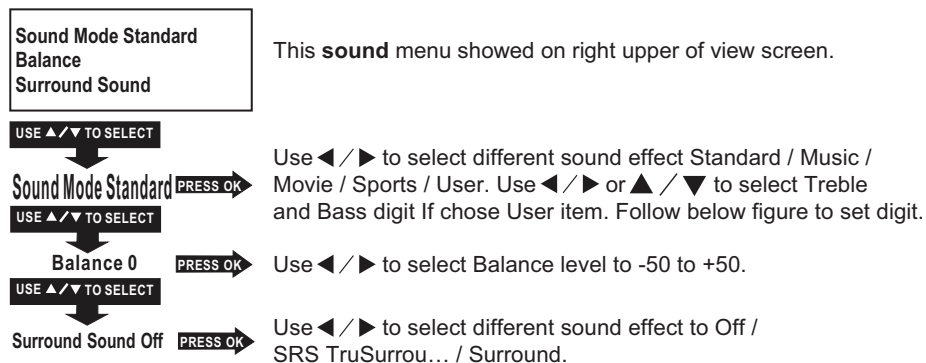

Sound Mode - User	Parameter
Treble	0-100
Bass	0-100





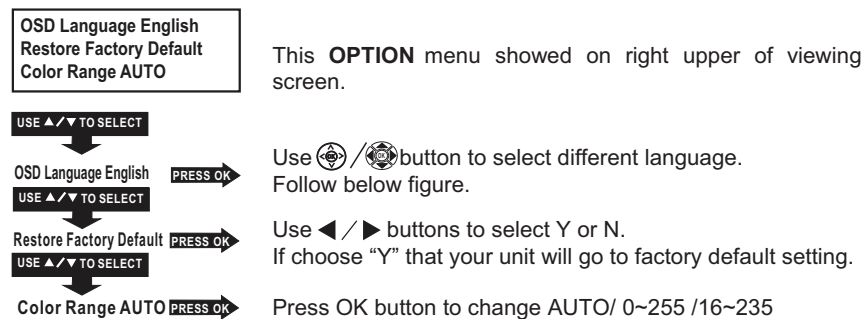 


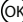
Using Projector Menu 4


Press **SETUP** button to enter projector menu, press ◀/▶ buttons to select **OPTION** menu.



Česky	English	France	Magyar	Polski	Românește	Suomi	Slovakia	
Dansk	Español	Hrvatski	Nederl...	Português	Sloven...	Svenska	ภาษาไทย	Българ...
Deutsch	Ελλην...	Italiano	Norsk	Русский	Srpski	日本語	Chinese	

 Projector Home Screen

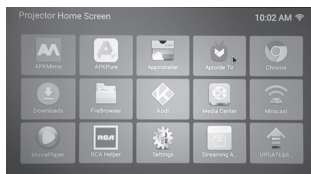


1. Press the  button to turn on unit.
2. Press the  / **SOURCE** button and use the  /  button to select **Streaming Apps**.
3. Press the  button to enter Projector Home Screen like the figure.
4. Use  /  button to select application icon and press  button for operation.



Note: The projector is loaded with the most updated system files and apps. From time to time, Android system may require update patch in order to run. If you choose to update, a Google account is required. If you do not want to update, please press the "Return" button on the remote.

Connect to Wi-Fi

Initial Wi-Fi Connection

In Projector Home Screen, use  /  button to select **Wi-Fi Network** icon and press  button to enter menu.

The unit will search and show all available networks on the screen.

(if no available networks show out, Press  button to turn on the Wi-Fi.)

1. Use  /  button to select Network and press  button to enter.

2. Enter password for your selected network

Use  /  button to select character, numbers, symbols and so on,



Press  button to confirm in the virtual keyboard.


3. Press  button to exit virtual keyboard enter state

 
4. Use  /  button to select "**CONNECT**" to connect Wi-Fi network.

NOTE: For easy operation or key in the password, you can connect an Android keyboard (not included) or a mouse (not included) in the USB ports in the rear of the unit.

The Menu Settings





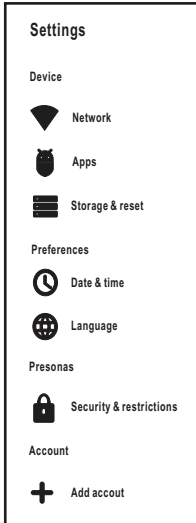




In Projector Home Screen, use / button to select

Settings icon and press  button to enter **Settings** menu.








This **Settings** menu showed on right upper of view screen.

In **Settings** menu, the following items provide you to setup for your favorite.

- Network – for setup wireless network
- Apps – will list out the Apps which is installed.
- Storage & reset – show internal shared storage status and Factory data reset.
- Date & time – with the following menu for setup.
 - Set time zone – Use / button to set the time zone, press  button to confirm.
 - Use 24 hour format – Press  button to set On or Off
- Languages – Use / button to set the language, press  button to confirm.
- Security & restrictions – with the following menu for setup
 - Unknown sources – Press  button to set On or Off
 - Verify apps - Press  button to set On or Off
- Add account – Let you add account for the Apps like Facebook, Google, Skype, Twitter, etc.

Install and Uninstall Apps

Before starting, please make sure the projector is connected to a Wi-Fi network.

- Install Apps
 1. In Projector Home Screen, start the app store by selecting one of the following app stores and search for the app you want to install:
 - Aptoid TV
 - APKMirror
 - APKPure
 - Streaming App Store
 2. Download an APK file of the app, save it to the projector's internal storage, and then install the app by selecting APPInstaller icon in Projector Home Screen.
You may also download an APK file of the app on a computer, save the file to a USB drive, plug the USB drive into the projector's USB port and use APPInstaller to select the file on the USB drive to install the app.
 3. After starting app installation, follow the on screen message to complete the installation. You may need to change the setting in Security > "Unknown" when prompted.
- Delete installed Apps
In Projector Home Screen, use  /  button to select Settings icon and press  button to enter Settings menu.
 1. Use  button to select Apps and press  button to enter.
 2. All application Apps will show which is installed on the unit.
 3. You can choose which programs to be disable or uninstall.





Video Streaming (playing online TV and movies)

To play any online video, please install a video streaming app such as Youtube or Crackle by starting the app store e.g. Aptoid TV, and enter the name of the app in "Search" section. Please note that not all apps listed in the app store operate in the projector after installation.



Important Note:

If there is no sound from the internal speakers when playing streaming media contents from APP like Youtube, Netflix, Vudu etc. Please check the audio settings and make sure it is set to "PCM Stereo" mode.

Browser Function

1. In Projector Home screen, select relative Browser icon (e.g. **Chrome**) to enter browser website.
2. Key in the website address or something what you want to search.
Use  /  button or  button to move the cursor in the virtual keyboard to select character, numbers, symbols and so on, press  button to confirm in the virtual keyboard.

NOTES:

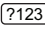- You can switch the numeric input keyboard, move the cursor to  Virtual key and press the  button, you can switch the digital and symbol enter state.
- For easy operation, you can connect an Android keyboard (not included) or mouse (not included) in USB port in the rear of the unit.
- Before use this function, the Wireless network (Wi-Fi) is need connected.

Multi-screen Interactive Connection for Phone and Projector

- **Miracast**

First, ensure the projector and the mobile is connected to the same wireless network. Select Miracast icon in Projector Home Screen and tap the mobile's settings, find the screen sharing or wireless display (different mobile models with different names).

You can find the name of the projector **Android_****** in the mobile screen sharing, click the link, then click the projector to accept this connection.

The mobile device will be transferred to full-screen projector (this feature is only supported by Android system 4.2 or above. IOS devices do not support Miracast).

Note: Please note that depending on the mobile device, Miracast may not operate as indicated due to copyright restrictions.

Specifications

Light Source Type	LED
Lumen (LED)	3100 (Color Brightness), 2000 (White Brightness)
Display Native Resolution	1280 x 800
HDMI Input Supported Video Resolution.	1080p , 1080i , 720p, 576i , 480p, and 480i
Included Adapter	Input AC100-240V,50/60Hz
	Output DC 36V, 2A
Display Color	16.7M
Projection Size (Optimal)	60-160 inch
Contrast	600:1
Aspect Ratio	16:9 / 4:3
Input Ports	AV / VGA / HDMI
USB Port	Support USB device up to 32GB Support Picture format: JPG, BMP, PNG Support Audio format: MP3, WMA Support Video format: MPEG1, MPEG2, MPEG4, RM, AVI
WiFi	2.4GHz 802.11b/g/n
Audio Power output	2W (RMS) x2
USB	DC5V 100mA
Net Weight	2.32 KG
Product dimensions	310 mm x 234 mm x 128mm

Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.