



MODEL NO.: LP-56U-BT

Classic Wooden Turntable with Dust Cover



Instruction Manual

PLEASE READ BEFORE USING THIS EQUIPMENT

Warnings and Precautions

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

AVERTISSEMENT: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.

CAUTION: Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

CAUTION : Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrecte. Remplacer les piles seulement par le même type de pile ou l'équivalent.

WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.

WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

WARNING: Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

WARNING : Shock hazard – Do Not Open.

AVIC: RISQUE DE CHOC ÉLECTRIQUE – NE PAS OUVRIR

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur est utilisée pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.



WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

NOTE: This equipment has been tested and found to comply or has been dropped with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help .

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

 
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

- Caution marking is located at the rear or back of the apparatus. *Attention marquage est situé à l'arrière ou à l'arrière de l'appareil.*


- The marking information is located at the rear or back of apparatus. *Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.*

TURNTABLE PANEL

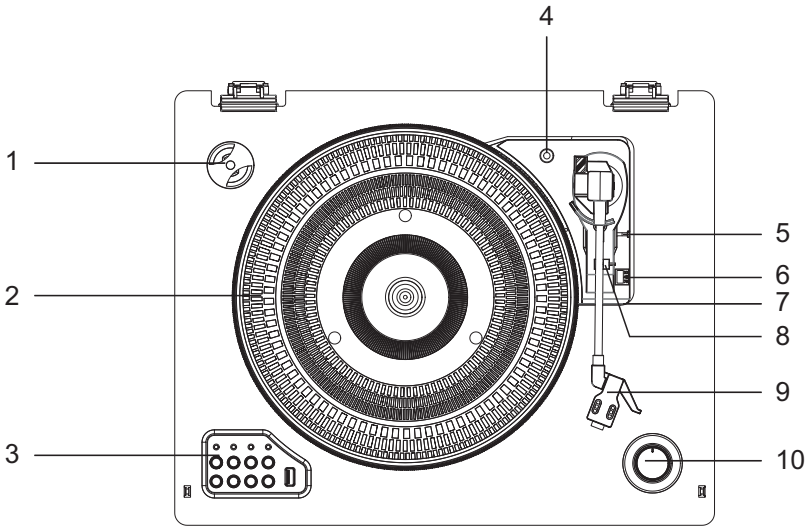


1. 45 RPM ADAPTER
2. TURNTABLE
3. CONTROL PANEL
4. TRANSIT SCREW CROSSING
5. LIFT LEVER
6. SPEED SELECTOR (33/45/78 RPM)
7. AUTO STOP CONTROL SWITCH
8. TONE ARM LOCK
9. TONE ARM WITH STYLUS
10. VOLUME DIAL

 TURNTABLE PANEL

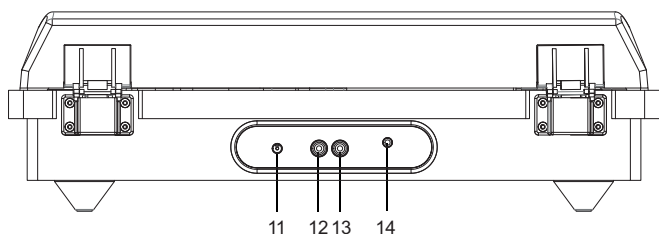

- 11. AUX IN
- 12. LINE OUT R
- 13. LINE OUT L
- 14. DC 9V/2000 mA

 FRONT LEFT PANEL

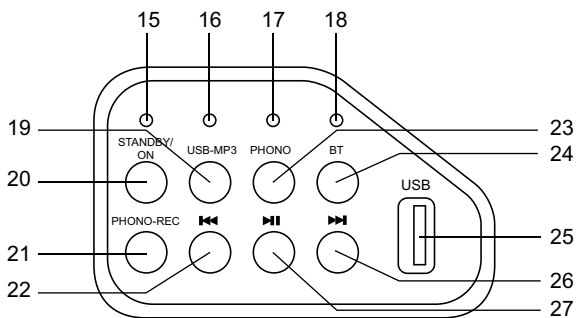

- 15. STANDBY/ON INDICATOR
- 16. USB PLAYER INDICATOR
- 17. PHONO PLAYER/REC INDICATOR
- 18. BT INDICATOR
- 19. USB-MP3 PLAYER BUTTON
- 20. STANDBY/ON BUTTON
- 21. PHONO-REC BUTTON
- 22. ◀◀ BUTTON
- 23. PHONO PLAYER BUTTON
- 24. BT BUTTON
- 25. USB SOCKET
- 26. ▶▶ BUTTON
- 27. ▶|| BUTTON

BOX CONTENTS

Make sure the items listed below are included in the box:

- Main Turntable Unit
- Power Adapter
- Instruction Manual

UNPACKING AND SETUP

- 1 Carefully remove the turntable from the display package and remove all packing material.
2. Unwind the AC adapter power cord and extend it to its full length.
3. Place the turntable on a stable, level surface in proximity to an AC outlet and away from any strong magnetic fields.
- 4 Plug the power cord into your AC outlet.
5. Remove the opaque white plastic stylus cover from the phonograph stylus by sliding it in the direction of the arrow.
6. Be cautious and gentle when removing this stylus cover, as damage to the stylus is not covered by warranty.
7. Remove the twist-tie securing the tone arm during the shipment.
8. Release the tone arm lever lock.

POWERING ON THE UNIT

- 1 Connect the AC Adapter to the AC POWER Socket on the back of the turntable.
2. Press the STANDBY/ON button, the STANDBY/ON indicator will turn off and PHONO mode will power on.
3. When you have finished using the turntable, press the STANDBY/ON button again and the voice message "POWER OFF" will confirm the turntable is off.

NOTE

The turntable will automatically turn off without further instruction or signal for 15 minutes.

PLAYING RECORDS

This turntable is full-sized, belt-driven, and plays 33, 45 and 78 RPM records.

- 1 To turn the turntable on, press the STANDBY/ON button to set the volume to a low level.
- 2 Press the PHONO button to turn on phono mode. Please be sure that you have removed the stylus cover from the stylus and have released the Tone arm lock.
- 3 Set the turntable speed switch to the appropriate speed of 33, 45 and 78 RPM. Set the record on the turntable. If you are playing 45 RPM singles, place the 45 RPM adapter on the center spindle.
- 4 Slide the AUTO STOP CONTROL switch to choose the auto stop function.
- 5 When finish playing the song, put the LIFT LEVER gently backward to yourself, the tone arm gently lifter onto the record. The song will stop playing.
- 6 At the end of the record, the TONE ARM will stop automatically. Put the LIFT LEVER gently backward to yourself, the TONE ARM gently lifter onto the record.
- 7 Adjust the VOLUME control to set the volume as desired.
- 8 Press the STANDBY/ON button to turn off the system when you are done.
- 9 Please keep the dust cover open when playing a record.

PHONOGRAPH RECORDING OPERATION

- 1 Place a phono record on the turntable.
- 2 Plug a USB disk into the USB socket. Press the PHONO-REC button, the blue LED indicator light will flash, meaning the recording has started.
- 3 Press the PHONO-REC button again when you are finished recording.
- 4 Press the USB-MP3 button with the blue light and you will hear the recorded music from the USB.

NOTE

- 1 PHONO-REC is only for phonograph recording.
- 2 PHONO-REC is for recording music from the phono record to a USB disk device (-FAT32 format only).

USB OPERATION

- 1 Press the USB-MP3 button to turn on USB mode. The blue indicator light will turn on.
- 2 Insert the USB device into the USB input on the turntable and the music tracks on the USB device will start playing.
- 3 Press the ◀◀ or ▶▶ buttons to choose your desired track.
- 4 Press the ▶|| button to pause or play the track.
- 5 Press the STANDBY/ON button to turn off the turntable when you are done.

NOTE

- 1 USE-MP3 playing mode has a memory function. When reinserting the same USB device, the last played track will be resumed.
- 2 This turntable is equipped with USB socket that can play MP3/WMA files stored on standard USB flash drives (compatible with USB version 2.0).
- 3 USB flash drives with more than 32GB memory may not be compatible.
- 4 Although this product is fully compatible with USB 2.0 standard format, a small percentage of USB flash drives might not be readable due to those device manufacturer's non-compliance with full (official) USB standards.

REMOVING THE USB DRIVE

Please be sure to stop playback and turn the unit off before removing the USB drive to avoid damage to the USB and the turntable.

BLUETOOTH OPERATION

- 1 Press the BT button on the front left panel to activate the BLUETOOTH function and the blue LED light will be flashing.
- 2 Set up the Bluetooth playback device so it searches for other Bluetooth devices.
- 3 Select the entry 'Geekoala LP-56U-BT' from the list of found devices on your Bluetooth playback device. If pairing is successful, the LED light will stop flashing and stay on Blue.
- 4 Play your music through the connected device and enjoy.

NOTE

- 1 The next time you turn on the device it will automatically connect to the last Bluetooth playback device connected. If your Bluetooth playback does not automatically reconnect to the device, you will need to manually re-establish the connection to your Bluetooth device.
- 2 If you use a smartphone as your Bluetooth playback device, the audio file will be muted when there is an incoming call. Acceptance/termination of the call is carried out via the smartphone. After finishing the call, music playback will resume automatically.

LINE OUT OPERATION

 
1. A set of Line Out jacks is included to allow audio from BT, USB-MP3 and PHONOGRAPH of this turntable to play on an external device.
2. Insert the audio cable (not included) into the turntable's Line Out socket.
3. Operate the turntable as usual.
4. In order to achieve the best sound, it is advised to set the turntable volume to a minimal level.
5. The turntable's audio will then be played back through the external device.

REPLACING THE STYLUS

It's suggested to replace the stylus after 400 hours of use.

Please follow the steps below to change the stylus:

1. Lift the tone arm off the tone arm lock.
2. At the front end of the tone arm, place the tip of your fingernail between the red stylus holder and the black cartridge housing as shown. Press down down on the red stylus holder until it separates from the cartridge housing.
3. Completely remove the red stylus holder with worn stylus and discard it.
4. Place the new red stylus holder with stylus under the cartridge housing. First press upward on the back side of the stylus holder, and then press up on the front edge of the stylus holder until it snaps into place on the cartridge housing.

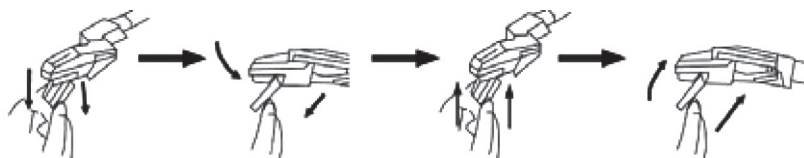

AUX-IN OPERATION

1. This turntable includes an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players, and older, non-dockable iPods so you can listen to your external source through the turntable's speakers.
2. Use an audio cable (not included) with one 3.5mm stereo connection on each end of the cable.
3. Plug one end into the AUX-IN jack on the turntable and the other end to the Line Out jack of the audio device.
4. Power on the turntable and audio device.
5. The volume level can be controlled through the turntable. Operate all the functions on the auxiliary device as usual.
6. Please note that AUX-IN function is a first-priority function. Even if the indicator light for USB-MP3/PHONO/BT is on, these functions won't work while the AUX-IN function is in use. Please unplug the AUX-IN cable before using the USB-MP3/PHONO/BT functions.
7. Remove the twist-tie securing the tone arm during the shipment.
8. Release the tone arm level lock.

NOTE

1. If the Line Out jack of your external device is connected, you only need to adjust the volume control of this system.
2. Make sure the tone arm is securely locked to avoid any damage.
3. Press STANDBY/ON button to turn off the turntable when you are done. Don't forget to turn off the power on your external device as well.

IMPORTANT! TRANSPORTING THE SYSTEM

1. To protect the turntable from damage during transportation, a silver transit screw is located on the upper right of the turntable platform.
2. Before playing, please use a screwdriver to turn the transit screw in a clockwise direction (screw going down) completely to unlock the turntable.
3. To lock the turntable again for transportation, please turn screw in a counter-clockwise direction.



 
CARE OF THE WOOD PANEL AND DUST COVER

1. Care of the turntable is the same as any piece of furniture.
2. When the dust cover is dusty, you may wipe it using a soft, non-abrasive dust cloth.
3. If the wood panel becomes smudged with fingerprints, you may use any good quality commercial dusting and polishing spray cleaner.
4. We recommend spraying the cleaner on a cloth, not directly on the wooden panel.

CARE THE MAINTENANCE

TO REPLACE THE CARTRIDGE FROM THE TONE ARM PLEASE FOLLOW THE PROCEDURE BELOW.

1. Gently lift off the tone arm from the tone arm lock.
2. Use your left hand to hold the tone arm and your right hand to hold the rear portion of the cartridge. Then push the cartridge backwards and downwards according to the direction as shown to separate the cartridge from the tone arm.
3. Using either a tweezer or your fingers, carefully unplug the terminals to the new cartridge.
4. Carefully connect the terminals to the new cartridge (not included).
5. To re-install the new cartridge to the tone arm, first lock the front end of the new cartridge on the hook of the tone arm.
6. Press the rear side of the new cartridge upwards to lock it on the tone arm.

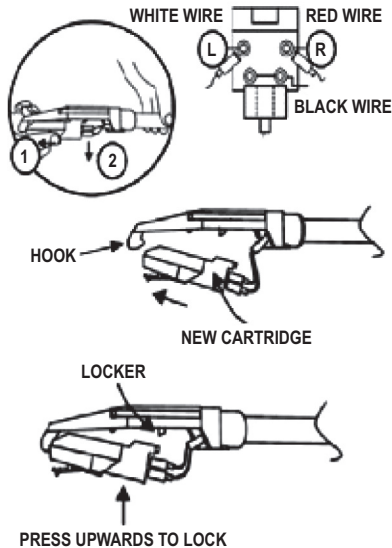

CATUION:

Please do not damage the stylus when installing the new cartridge.

SPECIFICATIONS

Bluetooth specification	Version 2.1 + EDR
Operating voltage	DC 9V / 2000 mA
Output power	2 x 4W RMS
Supported storage	USB
Dimensions (L*W*H)	434 x 360 x 135.5 mm
Unit weight	4.38 kg

Specifications and functions connected to the continual improvement of the device are subject to change without notice.