


## INSTRUCTIONS TO PROGRAM A REMOTE:

Product: Remote Control  
Model: GDR-38  
Power: DC 3V (Lithium Cell CR2032)  
Hardware Version: V0  
Software Version: V0  
Frequency List: 315MHz  
Antenna Type:PCB Antenna  
Maximum Antenna Gain:0dBi

1. Press and release the learn button on the back of the motor unit. The light will illuminate for 30 seconds. This indicates the unit is in programming mode.

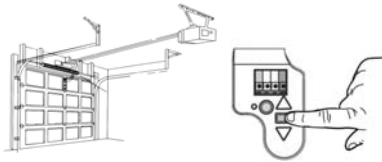

2. Within 15 seconds press the button you wish to program on the remote control.
3. You will hear an audible click and/or the light on the motor unit will turn off indicating the remote successful programming.

\*Repeat steps 1-3 for any additional remotes you wish to program. Wait 60 seconds before programming another remote control.

### **FCC Statement:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.