


WYZE CAM™

QUICK START GUIDE

IN THE BOX

Wyze Cam	x1	Quick Start Guide	x1
USB Cable	x1	Wall Plate	x1
Power Adapter	x1	Mounting Tape	x1

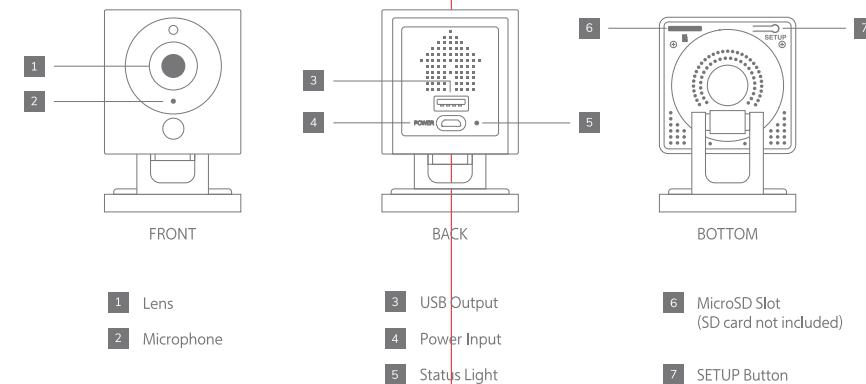

f | i | y | t
@wyzecam

 
PANTONE Cool Gray 9C

SETUP


- 1 Download the Wyze app and create an account



- 2 Connect the camera to a power outlet and wait for 20 seconds until the yellow status light flashes



 - 3 Press the SETUP button for 3 seconds until you hear a voice prompt



- 4 Follow the Wyze app to finish setup



LIGHT INDICATIONS

Solid yellow light

The device is powered on and initializing

Flashing yellow light

The device is ready to connect

Flashing yellow & blue lights

Connection is in progress

Flashing blue light

The device is connected and finishing setup

Solid blue light

The device is working properly

NEED HELP?

Tutorial Videos

www.youtube.com/wyzelabs

Troubleshooting & FAQs

www.wyze.com/support

Community

www.wyze.com/forums

Contact Us

support@wyzecam.com

1-844-WYZECAM

FCC Warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet appareil est conforme aux limites d'exposition de rayonnement RF ISED-C établies pour un environnement non contrôlé.
Cet appareil ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur.
Industrial cellular router doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur & votre corps.

Utilisez uniquement le chargeur fourni
Only use the power supply provided

ISED-C RSS warning

This device complies with ISED-C licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED-C Radiation Exposure Statement:

This equipment complies with ISED-C RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.