User Manual Wireless Display HDMI Extender

IPW608/IPW607

Transmitter



Receiver



1. Hardware Features Overview

Transmitter





- 1 PAIR
- ② IR OUT
- 3 HDMI IN
- 4 DC 5V
- (5) Wireless and Power status Indicator
- 6 Security Lock Slot

Receiver



Rear View

- 1 PAIR
- 2 IR IN
- 3 HDMI OUTPUT
- 4 DC 5V
- (5) Wireless and Power status Indicator
- 6 Security Lock Slot



Hardware Installation—Transmitter IPW608-TX

Step 1. Plug in the power adapter and ensure the power led lights are on.


Step 2. (Optional): IR remote control setting

Connect the IR blaster cable into the IR out port.

Step 3. (Optional) Place the IR sensor on the source device, and mount the IR blaster head beside the device

Step4. Directly connect the HDMITM cable from the Transmitter HDMITM in connector to your HDMITM video source device.



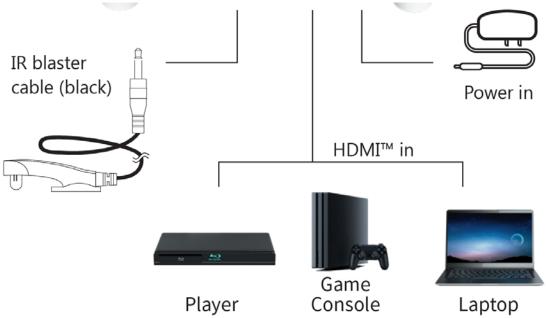

2. Hardware Installation—Receiver

IPW608-RX

Step 1. Plug in the power adapter and ensure the power led lights are on.


Step 2. (Optional): IR remote control setting

Connect the IR extension cable (green connector) into the IR out port.

Step 3. (Optional) Place and mount the IR sensor in front of the device.


Step 4. Directly connect the HDMITM cable from the Receiver HDMITM out connector to your HDMITM monitor.



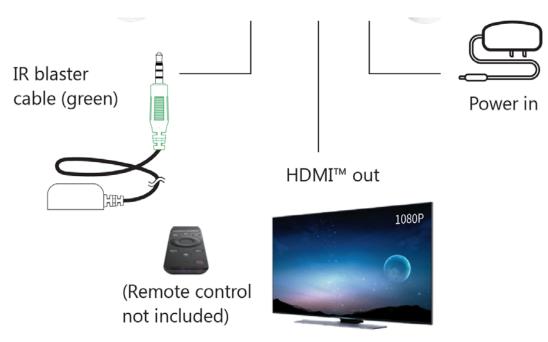


3. Receiver on-screen display (OSD) status

Startup screen: OSD show connecting.

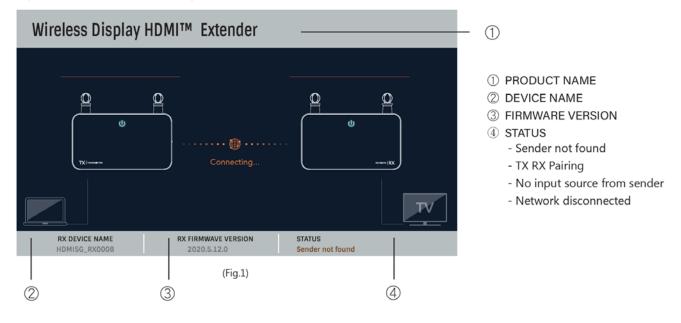


If connecting devices via HDMI™ port fails:

Please check your HDMI[™] cable or signal from your source device.

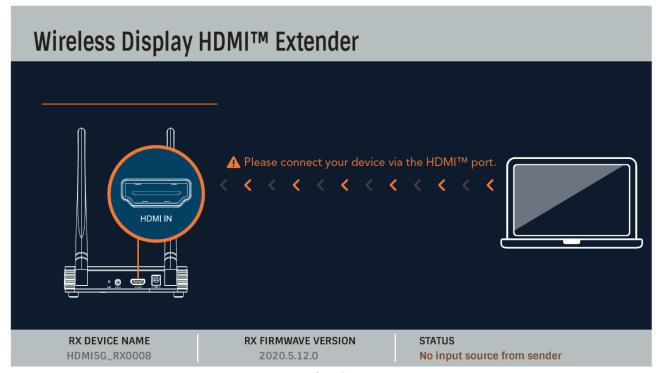

Network disconnected.

You can reduce the distance between the TX and RX. If you still have trouble, please contact j5create Customer Service.

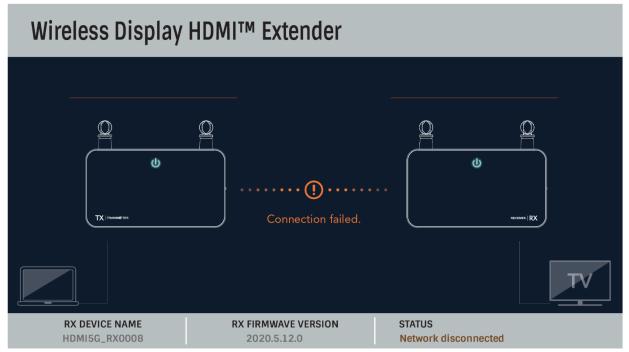

(Fig.3)

. The User Manual

Contains detailed instructions and a troubleshooting section, many common issues can be easily resolved by reading the user manual.

■ Telephone Support

We stand behind our products and it is our goal to provide you with world class support.

• Regulatory Compliance : FCC / CE / BSMI / NCC

• Reglas de Conformidad : FCC / CE / BSMI / NCC

• Regulatorische Erfüllung : FCC / CE / BSMI / NCC

• Conformité réglementaire : FCC / CE / BSMI / NCC

■ Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2ANKPIPW608TX

FCC ID: 2ANKPIPW608RX

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

You are cautioned that any changes or modifications to this product not explicitly approved by the manufacturer in writing could void the user's authority to operate the equipment and any assurances of Safety or Performance, and could result in violation of Part 15 of the FCC Rules.

■ FCC Radiation Exposure Statement

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with a minimun distance of 20 cm between the radiator and your body.

■ FCC-Erklärung zur Strahlenbelastung

- Dieses Gerät entspricht den FCC-Grenzwerten für Strahlung unkontrollierte Umgebung.
- Dieses Gerät sollte so installiert und betrieben werden, dass es eine Mindestentfernung von 20 cm zwischen dem Kühler und Ihrem Körper.