

# LE•MEGA

## LIFE & ALOUD

DTS4 MUSIC BOX



Owner's manual

## Important Safety Instructions

 
1. Read these instructions
2. Keep these instructions
3. Heed all warnings
4. Follow all instructions
5. WARNING – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture
6. Clean only with a dry cloth
7. Only use attachments/accessories specified by the manufacturer
8. Unplug this apparatus during lightning storms or when unused for long periods of time
9. Keep this product a safe distance away from naked flame, such as a lit candle
10. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus
11. Put the remote controller in the fuselage when it is not in use
12. Don't press more than one key at the same time
13. In the event that the unit malfunctions, unplug it for 3 seconds, then plug in again

## Packed with your DTS4 you should


- 1 Power cord
- 1 Remote Control (Battery installed)
- 1 Owner's manual
- 1 Warranty Card

## Guide To Features(Top, wireless charging on the top)

Put your phone that supports wireless charging in the wireless charging area until the mobile phone is prompted to charge.

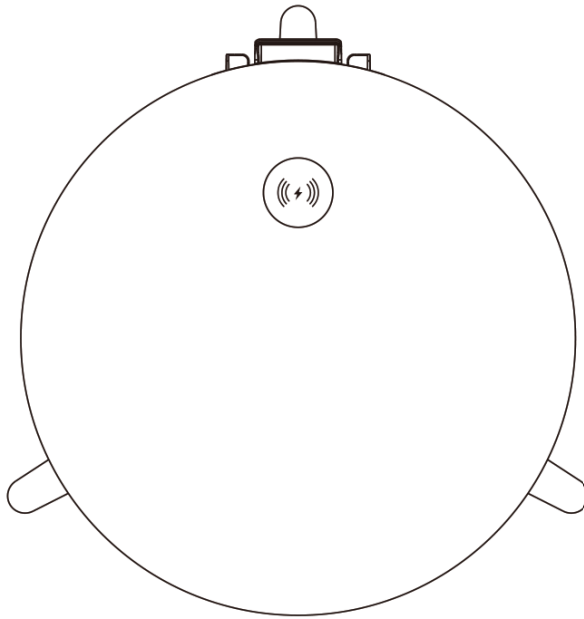


## Front display

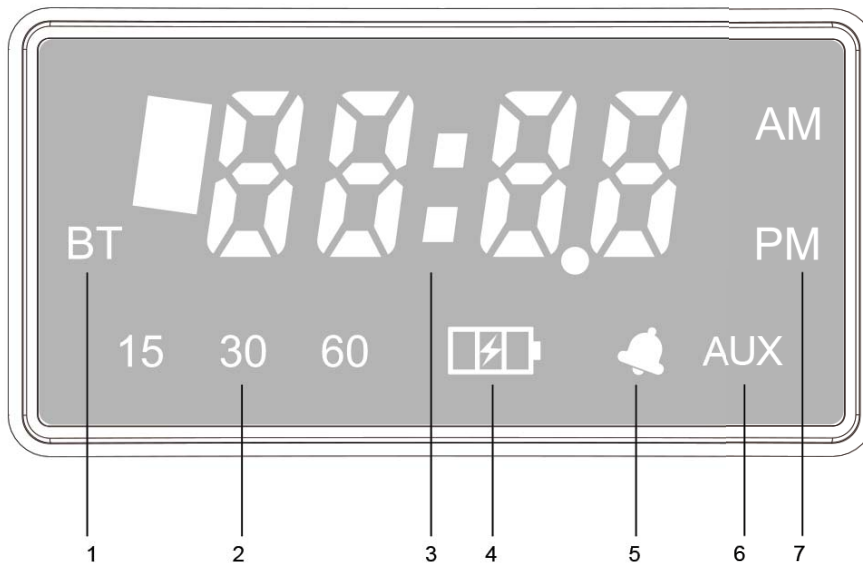 

1. Different models switch between Bluetooth, FM and Aux in FM mode
2. Time interval 15mins/30mins/60mins/Sleep Off in turn
3. Time display
4. Battery charging status display;
5. Alarm setting
6. AUX IN mode
7. Switch between AM and PM

## Back overview

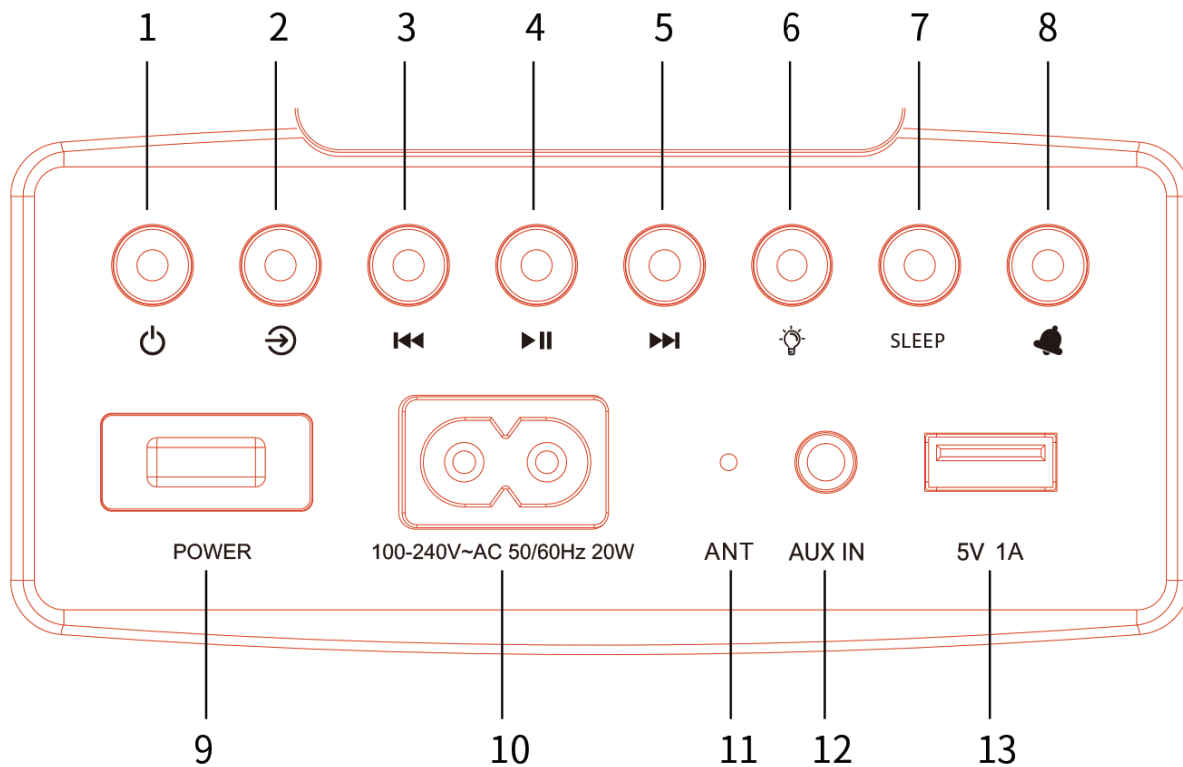 


1. : Briefly press to power on and Standby, Press and hold to Power off;
2. : Briefly press to switch between BT/FM/AUX IN mode;
3. : In Bluetooth mode, briefly press to previous track, press and hold to volume down; In FM mode, briefly press to backward forward 0.1MHz frequency;
4. : In Bluetooth mode, briefly press to Play and Pause; In FM mode, press and hold to auto-scan the stations, briefly press to switch the preset stations;
5. : In Bluetooth mode, briefly press to next track, press and hold to volume up; In FM mode, briefly press to forward 0.1MHz frequency;
6. Light: Briefly press this button to power on/off the light ;
7. Sleep: Press to set the time interval 15mins/30mins/60mins/Sleep Off in turn;
8. Alarm: Briefly press to activate or deactivate the alarm function, Press and hold to start alarm setting;  
When the hours flash, use the previous/next track button to set the hours, press Alarm to confirm and continue;  
When the minutes flash, use the previous/next track button to set the minutes,


press Alarm to confirm and continue;

When alarm is ringing, press any button on the device or the remote to go to Snooze, after 5 minutes, alarm will ring again, and then press the Sleep/Alarm to close the alarm;

9. Power switch: Press to switch power on/off;
10. Power input(100-240V);
11. ANT: Wire antenna;
12. AUX IN: To connect external MP3 music source;
13. 5V/1A: 5V/1A for mobile charging.


## Battery switch ( battery switch is on the bottom)

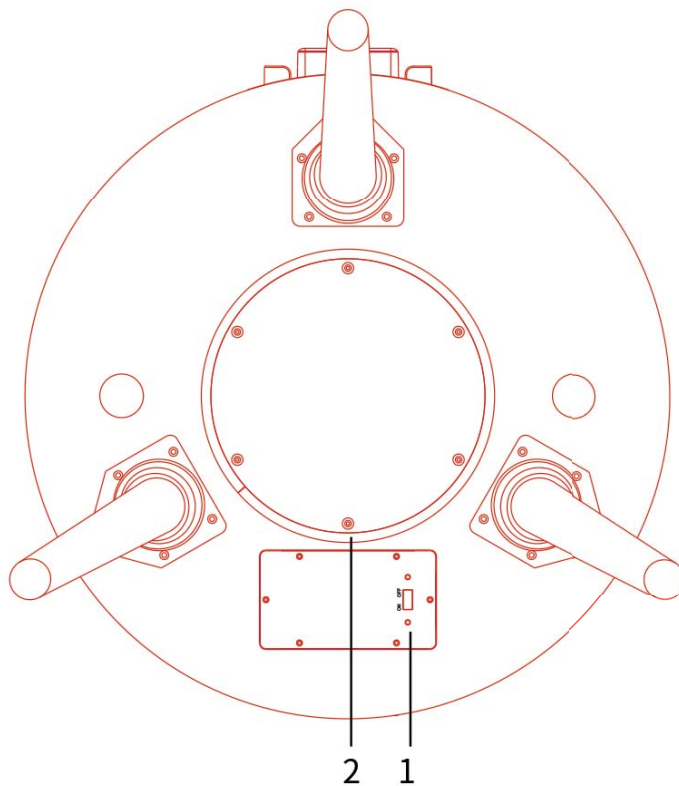 



 
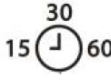




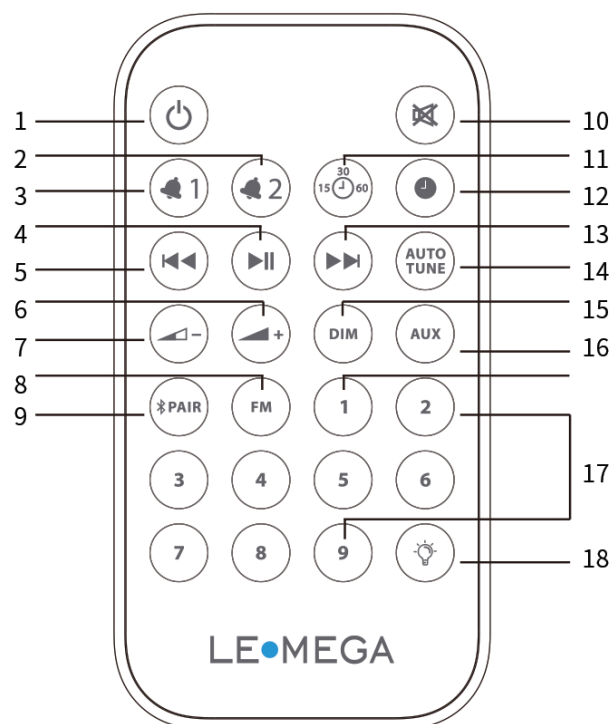


1. Briefly slide to switch the battery on or off;  
Slide the button to the on position is switching on;  
Slide the button to the off position is switching off;  
Note: when you start to use this device, please switch the battery on. When you don't need to use this device for long time, please switch the battery off.
2. Light strip  
Briefly press  button on the remote or backpanel to power on or power off the light strip.

## Remote Control (Remove clear tab over battery before use):





Put your remote control to the remote control holder to avoid missing.



-  **Standby:** Briefly press to power on and Standby, Press and hold to Power off;
- ALARM 2:** Briefly press to activate or deactivate the alarm function, Press and hold to start alarm setting;  
When the hours flash, use the previous/next track button to set the hours, press Alarm to confirm and continue;  
When the minutes flash, use the previous/next track button to set the minutes, press Alarm to confirm and continue;  
When alarm is ringing, press any button on the device or the remote to go to Snooze, after 5 minutes, alarm will ring again, and then press the Sleep/Alarm to close the alarm;
- ALARM 1 :** Same operation as Alarm2;
-  In Bluetooth mode, briefly press to Play and Pause;
-  : In Bluetooth mode, briefly press to previous track;  
In FM mode, briefly press to backward 0.1MHz frequency, Press and hold to scan stations;
- VOL+:** Briefly press Vol+ button to increase the volume;
- VOL- :** Briefly press Vol- button to decrease the volume;
- FM:** In other modes, briefly press to access FM mode directly;


9. **BT/PAIR** : In other modes, briefly press the BT button to access Bluetooth mode directly. In Bluetooth mode, Press this button to disconnect BT connection;
10. **MUTE**: Press once to mute the sound when playing. Press again to un-mute the sound;
11. **SLEEP**: Press  to set the time interval 15mins/30mins/60mins/Sleep Off in turn before the unit is set to Standby mode;
12. **CLOCK**  : Press and hold to start the time setting;  
 When the hours flash, use  /  to set the hours, press CLOCK to confirm and continue;  
 When the minutes flash, use  /  to set the minutes, press CLOCK to confirm and continue;  
 Note: If the time stops flashing while setting, repeat the above steps
13.  : In Bluetooth mode, briefly press to next track;  
 In FM mode, briefly press to forward 0.1MHz frequency, Press and hold to scan stations;
14. **AUTO TUNE**: Press Auto Tune button to auto-scan the stations under the FM mode and save the strong signal stations automatically. Play the first saved station after finishing full scan;
15. **DIM**: Press Dim to adjust the brightness from High/Mid/Low in turns;
16. **AUX**: In other mode, Press AUX to enter AUX mode directly;
17. **1-9** : In FM mode, Long press number 1 to number 10 to save the favorite stations;  
 Short Press number 1 to number 9 to select the favorite station or Preset recall;
18.  Briefly press this button to power on/off the light.

## FM RADIO

1. Press  button on the unit or press "FM" button on the remote to enter to FM mode;
2. Briefly press  /  to move backward /forward each 0.1MHz frequency to search stations. Or press AUTO TUNE button on remote control to auto-scan the active stations and save the strong signal stations automatically;
3. Press  : press the PLAY button to switch the saved stations from low frequency to high frequency.


Noted: To get a good radio signal, fully unwind antenna and move it around until you get good reception.

## BLUETOOTH

1. Turn on device, Press  button on the unit or press “BT/PAIR” button on the remote to enter to Bluetooth mode;
2. Select Bluetooth device name “LEMEGA DTS4” when it appears on your device's screen to initiate searching;
3. You can start to play your music files wirelessly. Adjust the volume level on your device;
4. Press Bluetooth button on the remote control to disconnect Bluetooth.

## AUX IN

Aux in mode plays audio from an external source such as MP3 player;

1. Turn on device, Press  button on the unit or press “AUX” button on the remote to enter to AUX mode;
2. Connect the external audio source to the Aux in socket;
3. Adjust the volume level of the device (and, if necessary, the audio source device) as required.

## SPECIFICATIONS

**Model:** DTS4

**Type:** MUSIC BOX

**Drivers:** 4 x 3" full range drivers

**Power output:** RMS 30W

**Wireless charging output:** 10W

**Power Supply:** 100-240V

**Lithium battery:** 4400mAh/11.1V

**Dimensions:** L 410 X W 400 X H 630 MM

**Weight:** 7.85kg

Specifications are subject to change without notice



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body.

LE•MEGA  
LIFE & ALOUD

---

DTS4 MUSIC BOX

If you have any questions or suggestions,  
please share with us.

[info@lemegaaudio.com](mailto:info@lemegaaudio.com)  
[www.lemegaaudio.com](http://www.lemegaaudio.com)



MADE IN CHINA