

REPLACING BATTERY IN THE WIRELESS CONTROLLER

1. To install or replace the CR123A battery in the wireless controller, remove the battery cover from the back of the wireless controller.
2. Remove the battery by sliding the battery toward the spring with one hand and lifting the battery out with the other hand.
3. Insert the battery with the negative side toward the spring in the wireless controller. Take note of the “-” and “+” symbols on the circuit board.
4. Replace the battery cover. There will be an audible click when the cover is fully seated.



FCC AND INDUSTRY CANADA INFORMATION TO USER

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Remote

FCC ID: 2ANLC-EBK83016

IC: 23130-EBK83016

Manifold

FCC ID: 2ANLC-HMK122713

IC: 23130-HMK122713