

# User Manual

MOVISUN

FCC ID:2ANLVDOKKI

Model Name:DOKKI

## 1.appearance :



## **1.1 Touch panel**

7" Capacitive touch panel: In The Operation, to click, drag on the touch panel.

## **1.2 POWER**

Start up: Long Press and hold the power button, the system will enter the main interface.

shut down: In the main menu interface, Press the power button about 5 seconds to shut down. The system will hint "power off" option, Click "ok". You can safely shut it down.

Lock screen: Short press power button to lock screen or unlock screen.

### **【Remark】**

- a. When power is used, system will shut down automatically.
- b. Illegally turn off the device, restart will scan and restore the disk. It may take longer time to enter into system or cause system crash.

## **1.3 DC port**

Charging through DC charger.

#### **1.4 Micro USB**

Micro USB jack: Charging through USB charger or you can use it to connect the computer for data transmission and external connection USB flash drive through OTG cable.

#### **1.5 MIC**

Record microphone.

#### **1.6 earphone jack**

3.5 mm standard earphone jack.

#### **1.7 Volume +, Volume-**

The buttons Volume +, Volume- achieve changes in the volume.

#### **1.8 TF card**

TF-CARD slot: external T-FLASH card

#### **1.9 Camera**

There are front camera and rear camera to take photos.

### **2. First use**

#### **2.1 Battery management and charge**

Before first use, please make sure the device is fully charged. If not, just need to connect the USB adaptor or connect to Computer by USB cable, then you can charge.

The first two times please keep charging about 6 hours, after that you just need to charge 4 hours.

**【Remark】** : This tablet using Built-in polymer battery, Charge must choose.

standard adaptor (Input: AC110~240V 50/60Hz Max:180MA.. Output: DC5.0~5.5V/1.5-2A)

During the charging, the battery icon will scroll or have flashing indicate in battery icon.

When finish charging, battery icon will become green and stop rolling.

In order to prolong the service life of the machine, you are advised to use up the battery power to about 15% before charging it.

**【Remarks】** :

a. If you don't to use this Tablet for long time, in order to avoid no power damage, please charge/play the device once a month.

b. After shut down for low battery, connect USB adaptor, device will remind low battery, need to wait some time until the battery is enough power to enter into main menu.

c. Device charging should be in standby status for normal charging time.

Because with device and screen power consumption, it may cause longer charging time.

## **2.2 Connection with PC**

 
Use USB cable to connect device to PC. The unit is a “generic USB Device” and does not need any extra software drivers to connect to your PC. After your PC has recognized the unit, you will see a message on the bottom of your PC screen informing you. (If your PC warns: Drivers not installed, ignore this)

To complete the connection, you need to reveal the Notifications Screen on the unit. You will see the notification menu similar to this:



Select **USB connected**.

You will then see this screen:

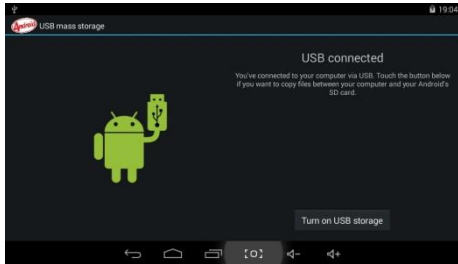

Select **Turn on USB storage**.

In the load mode, you can copy, delete the file on the device and the file on the memory card.

### 3. Equipment operation interface


#### 3.1 Main interface

After start-up, it will enter the home screen.



anywhere in the interface.

 
In home screen, you can manage the software ICONS: long press the ICONS 3 seconds, after the icons will be bigger, then you can drag

Delete ICONS: long press the ICON for 3 seconds, drag the icons to the mark “X”, after that you can delete icon.  
In the home screen, when you press “”, it will go to main interface.



In the main interface, you can touch the icon to open the APPs

### 3.2 status bar




The status bar above of the screen

Top right corner display : battery charge icons, current time.

Bottom display: ESC button, Menu, Recent applications, Screenshot, Volume -, Volume +.

## 4. Equipment basic setting

 Setting: Click setting icons  , enter setting interface

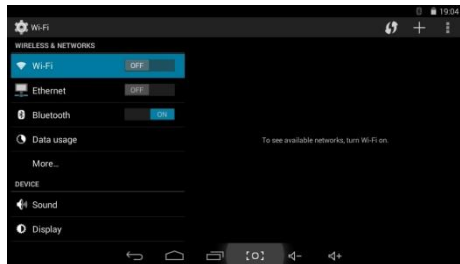

### 4.1 Wi-Fi

Drag “OFF” to “On”, it will show the available Wi-Fi signal.Choose yours, then connect it by entering password.

You can browse website then.

#### **4.2 3G setting**

There are various ways to use your tablet while outside of a WIFI hotspot.

Using a 3G USB Dongle:

- The Software drivers for 3G dongles are supplied by Google for the Android operating system, which is installed in your unit.

The compatible 3G dongles currently are outlined here:

3G WCDMA: HUAWEI: E160E / E1750 / E230 / E1782 / E182G / E176G / UMG1691, ZTE: MF637U / MF633 / MF633BP-1

3G CDMA2000/EVDO: HUAWEI : E150 / EC1261 / EC122 / EC156 / EC1270  
ZTE: AC580 / AC2736 / AC2746

Before you purchase a 3G dongle, please double check with the Telco store that it is compatible with one of the above models and that they have NOT ALTERED THE INTERNAL FIRMWARE OF THE DONGLE.

Then, follow the instructions below on how to install it:

Connect 3G dongle to device by OTG cable, wait about 3-10 seconds. Then 3G dongle will be recognized by the device. 3G network will be connected automatically.

#### **Using your Smart Phone instead of a 3G Dongle**

Another choice you have is to set up your Smart Phone as a portable WIFI router. This works in the same way as 3G dongles, however, you do not need to connect it to the USB port of the tablet. This way, there are no software drivers compatibility issues.

Essentially, this method is like having a portable WIFI router in your pocket (your smart phone) and



works like this: “3G in—Wi-Fi out”. Just setup your Smart Phone to be a WIFI Hot Spot and then “tune” the tablet to it using the normal Wi-Fi feature.

Please consult your Smart Phone manual, however, here is a snapshot of how its done:

IPHONE

SETTINGS

PERSONAL HOTSPOT—TURN IT ON

NOTE THE PASSWORD SHOWN ON THE PHONE

ANDROID SMART PHONE (HTC / SAMSUNG ETC)

SETTINGS

 
WIRELESS and NETWORKS

MOBILE ACCESS POINT SETTINGS

ACTIVATE

**4.3 Sound:** Volume, Default notification sound, Touch sounds, Screen lock sound.

**4.4 Display:** Brightness, wallpaper, auto-rotate screen, sleep, Daydream, font size, Cast screen , Sensors ,HDMI , output screen resize.

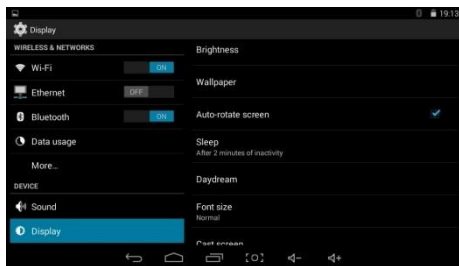

## 4.5 Storage

Remove TF card, view the available storage space.

【Remark】 : please touch option "Unmount Removable SD card", so that you can remove SD card safely.

## 4.6 Application Management

### How to Install Android Applications:

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on the unit by using the **File Manager** application.

a. Copy the **.apk** files that you want to install onto a SD card or USB device, then insert or connect it to your Device.

Tap the **File Manager** application icon  to reveal this screen:

b. Tap or and locate the folder in which the **.apk** application files were saved.



c. Tap on an **.apk** file to start to install. Tap NEXT to continue the installation, and then see the confirmation of install.

Tap **Open** to launch the application now, or tap **Done** to return to **File Manager**.

 
## Manage and uninstall Application




【Remark】：

Uninstall

1. enter “setting”>”Apps”>”ALL” And there will be all the program list
2. Click the application you want to uninstall, will enter the following interface
3. Tap the application.

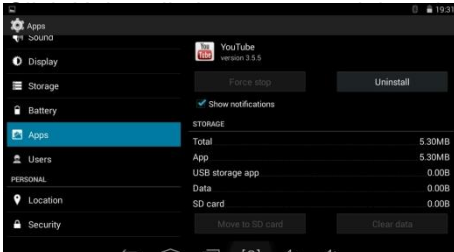


## 4.7 Language & input

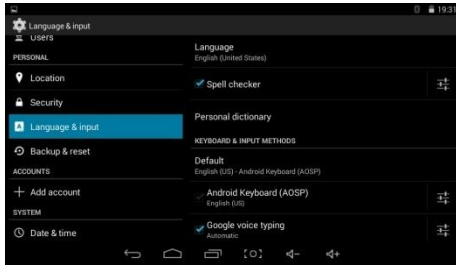 

Select Language: multi languages are available  
Android keyboard: Android keyboard setting.


## 4.8 Backup & reset

 Backup & RESTORE: Back up my data, Backup account, Automatic restore, Factory data reset.  
Personal Data: Erases all data on tablet.

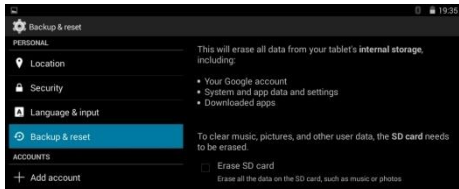

## 4.9 Date & time

 Select time zone and select date format, time format.

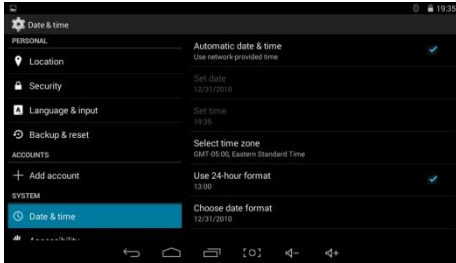

## 5.0

### **Bluetooth:**

Bluetooth function operation

1. Click setting application in main menu interface
2. Click bluetooth and open it.
3. If somebody open bluetooth in your surrounding. click search device in right above, then MID will automatically search the bluetooth device nearby. As picture below:
4. Click the available bluetooth device, it will popup request window enter into related password, and match the device to connect.
5. After match successfully, choose the operation you want to, click to enter into picture below.

## Bluetooth setting

### 1. Rename tablet

Click icon in right top of picture , as picture below, select rename tablet, you can rename it as you want

2. Display the file you received, choose display the file you received in picture below, you can view download and upload files.



**FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- } -Reorient or relocate the receiving antenna.
- } -Increase the separation between the equipment and receiver.
- } -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- } -Consult the dealer or an experienced radio/TV technician for help.

### **Specific Absorption Rate (SAR) information:**

This TABLET meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

### **FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: TABLET (FCC ID:2ANLVDOKKI) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the body is 0.555W/kg. the simultaneous transmission SAR value is 0.555W/kg on the head This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the

user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

### **Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.