RemoBell W user's guide


Date	2017. 10. 17.	
Company	olive and dove co.,LTD.	

1. Appearance (Front)




- 1) Camera Lens
- 2) IR LED
- 3) Microphone
- 4) PIR(Passive. Infrared Ray) : Motion Detection Sensor.
- 5) ALS(Ambient Light Sensor) : Sensor that detect day or night. (on streaming)
- 6) LED lights
- 7) Bell button
- 8) Speaker
- 9) Security screw

1. Appearance (Back)

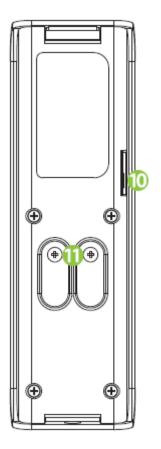

- 10) Reset Button(RemoBell W's Operation Mode will be as SoftAP Mode.)
- 11) Power Terminal

1. Appearance (Bracket)

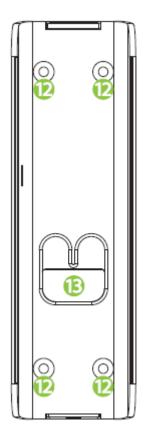


12) Mounting Hole13) Power Line Hole

2. The operation mode

- 1) SoftAP mode
 - RemoBell W initial state
 - Search the SSID name after connecting the wireless network at the bottom left of PC or Notebook.(SSID is RemoBellW_XXXXXX and connection password is open . XXXXXX: camera serial number.)
- 2) Station mode
 - When you register RemoBell W in viewer app, softAP mode is changed to Station mode.
 - When you press the switch in station mode, the RemoBell W supports streaming via viewer app.
- 3) Operating mode conversion
 - Switch to the SoftAP : In Station mode press the reset key, Switch to the SoftAP
 - Switch to the Station mode :If you register RemoBell W in the viewer APP, it can be switched to the station mode.

3. At the condition of SoftAP mode , Checking video streaming - 1

- 1) Insert the battery to RemoBell W.
- In wireless network,search RemoBellW_xxxxxx (xxxxxx is unique value for each device)AP.
- 3) Connect to RemoBellW_xxxxx.(Password is open)
- 4) After running the vlc program, run the open network stream on Media menu .

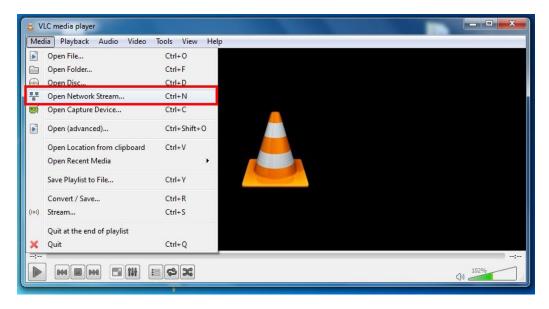

3. At the condition of SoftAP Mode , Checking video streaming - 2

5) On the Network tap of Open Media, enter the rtsp://192.168.240.1/live.264 and press "Play" button. : you can see the video streaming.

🚊 Ope	n Me	dia				? ×		
	Eile		Network	Capture Device				
Network Protocol								
Ple	Please enter a network URL:							
	rtsp://192.168.240.1/live.264							
http://www.example.com/stream.avi rtp://@:1234 mms://mms.examples.com/stream.asx rtsp://server.example.org:8080/test.sdp http://www.yourtube.com/watch?v=gg64x								
🔲 Sh	Show more options							
					Play 🔻	<u>C</u> ancel		

4. Mounting



5. HOW TO REGISTER RemoBell W

5-1. CREATE AN ACCOUNT

- 1) Make sure your mobile device is connected to your home Wi-Fi.
- 2) Download and launch the remot app.



3) Press sign up at the bottom of the login page.



4) Enter your email and create a password and profile name. Then press sign up. For Help, press the ① at the top right corner.

5-2. REGISTER RemoBell W

- 1) Have your Wi-Fi network password available.
- 2) Install RemoBell W.
- 3) RemoBell W's status LED light should flash up and down. If it is not, press the status button.




- 4) Go back to the app, and select your timezone.
- 5) Switch to your phone's Wi-Fi settings, leaving remo⁺ app open. Please DO NOT CLOSE THE APP.
- 6) Connect to the network RemoBellW_xxxxxx. If you see "internet is unavailable," tap "okay."
- Once you're connected to the RemoBellW_xxxxx network, switch back to the remo⁺ app and press continue.


Carrier 🤝	5:00 PM	* 100% 💼
Settings	Wi-Fi	
Wi-Fi		
CHOOSE A NETWO	DRK	
RemoBellW	RemoBellW_a303ce	
RMC_1	₽ 奈 (j)	

8) Select your home Wi-Fi network, enter the password, then press continue. Your app will then complete the registration. This may take up to 3 minutes.

6. HOW TO INSTALL RemoBell W

- 1) Position the mounting bracket on location of choice and ensure that it is level.
- 2) Screw the mounting bracket into the wall using a screwdriver and the enclosed four screws (Anchors are included for brick, concrete, or stucco).

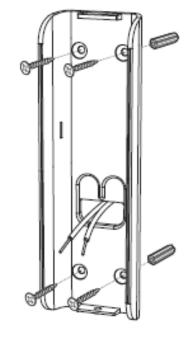


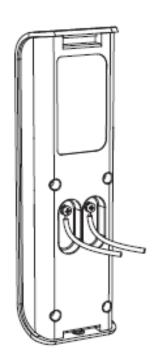

3) Connect the transformer power line to the Power Terminal on the back of the RemoBell W. (8-24VAC)

6. HOW TO INSTALL RemoBell W

- 4) Slide the RemoBell W to the top of the bracket, then rmly push the device in.
- 5) Tighten the security screw into the base of the RemoBell W to secure the device into the bracket.

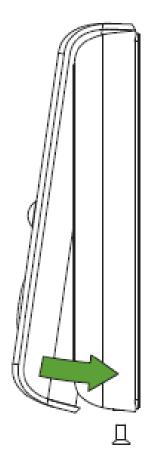

FCC Compliance Statement

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operated the equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Thank you.