

Product features

1. Stylish Car Speaker Is Equipped With Large Capacity Battery, Compatible With Usb / Sd / Pc Mmc. And Other Audio.
2. Equipped With Super Bass Speaker, Bring You Sweet Music Enjoyment.

VERSATILE MOVING BOXES

Warranty card

Dear user

Thank you for choosing our products, if there is a problem please contact us, in any case, the problem of occurrence for you on this product, but also for us to improve and make the products better, please the warranty card and send it to us.

Your name	_____
Address	_____
Office telephone number	_____
Home phone number	_____
Product model	_____
Purchase date	_____
Invoice number	_____
Store name and address	_____
Repair record	_____
User comments	_____


beFree^{Sound}

INSTRUCTION MANUAL

Note: Due To The Continuous Updating Of The Products, We Reserve The Right To Change And Modify The Product Without Prior Notice.


INSTRUCTION MANUAL

Post layout:

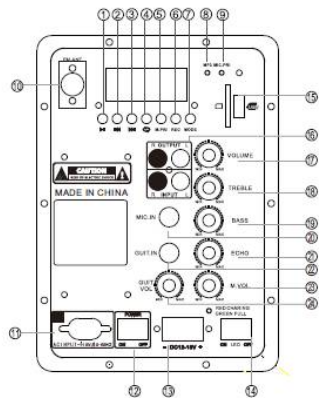

- | | |
|--|----------------------|
| 1. PREVIOUS SONGS SELECTOR | 13. DC 12-18V |
| 2. MIC PRIORITY ON/OFF | 14. LED POWER ON/OFF |
| 3. PLAY FOR MP3 OR OTHER AUDIO SOURCES | 15. USB/SD |
| 4. REPEAT | 16. L/R OUTPUT |
| 5. M. PRI | 17. VOLUME |
| 6. REC | 18. TREBLE |
| 7. MODE CONVERSION | 19. BASS |
| 8. MP3 | 20. MIC INPUT |
| 9. MIC. PRI | 21. ECHO |
| 10. EM-ANT | 22. GUIT INPUT |
| 11. AC INPUT ~110V/50-60Hz | 23. MIC VOL |
| 12. POWER ON/OFF | 24. GUIT VOL |

INSTRUCTION MANUAL

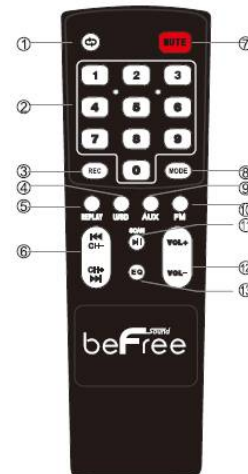

1. Repeat
2. Numeric key
3. Recording
4. USB/SD mode
5. Play the recording
6. Program radio previous/ next
7. Mute
8. MODE
9. AUX mode
10. FM mode(
11. Play /Pause
12. Master volume +/-
13. EQ Switch

Features

- FM Radio .
- USB/SD/TF slot Plays MP3 Files stored in your CARD(USB,SD,TF).
- AUX IN to connect to External Audio Players (ipod®/iphone®/ipad®/smartphones etc.),
- AC cable included .

Power supply for Unit

- Connect the supplied cable to AC power cord, one end to unit and other end to AC socket .
- Use On/Off button to switch power ON/OFF on unit.

Bluetooth

- Short press “MODE” button to switch between Bluetooth /CARD(USB,SD,TF) / FM / Aux (Line In).
- On your smartphone, scan and select “MW-S341” to match.
- Sound quality will depend on quality of your media file or distance of smartphone from speaker (Distance should NOT be more than 30Ft) or There should be no object blocking the wireless signal .
- To control volume by rotate the knob “Volume -” on speaker or Long Press “VOL-” (volume down) on remote ; Rotate the knob “Volume +” or Long press “VOL+” (volume up) .
- To change tracks Short Press “◀◀”(Previous Track) or “▶▶”(Next Track) on speaker.
- To change tracks Short Press “◀◀CH-”(Previous Track) or “▶▶CH+”(Next Track) on remote.
- To Pause or Release Pause Short Press “⏸”.

USB / SD / TF

- Plug in your USB Disk or SD/TF Card in the slots provided, Please make sure you use the correct file format in your media devices – MP3 FILES ONLY and correct mode has been selected.
- Short press “MODE” button to switch between Bluetooth /CARD (USB,SD,TF) / FM / Aux (Line In), Please ensure that your files are MP3 format, or correct source has been selected .
- To control volume by rotate the knob “Volume -” on speaker or Long Press “VOL-” (volume down) on remote ; Rotate the knob “Volume +” or Long press “VOL+” (volume up).
- To change tracks Short Press “◀◀”(Previous Track) or “▶▶”(Next Track),
- To Pause or Release Pause Short Press “⏸”,
- Please remember to turn off the power of the Speaker before removing the CARD (USB,SD,TF),

FM Radio

- Short press “MODE” button to switch between Bluetooth /CARD(USB,SD,TF) / FM / Aux (Line In), Please ensure that correct source has been selected,
- To control volume by rotate the knob “Volume -” on speaker or Long Press “VOL-” (volume down) on remote ; Rotate the knob “Volume +” or Long press “VOL+” (volume up).
- Short Press “SCAN” to Auto Scan and preset available frequencies.
- To switch between preset frequencies Short Press “◀◀” or “▶▶”.

Aux (Line In)

1. Plug in external device to Aux jack(Aux cable is included).
2. Short press "MODE" button to switch between Bluetooth/CARD(USB,SD,TF)/FM /Aux (Line In). Please ensure that correct source has been selected .
3. To control volume by rotate the knob "Volume -" on speaker or Long Press "VOL-" (volume down) on remote ; Rotate the knob "Volume +" or Long press "VOL+" (volume up) .
4. Tracks can only be changed from your connected external device .

Recording function

Plug in your USB/SD/TF,and long press*REC* button to record the files .And to press again*REC* button to stop record.

Recording play function

Recording Play Function To press*REC/PLAY* button to play recorded files .

Karaoke Function

Take your wired Mic. (included) and plug into Mic input jack of your speaker. You may now use the karaoke feature ,

iPod®, iPhone® & iPad®, are registered Trademarks of Apple Computer Inc. This product is not Designed, Manufactured or Distributed by Apple Computer Inc.
All other Trademarks & Trade Names belong to their respective owners.

FCC Notices

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any Other antenna or transmitter.