 






Portable 30W PA UHF Wireless Speaker USER MANUAL

DGPA30W

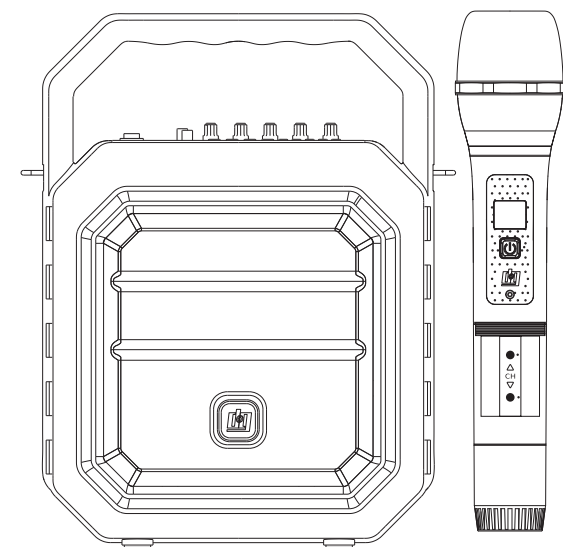

  Speaker Outline Drawing

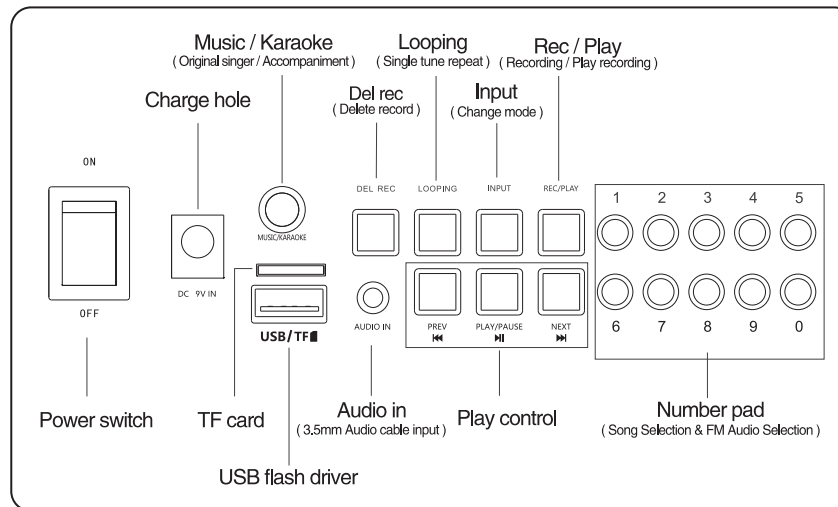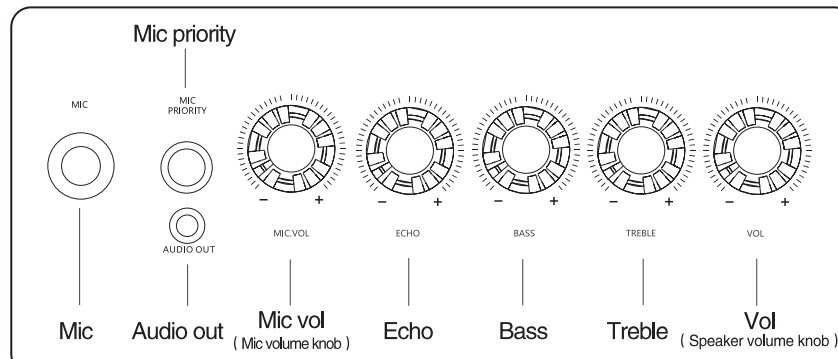

Common Function Illustration

- Vol: To adjust the main volume
- TRELBE: To adjust treble effect
- BASS: To adjust bass effect
- MIC-VOL: To adjust the volume of MIC
- Echo: To adjust echo effect of MIC

Built-in MP3:

 
- USB slot: Support USB flash drive,
- TF card slot: Support TF card
- Support MP3 WAV WMA FLAC APE format, prominent sound quality, Hi-Fi stereo design, bring you whole new Music experience.
- Input: To select AUX in mode, Bluetooth mode, TF card mode & USB flash drive, FM mode
- PLAY/PAUSE: In audio playing mode, press it to pause; press it again to play.
- PREV/PAUSE: Press to select previous or next audio file.
- Key: Press to switch between accompaniment and original in audio playing mode.

MUSIC PLAY (KARAOKE)

Audio Format supported:

MP3 WAV WMA APE FLAC

Supports:

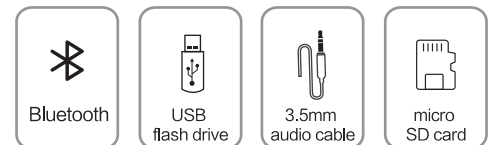


MUSIC/KARAOKE Key: Press this key to switch between accompaniment and original singer in audio playing mode.

How to play FM?

- Click " INPUT " to switch to FM mode with a screen shows like 87.5, and there will be voice prompts " FM Mode ".
- Long press " " for about 3s to start automatic channel search. The search will last about 1 min, just leave it before it's done. There will be several or dozens of channels. (The amount depends on the area.)
- Click " & " to play previous/next channel.

CHARGING(MAIN DEVICE)

 Charge the main device with the power adapter (DC 9V).

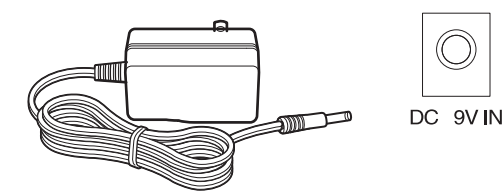

Please noted:

- Please use the standard adapter, the other end connects with the power supply AC 110-240V to charge. Normally, it will take about 4 to 5 hours be charged fully.
- Battery status: There are 4 battery indicators on the screen and each represent 25%. Please charge it timely when the speaker reminds with voice prompt " Low battery, please charge ". The battery indicator will blink while charging and it will stop blinking after fully charged.
- Please recharge the battery within 48 hours if the battery is too low. Keep the battery have electricity even if it don't work for a long time.
- We suggest that you charging it more 1-2 hours after fully charged to lengthen the life of battery. Kindly noted DO NOT over charge too much time.



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

 
- The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
- This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
- This warranty gives you specific legal rights. You may also have other rights which vary by state.

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear
80 Carter Drive
Edison, NJ 08817

The Microphone

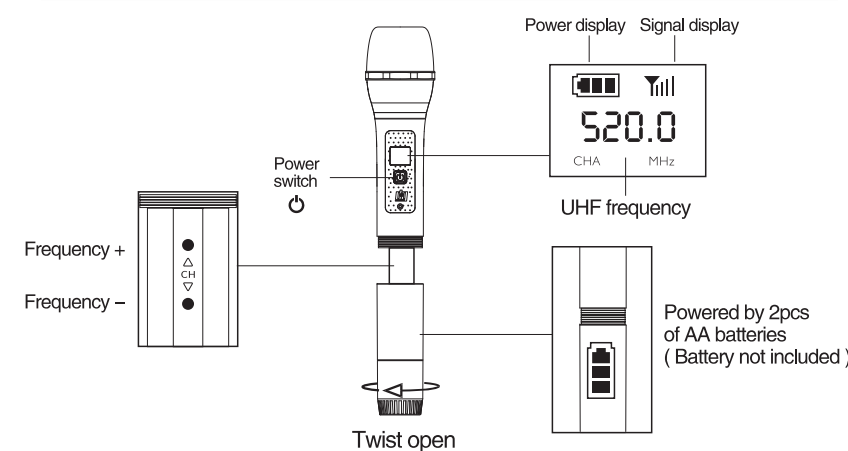

How to connect microphone with Pa system?

- Turn on the speaker and find the " INPUT " button;
- Quickly short press the " INPUT " button for three times to enter into pairing status with a voice prompt " UHF is waiting for connection " ;
- Switch on the wireless handheld MIC and twist off the shell; then press " & " at the same time for 3 seconds until screen " 520.0 " indicator flashes;
- Please wait about 3 seconds until the signal indicator " 520.0 " on the handheld mic from flashing to keep long lights, at this time you could hear " UHF is connected " sound, it means the wireless mic pair successfully with the speaker.

Please noted:

- Please finish pairing operation within 10s as the " 520.0 " indicator can only flashes about 10s;
- Please operate in strict accordance with the above order. Do not reverse the order. If you do Step 3 before Step 2, then pair will fail.
- Under the pairing status, long press " & " on the hand-held microphone to disconnect wireless signal with voice prompt " UHF is disconnected ". Please repeat step 2 & step 3 to repair.
- Please remove the AA batteries inside the microphone in case of getting hot if you didn't use it for a long time.
- If you got the double wireless microphone version, second microphone just copy step 2 & step 3 to connect with PA system.

How to connect bluetooth?

- Enter bluetooth mode:
Click " INPUT " to change mode.
" BLUE " means bluetooth mode.
- Search and pair with: DGPA30W (on your Bluetooth-enabled devices)
- After successful connection, The speaker can also supports to amplify voice via connecting wireless microphone and play audio files at the same time.

TWS Function (True Wireless Stereo)

 
- Open two devices and press " INPUT " to enter into Bluetooth mode. Long Press " INPUT " of one device to enter into pairing status. Bluetooth icon of another will be light constantly which means TWS function is activated.
- Turn on Bluetooth function on your mobile phone. Then please search " DGPA30W " and connect. Two devices play simultaneously achieve a surrounded stereo sound.
- Long press " INPUT " one of them, quit out the function.

How to play recording?

Prerequisite: require a USB drive or TF card for storage and a microphone for input.

- Under any mode, long press (3s) " REC / PLAY " button to start recording; There will be a voice prompts " Start recording " And the screen shows like this
- Connect with wireless mic or plug in an external wired mic to talk with it.
- Click " REC / PLAY " button to finish and save recording; At this point, it will play recording file automatically you just made; Please click " " button to pause / resume; Click " & " to play previous / next recording; Click " REC / PLAY " again to play USB drive / TF card music.
- Click " INPUT " button to quit recording and switch to other modes;

How to use the Number pad?

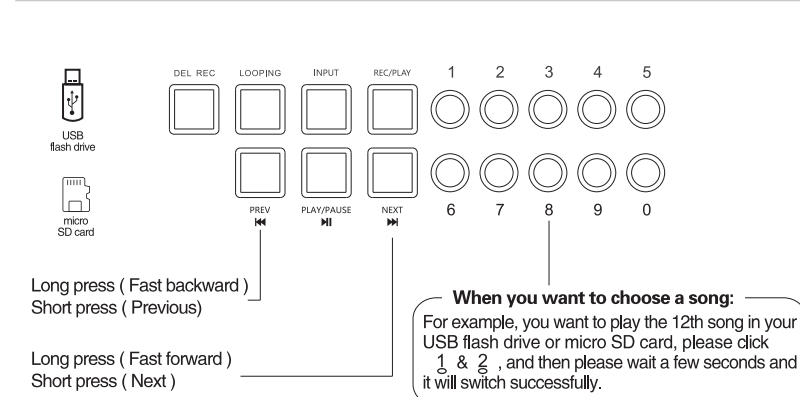

Use the number pad to select channel by sequence number, and then please wait a few seconds and it will switch successfully; or select a specific frequency.

Select a specific frequency

Use the number pad to enter the frequency you want,
For example, you want to listen to channel (FM95.8MHz)
Click 9, 5 & 8.



(Please noted: If it doesn't change to the specific frequency that you input, it is because there's no channel found of that frequency).

Solve some normal problems by yourself

Trouble	Possible reasons	Measures
Switch on the speaker but no sound	1. Main machine is running out of power 2. No audio input 3. Haven't turned on the volume	Please recharge it to switch on. Please use another better audio files. Please adjust the volume properly.
With sound distortion	1. The volume is too high 2. The speaker is broken	Please turn down the volume properly. Please contact us for maintenance.
No sound with Karaoke	1. Haven't inserted the wired MIC properly 2. Haven't switched on the MIC 3. Haven't turned on the MIC volume on the speaker 4. The UHF wireless is disconnected or wireless MIC is low battery	Please insert the wired MIC properly. Please turn on the MIC Please turn on the MIC Please repair the UHF wireless microphone, or please change the batteries
No sound with MP3 playing	1. The audio's format in USB flash drive or TF card is wrong 2. Chaotic procedure with wrong operation 3. Haven't inserted the USB flash drive / TF card properly	Please turn the format to MP3 Please restart the speaker Please insert the USB/TF card properly
Can only work several minutes after charged or have to work with Adapter	1. The battery is broken 2. The connecting cable of battery's loosened or disconnected 3. Hasn't full charged the speaker	Please change a new same battery Please contact us for maintenance Please full charge it before using
Pair unsuccessfully	1. The " 520.0 " indicator flasher turn on light constantly before pairing; 2. The " 520.0 " indicator flasher turn on light constantly before pairing;	Please finish pairing operation within 10s as the " 520.0 " indicator flasher turn on light constantly before pairing; then please repeat step 2 again to press the " & " at the same time for 3 seconds until screen " 520.0 " indicator flashes.

FCC ID: 2AN03-H2

This is to design a portable speaker.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.