 



LPBR15
LPBK15

EGGTRONIC

Fast Charging Wireless Pad

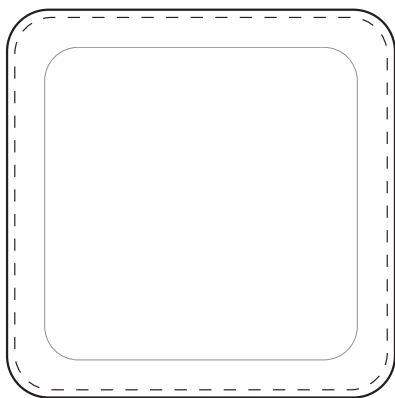

Call Eggtronic customer support
before returning to retailer

 (844) 282-2770

USER MANUAL

Welcome

Thank you for purchasing your new Eggtronic® Fast charging wireless pad. Charging your smartphone has never been so easy: free yourself from annoying cables with the Fast charging wireless pad. The Fast charging wireless pad is designed to enhance your experience by featuring fast charge technology.

NOTE

Fast charging compatible devices can be powered at 1.4 times the rate of standard wireless charging. Compatible with Samsung Fast Charge wireless charging. Works at standard speed with all Qi-enabled phones.

Specifications

CHARGING PAD

Size: 4.6 x 4.6 x 0.26 in

Weight: 2.96 oz

Input: 9V 2A

Output: wireless fast charge

Cable length: 3 ft

Genuine leather

USB WALL CHARGER

Input: 100-240V - 50/60Hz

Output: 9V 2A / 12V 1.5A

Power: 18W

NOTE

Technical specifications indicated here may be subject to change without notice, in order to improve product performance


Compatibility

This is a Qi-compatible wireless charger which allows you to wirelessly charge your smartphone. It is compatible with the WPC (Wireless Power Consortium) Qi wireless charging standard, and works perfectly with all Qi-enabled devices. Some smartphones may not be natively compatible with wireless charging.

Visit eggtronic.com/compatible-smartphones to check the compatibility of your device.

Charging your device


1. Connect your new Fast charge wireless pad to the wall charger, and plug the wall charger into a power outlet.
2. Place your Qi enabled smartphone in the center of the pad to charge it wirelessly. Direct contact required for charging.

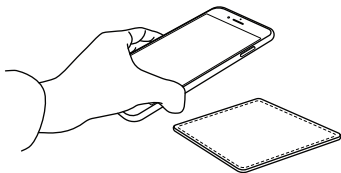

- When your smartphone is charged, remove it from the charging pad.

NOTE

When the smartphone is sufficiently charged, the wireless charging will stop to avoid damaging your device.

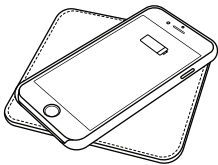

Safety information

Please read this safety information carefully before using the product to prevent injury to yourself or others and to prevent damage to your device or to property.

WARNING

- Use manufacturer-approved chargers. Using generic chargers may cause the device to malfunction.
- Do not use damaged wall chargers. Damaged connections may cause electric shock or fire.
- Do not damage the power cable. Doing so may cause electric shock or fire.
- Keep the product away from hot surfaces and sharp corners.
- Do not carry or drag the product by its cable.
- Do not use the product if one or more of its components are damaged or defective.
- The product contains electronic parts. Keep your device dry. Humidity and liquids may damage the electronic circuits of the device and may cause electric shock and fire.
- The product is designed for indoor use. Outdoor use is not recommended as it may subject the product to weather conditions that could damage it.
- Do not place any metal object on the wireless charging spot, as it may overheat and cause a fire.
- Do not place any other object between the smartphone and the wireless charger.
- Do not place any unplugged receiver on the wireless charger, as this can overheat the product and cause a fire.
- Handle the charger with care. Do not drop your device. It may get damaged or may malfunction.
- Do not disassemble, modify, or repair your charger. Any alteration or modification of your device may void the manufacturer's warranty. If your device needs servicing, contact the manufacturer.
- Do not modify the product in any way. Any modification may increase the risk of injury.
- Do not bite or suck on the device. Doing so may damage the device or result in an explosion or fire. Children may choke on small parts. If children use the device, make sure that they use it properly.

CAUTION

- The products included in the package are not toys. Keep out of the reach of children.
- If you notice strange smell or smoke coming from your device, stop using it immediately. Continuing to use the device may result in fire or explosion.
- Do not use the device for anything other than its intended use. The device may malfunction or may cause an electric shock or fire.
- Never dispose of the device in a fire.
- Avoid exposing your device to very cold or very hot temperatures. Extreme temperatures may damage the charger and reduce the lifespan of the device.

- Do not store magnetic cards near the product. Magnetic cards, including credit cards, phone cards and boarding passes, may be damaged by magnetic fields.
- Do not throw away the product with the household trash. The product needs to be recycled and disposed of responsibly.

Limited warranty

This product carries a limited warranty from Eggtronic to the original purchaser to be free from defects in the material and workmanship under normal use for a period of twelve (12) months from the date of original purchase.

Exclusions: Manufacturer's warranty does not apply to defects or errors in the product caused by: 1) any modifications and/or alterations to the product, or any portion, not made by Manufacturer; 2) any defect, loss or damage resulting from theft, loss, fire, misuse, mishandling, abuse, negligence, vandalism, acts of God, accident, causality, power failures or surges, alterations, failure to follow installation, operation, storage or maintenance instructions, or any other cause beyond Manufacturer's control.

If there is a substantial defect in materials and/or workmanship of the product during the warranty period, Manufacturer will, in its sole discretion, either repair or replace (with new or functionally equivalent parts) the defective product. To obtain warranty service, Buyer must contact Eggtronic at support@eggtronic.com for shipping instructions. Securely pack the product along with a copy of sales receipt and send the product, freight charges prepaid, to Manufacturer. Any and all repairs or replacement made in accordance herewith will be made at no charge to Buyer, however the Buyer is responsible for all postage, freight and transportation costs.

Legal info

This product is meant for use only with appropriate devices. Please consult your device packaging to determine whether this product is compatible with your particular device. Manufacturer will not be responsible for any damages you or any third party that may suffer as a result of use, intended or unintended, or misuse of this product. You agree to indemnify Manufacturer for any resulting injury or damage if the product is used with an unintended device. Product names, logos, brands and other trademarks referred to within this product are property of their respective trademark holders. These trademark holders are not affiliated with our company, our products or our website. They do not sponsor or endorse our materials.



FCC Warning

This device complies with Part 18 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.