


Ailiang

SPEAKER

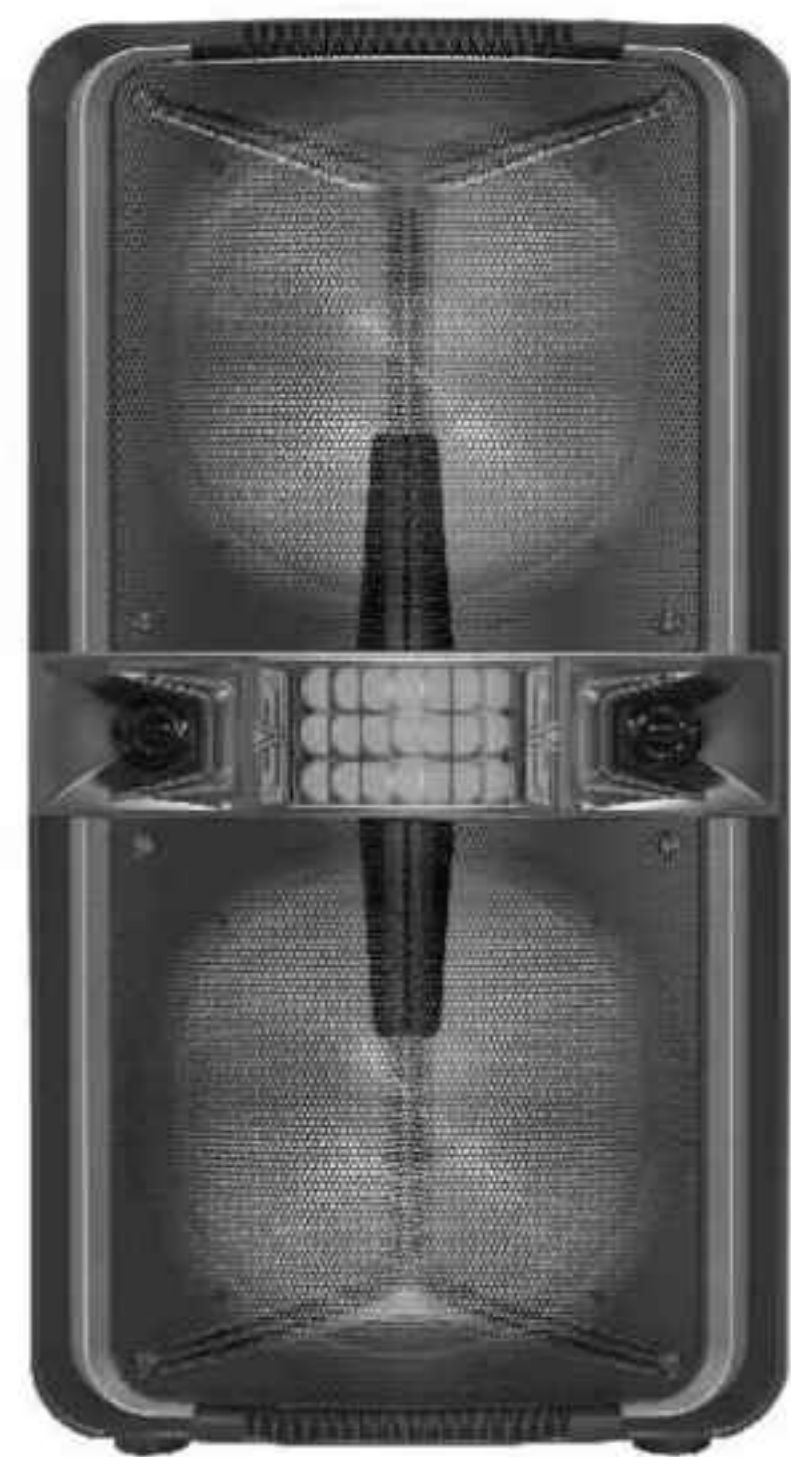

LiGE-770
FCC ID:2ANTA-LIGE770D
MADE IN CHINA

INSTRUCTIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


All the instructions should be read carefully before operation and follow the instructions.

- The speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- Place the unit on a stable surface, to prevent it from being fall down.
- The speaker should be connected to a power supply only of the type described in the operating instructions.
- The user should not attempt to repair the speaker, if you are not professional.
- Disconnect the power cable from the outlet & switch off before cleaning the unit. Only use soft cloth, no harsh abrasives or chemicals to clean, as it will damage the surface finishing.
- The power cable of the speaker should be unplugged from the outlet and Power switch should be off when left unused for a long period of time.

- 2 -

PACKAGING LIST

1. Speaker.....1pc
2. User Manual.....1pc
3. Stereo Audio And adapter..... 2pc
4. Microphone.....1pc

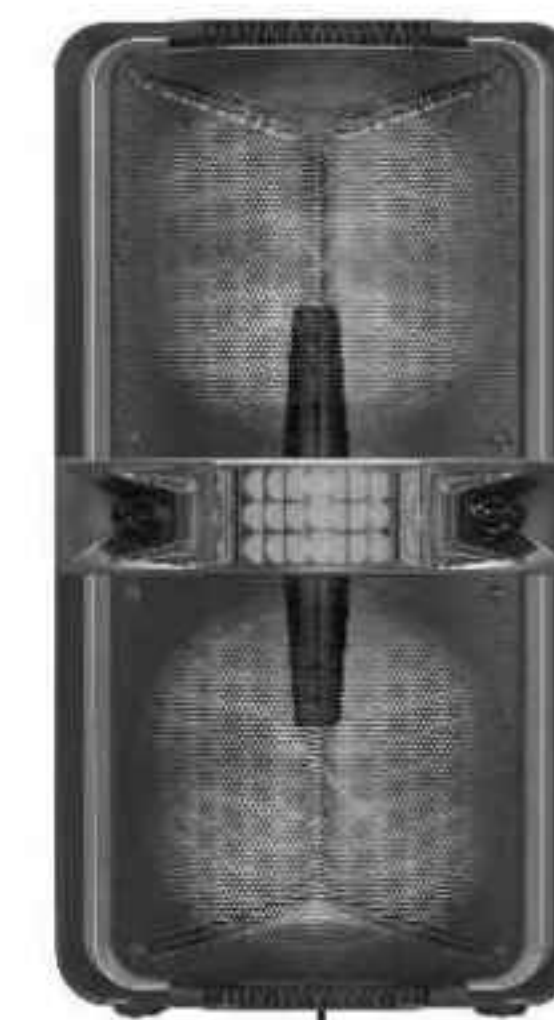

1



2



3




4

- 3 -



1. Power Button: This button is used to power on/off the speaker.
2. DC 9VIN: Insert out power to "DC 9V", then it can run recharge built-in battery. For first time use, please charge it at least 3 hours till full. full battery can play 3-4 hours in middle volume.
3. TF: Insert TF Card on TF port, it will play music from TF card automatically.
4. USB Drive: Insert USB Card on USB port, it will play music from USB card automatically.
5. Play key. Use this button to start/stop reproduction.
 - ▶▶: This button permits you to move backwards in the playlist or to reduce the volume by keeping this button pressed for a few seconds.
 - ◀◀: This button permits you to move forward in the playlist or to increase the volume with a long press.
6. MODE: Use this button to toggle between radio mode/AUX mode/BT/USB/TF mode.
7. AUX IN: Insert the audio equipment to the "AUX IN", press "MODE" a couple of times when light turns green, it turns to play mode, and the speaker can play music from mobile phone, Mp3, computer and other audios.
8. Mic IN: Microphone input jack, connect a 3.5 wired microphone
9. Light switch Button: This button is used to turn on/off the light.
10. Volume Knob: Volume control
11. REC REPLAY: Recorded file play key.
12. The charge indicators: battery charging show only in red color

- 4 -

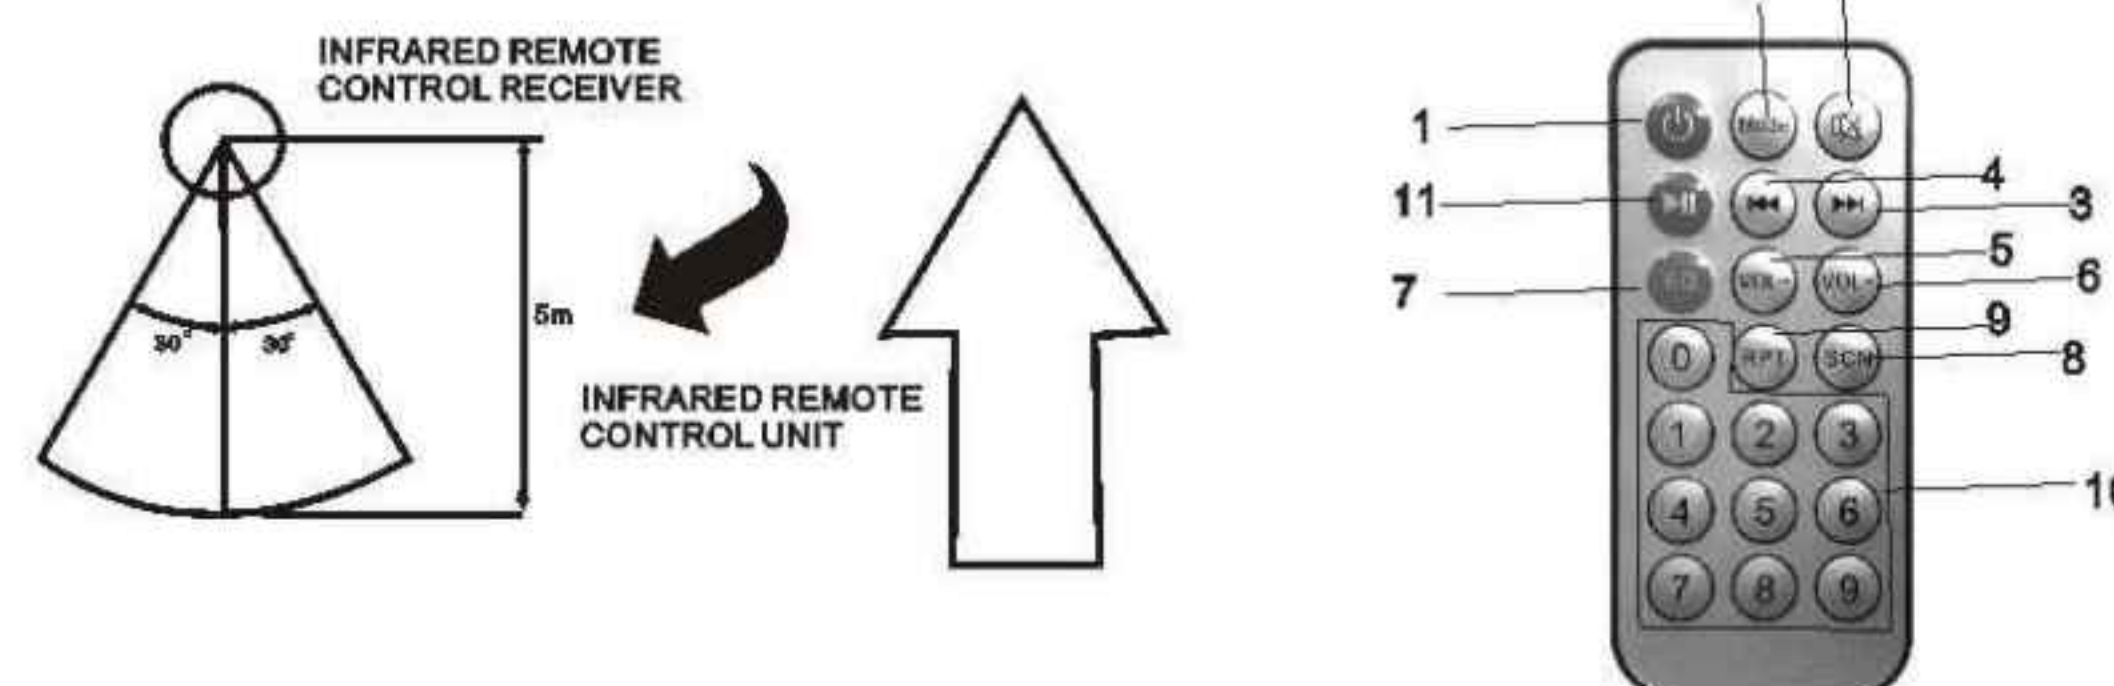

REMOTE CONTROL OPERATION:

If the remote control interferes with other electronic devices, the remote operation can be affected. Do not simultaneously press buttons on the unit and the remote control. Avoid using two remote controls at the same time as this will cause a malfunction. Use only UM-4 "AAA" size batteries. Do not mix old batteries with new ones. If the batteries leak, clean thoroughly before replacing with new ones. Do not short two terminals of the batteries. Dispose of old batteries in a suitable place.

Remote Control

1. POWER key: This button is used to power on/off the speaker.
2. MODE key: Use this button to toggle between radio mode/AUX mode/BT/USB/TF mode.
3. NEXT key: In Mp3 mode short press to play the next track; long press to fast forward. In radio mode, short press to save the channel, long press to search FM channels.
4. PREV key: In Mp3 mode, short press to play the previous track and long press to advance backwards.
5. VOL- key: This button is to reduce the volume.
6. VOL+ key: this button is to increase the volume.
7. EQ key: Helps you to choose between Jazz, Rock, Bass, Normal and Class mode.
8. SCN key: This button is to choose between USB or TF(SD) card.
9. Repeat key: Press "repeat" once to repeat the song and twice to repeat the entered playlist.
10. "0-9" numbers:
 - In radio mode, it refers to FM channel number. (only automatic preset)
 - In Mp3 mode, it refers to the track number. (only automatic track songs)
 - NOTE: cannot manually preset stations or set track numbers. Only Automatically preset.
11. Play/pause Key: In USB/TF (Micro SD) /BT mode this button has the play/pause function; In FM mode: the speaker will start scanning the store automatically found radio stations
12. MUTE key: mutes the sound, press again to restore the sound

5

Specification

Outer put: 30W
Frequency: 100Hz-20KHz
Drive unit: 8" x 2
S/N: ≥75db

USB/SD Specs:

USB Version: 2.0/3.0 USB GB: up to 32GB File format: MP3
TF(SD) type: 2.0/3.0 SD GB: up to 32GB File format: MP3

Power supply: DC 9V
Lithium battery: 2000mAh

BT Operation

Press Mode button (BT).
BT indicator light will Turn ON
On your BT device, turn on BT and scan for devices.
When "LiGE-770" appears on device list, select and should pair successful.
The speaker is ready to play music

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

- 6 -