

Quick Start Guide

C696 Wireless IP Camera

This guide will get you going with your camera. For more details and information of the camera, please visit our official website: www.zositech.com

CONTENTS

01	English	
	•	01

01 What's in the Box







USB Cable

Mounting Screws







Mounting Bracket

Reset Needle


Warning Sticker



Quick Start Guide

NOTE: Accessories are subject to the model you purchased.

02 Gallery & Specs

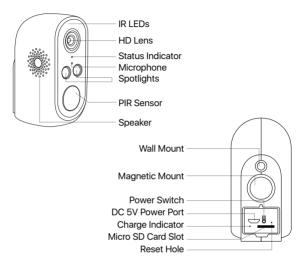


NOTE: The actual appearance varies by different models.

Power Switch	Hold 3-5 seconds Turn ON/OFF		
Reset Button	Hold 3-5 seconds Device Reset		
Status Indicator			
Slow Flashing Red Light	Waiting for connection		
Fast Flashing Red Light	Device connecting		
Solid Blue Light	Connection succeeded		
Charge Indicator			
Solid Red Light	Camera's charging		
Solid Blue Light	Camera's fully charged		

03 Power-ON

Press and hold the power switch on the back of the camera for 3 seconds, the network indicator lights blink red. Power on the NVR, the camera network indicator's blinking red lights will turn into solid blue lights, and the NVR will automatically connect and display video.

NOTE: It is recommended to test that each camera can work normally before installation, if not, please contact us.

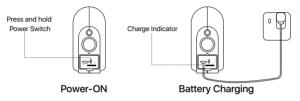

Battery Charging:

Solid Red Light: Camera's charging Solid Blue Light: Camera's fully charged



Battery Charging

Cameras come with batteries with partial charge when it leaves the factory. Before using it for the first time, please fully charge the camera with USB cable and charger before first use. Built-in battery, non-removable.

Precautions

- 2. Please do not charge with an adapter in a humid environment.
- 3. If using a power adapter to charge, please use a certified power adapter.
- 4. After fully charged, please plug the power port with the rubber plug to prevent moisture or water.

O5 Add Extra Devices

This function requires the connection with a specific NVR. If you need it, please contact us or your dealer.

NOTE: The camera system has been matched before shipment. After the camera is powered on, the system will automatically connect and display video.

If you want to add or reset a camera, follow the steps below.

- Press and hold the power switch on the back of the camera for 3 seconds, and you will hear "Device is waiting to connect", and the network indicator light will flash red slowly.
- Right-click the mouse, click the Menu Main Menu Information System, aim the camera at the QR code on the bottom right at a distance of 30-100cm, and scan the QR code to start pairing.



• When you hear "wireless configuration succeed" from the camera, the network indicator light comes solid red for about 20 seconds, the camera will be automatically added to the system and display video.

The operation video is as follows:



Tutorial Video

06 Add Device to App

6.1 Account Registration

The following steps take Android system as an example. The interface of iOS system will be slightly different.

- Use your mobile browser to scan the QR code above to download Zosi Smart (both iphone and Android phone can scan and download. iOS users can use your mobile camera to scan QR code or directly search for "Zosi Smart" in App Store to download.
- · Tap Register to register your Zosi account.



Zosi Smart



iOS/Android

6.2 Add Device via QR Code

- Press and hold the camera switch, and you will hear "Device is waiting to connect", and the network status indicator light start flashing red slowly.
- 2. Tap the Scan QR Code button and scan the QR Code on the camera
- 3. Enter the device name on the device information page, and tap the Add an Unconnected Device button.
- 4. On the Connect to WiFi page, select WiFi and enter the corresponding WiFi password, and tap Next.

NOTE: Support 2.4GHz WiFi only, please do not select 5GHz WiFi.

- 5. Point the QR code generated on your phone towards the camera lens to scan.
- 6. When you hear "Wireless Configuration Succeed" from the camera, tap Next and Confirm. Tap the Done button on the Wireless Connection Succeed page, and the device has been successfully added to the App.

Scan the QR code linked down below to watch the video of device adding process



NOTE: If it fails to add device, please check the following:

- 1. Hear "Wireless connection failed"? Please check if the WiFi password is entered correctly.
- 2. Please check if the device is plugged in.
- 3. Make sure that the network connected to the mobile phone and the device can access the Internet normally.

- 4. Confirm if there are firewall restrictions on your home network. It may be due to network reasons that the equipment cannot be connected to our server normally in result the device is not online.
- 5. If you cannot identify the cause, please reset the device and reconfigure the device network. Insert the reset pin into the reset hole on the back for 5 seconds, and then add the device again according to the above steps

NOTE: camera should be reset in operating state.



07 Camera Installation

7.1 Place it on any flat surface: table, chair, TV cabinet.etc.

7.2 Install with Mounting Bracket

- 1. Unscrew the mount base, drill holes in accordance with the holes on the base, and tap the drywall anchors into the wall and screw the mount base
- 2 Attach the bracket to the base.
- 3. Screw the camera to the bracket and adjust the camera angle.




Unscrew the Mount Base



Screw the Mount Base on the Wall





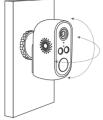


Adjust the Camera Angle

7.3 Installation Environment

Height: Install the camera 6-9 ft (2-3m) above the ground.

Distance: Best accuracy for objects within 5-50 ft (1.5-15 m).

Angle: Tilt the camera down about 30°-60° from the horizontal position. It is suggested to adjust the angle between camera and detected object larger than 10°.

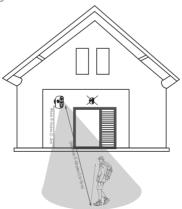

NOTE: Wake-up of the camera will be affected by various factors, such as the distance between the person and the camera, the height of the person, the height and angle of the camera, etc.

08 Installation Precautions

- · Do not face the camera to any light source.
- Do not point the camera at glass windows or reflective objects. Otherwise, it may result in poor image performance due to reflections from infrared LEDs, ambient lights or status lights.
- Do not mount the camera in shaded area, and point the camera towards a well-lit area. For better image quality, make sure the camera and the captured subject are at the same lighting conditions.
- For optimum performance, it is recommended that the camera be installed as far away as possible from electronic devices such as microwaves, televisions, radio phones and baby monitors to prevent signal interference.
- It is recommended to clean the lens with a soft cloth from time to time
- Do not expose the power port to water or moisture, or blocked by dirt or other things.
- Do not install the camera where rain and snow may hit the lens directly.
- Camera may work in extremely cold conditions as low as -10°C as it will produce heat when powered on. You may power the camera indoors for a few minutes before installing it outdoors. (Only for outdoor cameras)



1. The camera cannot be turned on?

- Is the camera fully charged? Charge for 5 minutes and try again.
- Is the camera indicator light on? If not, press and hold the power switch for 3–5 seconds.
- If the problem persists, please contact us.

2. The camera fails to connect to the Internet?

- Hear "wireless connection failed"? Please check whether the WiFi password is entered correctly.
- Please check whether it is connected to 2.4GHz WiFi network, 5GHz WiFi is not supported.
- The network is not good, please move the device closer to the router and try again.

3. Does the camera support motion detection and image capture?

It captures images automatically when people are detected or when there is a change in detected images. Users can also manually capture images using our Zosi Smart App.

10 Notification of Compliance

CE Simplified EU Declaration of Conformity

ZOSI declares that product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Correct Dispose of this product

This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent harm to the environment or human health from uncontrolled waste disposal and promote the sustainable reuse of material resources, please recycle it responsibly. To return your used device, please use the return and collection system or contact the retailer from whom the product was purchased. They can take this product for environmentally safe recycling.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radio Frequency Exposure Statement for IC

This equipment complies with IC exposure limits set forth for an uncontrolled environment. The device can be used in portable exposure conditions. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

Cet équipement est conforme aux limites d'exposition IC établies pour un environnement non contrôlé. L'appareil peut être utilisé dans des conditions d'exposition portables. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et le corps.



www.zositech.com service@zositech.com

Support Email: service@zositech.com

Facebook: https://www.facebook.com/ZosiTechnology

Whatsapp: +1-866-841-6932 UK Whatsapp: +86 18675610962

Responsible Party:

Company name :Loocam Technology LLC

Address: 2205 Hutton Dr. Unit 100, Carrollton TX 75006

Tel: 657-223-3477

E-mail: lavenderl@loocam.com

Copyright @ 2023 ZOSI Technology Co., Ltd.

No part of this publication may be reproduced in any way without the written permission of ZOSI. The information in this publication is believed to be accurate in all respects. ZOSI assumes no responsibility for any consequences resulting from their use. As our products require continuous improvement, ZOSI reserves the right to modify product designs, specifications and priceswithout notice and without any obligation. All rights reserved, and ZOSI reserves the final interpretation right of this manual.







