INCLUDES: STRIKE Wireless In-Ear Earphone: Hard Case Carty Pouch Carabiner Micro USB Charging Cable Extra Ear Cushions & Ear Hooks Cord Adjuster Cable Clip User Manual & Warranty



User Manual and Warranty



PRODUCT SPECIFICATIONS

Bluetooth Bluetooth profiles Connectivity class High performance drive Frequency response Sensitivity Impedance Signal to noise ratio Battery type

Battery capacity Play time

Recharge time Charging method Water proof standard Dimensions

A2DP, HFP, HSP, AVRCP Bluetooth Class 2 2 x Ø6 mm 20 Hz - 20 kHz 98 +/- 3 dB at 1kHz ≥ 58 dB Lithium-ion polymer 90 mAh up to 7 hours (varies by volume level and audio content 2 hours Micro USB charging IPX-4

31 x 690 x 27 mm

Function	Button	Audio	LED
Power on	Press and hold	Power On	Blue light
the	the On/Off button		goes on for
earphone	for 1 second		1 second
Standby	N/A	N/A	Blue light
(not			flashing
connected			twice every 5
with			seconds
smartphone)			
Standby	N/A	N/A	Blue light
(connected			flashing once
with			every 10 second
smartphone)			
Pairing	Press and hold	Pairing	Blue and red
	the On/Off button		light flashing
	for 4 seconds		alternatively
Pairing	N/A	Your	Blue light
success		device is	flashing once
		connected	every 10 second

OPERATIONA

Function	Button	Audio	LED
Phone call	N/A	N/A	Blue light flashin
in progress			once every 3 seco
Redialling	Press the On/Off	with	N/A
	button twice	tone	
Incoming	Press the On/Off	with	Blue light
call	button once	tone	flashing quickly
End a call	Press the On/Off	with	N/A
	button once	tone	
Refuse	Press and hold	with	N/A
incoming	the On/Off	tone	
call	button for		
	2 seconds		
Mute the	Press "+" and "-"	with	N/A
microphone	button	tone	
during a	simultaneously		
phone call	once. Repeat to		
	release Mute		
	function		

GUIDANCE

L GUIDANCE OPERATIONA

OPERATIONA

Function Listening music Play / pause F Increase lvolume Decrease volume Previous song Next song Disconnect

Bluetooth connection

TIONAL GUIDANCE

utton	Audio	LED
A	N/A	Blue light
		flashing once
		every 10 seconds
ess the On/Off	N/A	N/A
itton once		
ess "+" button	with maximum	N/A
peatedly	volume alert	
ess "-" button	with minimum	N/A
peatedly	volume alert	
ess and hold	N/A	N/A
e "-" button		
r1second		
ess and hold	N/A	N/A
e "+" button		
r1second		
A	You device is	N/A
	disconnected	

OPERATIONAL GUIDANCE

Level is low Low replace Battery N/A N/A Red lig charging mode consta goes or mode consta goes or consta Battery has N/A N/A Blue lig been fully goes or consta power off Press and hold Power Off Red lig power off Press and hold the N/A Blue lig goes or consta goes or consta goes or consta goes or consta power off Press and hold the N/A Blue lig Bluetooth On/Off button goes or goes or	Function	Button	Audio	LED
Battery charging N/A N/A N/A Red lig goes or constal Battery has been fully charged N/A N/A Blue lig goes or constal Power off the the earphone frase Press and hold button for 4 seconds Power Off lig goes or 1 secon Red lig goes or 1 secon Erase Press and hold the button N/A Blue lig goes or 1 secon	Battery	N/A	Battery	Red light
Battery N/A N/A Red lig goes or constar mode N/A Red lig goes or constar goes or constar Battery has N/A N/A Blue lig goes or constar been fully N/A Blue lig goes or constar Blue lig goes or constar Power off the earphone Press and hold Power Off goes or 1 seconds Red lig goes or 1 seconds Erase Press and hold the N/A Blue lig goes or Blue lig goes or	evel is low		Low	replaces
charging goes of constant goes of the On/Off goes of				blue light
mode constail Battery has N/A Blue lig goes or been fully goes or constail goes or charged ress and hold Power Off Red lig goes or power off Press and hold Power Off Red lig goes or the the On/Off button for 1 second 1 second Erase Press and hold the N/A Blue lig Bluetooth On/Off button goes or	Battery	N/A	N/A	Red light
Battery has been fully charged N/A N/A Blue lig goes or consta to bout on for 4 seconds Power off Press and hold Power Off Red lig goes or consta the On/Off Power Off Red lig goes or log goes or log so or goes or Erase Press and hold the On/Off button N/A Blue lig goes or log so or log so or	charging			goes on
been fully charged goes of constat Power off Press and hold power Off Red lig the the On/Off earphone button for 1 secon 4 seconds Erase Press and hold the N/A Blue lig Bluetooth On/Off button goes of	mode			constantly
charged consta Power off Press and hold Power Off Red Iig the the On/Off goes or earphone button for 1 secon 4 seconds 1 secon Erase Press and hold the N/A Blue lig Bluetooth On/Off button goes or	Battery has	N/A	N/A	Blue light
Power off Press and hold Power Off Red lig goes of a seconds earphone button for 4 seconds 1 secon Erase Press and hold the On/Off button N/A Blue lig goes of	been fully			goes on
the the On/Off goes or earphone button for l secon 4 seconds Press and hold the N/A Blue lig Bluetooth On/Off button goes or	charged			constantly
earphone button for 1 secon 4 seconds Press and hold the N/A Blue lig Bluetooth On/Off button goes or	Power off	Press and hold	Power Off	Red light
4 seconds Erase Press and hold the N/A Blue lig Bluetooth On/Off button goes of	the	the On/Off		goes on for
Erase Press and hold the N/A Blue lig Bluetooth On/Off button goes of	earphone	button for		1 second
Bluetooth On/Off button goes of		4 seconds		
	Erase	Press and hold the	N/A	Blue light
pairing and "-" button 1 socon	Bluetooth	On/Off button		goes on for
paining land button lisecon	pairing	and "-" button		1 second
record simultaneously	record	simultaneously		
for 4 seconds		for 4 seconds		

Status Voice	Button Press the On/	Function
Voico	Press the On/	N/ 1 / / / / /
Assistance	Off button for 1 second and then release	Voice assistance function of your smartphone is activated. (Functions vary depending on your phone, tablet or application
Already connected with one telephone	Press and hold the Power button for 2 seconds	Refuse the third party call
and a third party is calling in	Press the Power button twice Press the Power button once	Hold the existing phone call and connect with third party call End the existing phone call and connect with third party call
Already connected with one	Press the Power button twice	Hold the existing phone call and connect the third party phone call which had been on hold
telephone and a third party has been on hold	Press the Power button once	End the existing phone call and connect with third party phone call which had been on hold

OPERATIONAL GUIDANCE

CUSTOMER **SERVICE**

For any service or technical queries, please contact our service team on the below email.

Email: consumersupport@zeeva.com

1827023

Keep all relevant information for future reference

Imported and distributed by Zeeva Electronics Private Limited. All rights reserved.

901-902, Trade World C wing Kamla Mill Compound, Senapati Bapat Marg, Lower Parel West, Mumbai-400013

JOIN THE COMMUNITY

SIGN UP to receive • Special Offers! • Access to Events! • Contests! • News on new products launched



www.muveacoustics.com/community



Thank you for trusting MuveAcoustics with delivering you excellence in sound. We encourage you to connect with us and become a part of our community!

SCAN THE OR CODE YOU WILL FIND INSIDE. SHARE WITH US YOUR PRODUCT EXPERIENCE.







Bluetooth Connection

Devices with Bluetooth 4.1 wireless technology above, such as Bluetooth wireless technolog equipped computers, smartphones, tablets and MP3 players. To use Bluetooth for your audio connection pair STRIKE with your audio source (music player, smartphone, laptop, or other Bluetooth equipped device that can act as a source of music). First turn on your Bluetooth connection on your device, then press and hold the Power button for 4 seconds until you hear 'Pairing'. The STRIKE is in pairing mode. The blue and red Sync LED will blink. Make sure Bluetooth is enabled o your audio source and in a few moments "MUVEACOUSTICS:STRIKE" will appear on your list of possible Bluetooth connections. Press "pair" "connect" on your device and when the connectio is made you will hear "Your device is connected" You are paired. From now on, when you turn or STRIKE, it will automatically search for the la Bluetooth device it was paired with.

Battery Level and Charging STRIKE comes with lithium-ion polymer battery. For best results, fully charge STRIKE before use. It will take 2 hours to fully charged. When the battery voltage is low, red light replaces blue light ' voice notification "Battery Low" every 2 mir STRIKE will automatically shut off, after disconnected or no pairing with Bluetooth enabled device for 10 minutes or when the battery power

level is very low. Please use the cable provided to recharge the earphones. Red LED light up during charging and it will turn blue once fully charged.

SAFETY INSTRUCTIONS

Warning

Contains small parts which may be a choking hazard. Not suitable for children under age three.
Set a low volume setting before using the earphones. Long-term exposure to loud music or sounds m cause hearing damage. It is best to avoid high volume levels when using these earphones, especially for extended periods. • Do not use these earphones when operating a

motor vehicle, a bicycle, machinery or where your

inability to hear outside sounds may present a danger to you or others.

Cautions

• Using these earphones limits your ability to hear noises around you, regardless of listening volume. Please use caution when using these earphones. Do not drop, sit on, or allow the earphones to be mmersed in water

This product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Unsuitable for children under three years because it might, for instance, contain small parts.

To prevent possible hearing damage, do not listen at high volume levels for long periods.

The input voltage to the product is 5V 1A. In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger / adapter for charging the product Only charge the product at ambient temperatures between 10 deg C / 50 deg T and 40 deg C / 104 deg T

Do not heat above 70 deg °C / 158 deg °F, eg. Do not expose to sunlight or throw into fire. Switch off the product after use. Please note that we won't take any responsibili for any wrong operation (eg. Voltage higher tha 5V) as this may result in severe injury or loss property, and we cannot control the operating process during the time the user using this product In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. equipment generates uses and can radiate radia frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does ca harmful interference to radio or television recept which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circu different from that to which the receiver is connected. Consult the dealer or an experienced radio / TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's hority to operate the equipment. is device complies with Part 15 of the FCC Rules peration is subject to the following two conditions: this device may not cause harmful interference, a this device must accept any interference receive cluding interference that may cause undesired operation

FCC ID: 2ANVW-MA-1060



MUVEACOUSTICS STRIKE earphones have been subjected to a thorough series of tests to ensure the highest leve of dependability. It is unlikely that you will experience any problem, but if a defect should become apparent during the use of this product, MUVEACOUSTICS warrants to the original purchaser that thi product will be free from defects material and workmanship for a period of 12 months from the date of your original purchase from an authorized dealer. If a defect covered by this occurs, MUVEACOUSTICS, at its option, will repair

or replace the product purchase at no repair charge (postage charges will apply). If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion of MUVEACOUSTICS.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to product used for any industrial, professional or commercial purposes.

MuveAcoustics

Muveacoustics

