Wireless Speaker System with Subwoofer

User's Guide for Model KS261



FCC WARNINGS

FUL TAXALILIMO

Wrining: Changes or oudfactoins to this unit not expressly approved by the party responsible for compliance could would the mer's unfainterly to operate the equipment.

In the confidence could would be mer's unfainterly to operate the equipment.

In the confidence could would be mer's unfainterly to the confidence could be under the dependence of the consended protection against barried interference in a residential installation. This equipment generates, uses, and can radiate reliable harmful interference with mer's confidence of the confidence of

ADDITIONAL WARNINGS

- WARNING Changes or modifications to this unit not expressly approved by the purty responsible for compliance could void the user's authority to operate the capment.

 Centine and methics discontinuous in bottom of the reare or bettom of the apparatus.

 Many plug is used a discontent clove and it should remain readily operable doing intended use. In form the many continuous completely, the many gain should be discontented from the manuscontinuous conditions, the many gain should be discontented from the mains socked until completely.

 CALTION TO REVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE

 Objects filled with banks, upon's source when the property of the purty operated and the property of the purty operated and the purty operated and the property of the purty operated and the property of the purty operated and the purty operated

- SLOT, FULLY INSERT.

 Objects filled with guides, such as vases, shall not be placed on the apparatus WARNING: Do not place this unit directly onto farmiture surfaces with any type of soft, procuss, or sensitive films As, with any rubber compound made with oils, the feet could crasse marks or staining where the other crass are such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and on staining.
- WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For mor information go to www.P6SWamings.ca.gov. This product meets and complies with all Federal regulations.

Overview

- · 2.1 channel stereo sound
- Built-in amplifier
- 3 speakers: left, right, and subwoofer
- · Bluetooth Wireless range: 60 ft Voice prompts announce speaker functions
- · Analog volume control
- Aux In (3.5 mm audio input)
- · AC power: built-in AC power cable


Includes


(1)

- 3.5mm audio cable
- User's quide





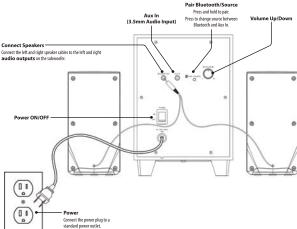

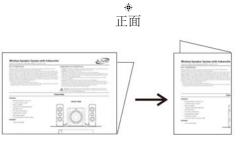

折叠方式

Bluetooth Wireless Audio

Pairing to a Device & Playing Audio

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the steps listed here.

- 1. Power ON the unit and press the Source button to switch to Bluetooth
- Press and hold the Pair button to begin pairing. The LED Indicator will begin quickly flashing blue. When pairing, remain within 3 feet of the unit.
- 3. From your smartphone or other Bluetooth device, access Bluetooth Settings and search for nearby devices. Select **K\$251** when it is discovered. Refer to the user's manual for your specific device for further instructions on pairing and connecting Bluetooth devices.
- 4. When successfully paired, the **LED indicator** will turn solid blue and an chime will sound from the speaker.
- Audio played through the connected Bluetooth device will now be heard through the speakers. Use the controls on the connected device to select and begin playing audio.

Previously Connected Devices

- The system can remember multiple Bluetooth devices and will always try to re-connect to the last device used.
- To re-connect to a different device turn off Bluetooth on unwanted devices. then access the Bluetooth settings menu on the device you wish to use and select KS261.


IMPORTANT SAFETY INSTRUCTIONS

- · Read these Instructions.
- · Keep these Instructions.
- Heed all Warnings.
 Follow all instructions.
- · Do not use this apparatus near water
- Clean only with a dry cloth.
 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- · Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding -Do not defeat the safety purpose of the polarized or grounding -type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 Protect the power cord from being walked on or prinched
- particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- · Minimum 5cm around the apparatus for sufficient ventilation
- . No naked flame sources, such as lighted candles, should be placed on the apparatus.

Aux In

Requires a 3.5mm audio cable (included)

- Power ON the unit and press the Source button to switch to Aux In Mode.
- Connect a 3.5mm audio cable to the **Aux In** on the subwoofer and the audio output/headphone jack on a smartphone or other audio source.
- Use the controls on the connected device to select audio, play, pause, skip, and adjust the volume.

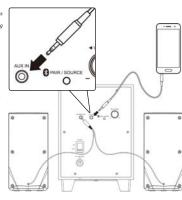



INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iLiveElectronics.com

Pour télécharger ce quide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iLiveElectronics.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@dpiinc.com Copyright © 2018 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



(背面

	康	录舜(深圳)电子科技有限公司	型号:	KS261说明书	设计:		
	技	1. 检测外观是否良好,不可有掉漆、异色、杂色、印刷模等等。 字、重影、污迹、破损、断字等。 2. 适力擦拭坐印部分,应无掉油、模糊等不良现象。	规格:	210*297MM(上下左右居中对折)	审核:		
	术		材质:	80g书写纸,单色印刷	批准:		
	要	3. 丝印颜色是否符合工厂或客户要求。	料号:		时间:		
'	求		版本:		页次:	1/1	