

### Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



### FCC Warnings

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Additional Warnings and Precautions

- **CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING: Shock hazard - Do Not Open.**
- **WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.**
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.**
- **WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**
- **WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.**
- **CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.**
- **WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.**
- **Warning: Do not ingest battery, chemical burn hazard.**
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

 
 


**WARNING :** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). **This product meets and complies with all required Federal guidelines.**

## Features & Controls

### Features

- Bluetooth 5.0
- Voice prompts
- FM scan radio
- Rotary volume control
- Aux in
- Color changing LEDs
- USB port - supports MP3 file format
- SD port - supports MP3 file format
- Built-in rechargeable battery
- Battery life: approx. 6 hrs playtime at 50% volume

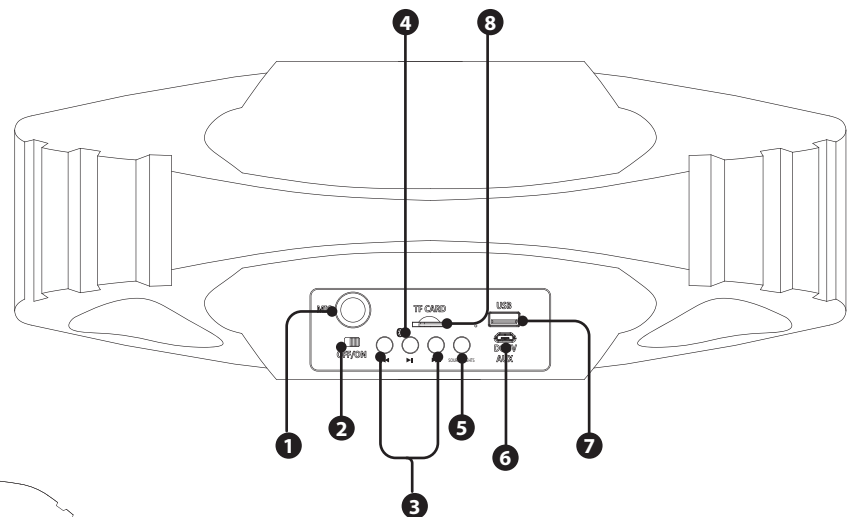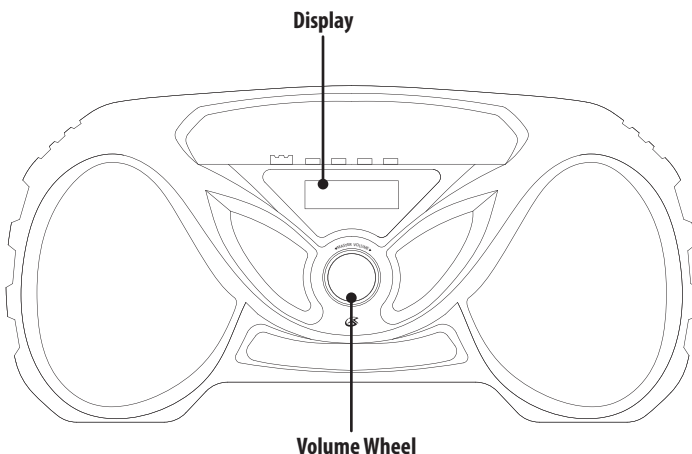

### Controls

1. **Microphone Input**
2. **Power ON/OFF**
3. **Next/Previous:** Press to skip or play previous tracks.
4. **Play/Pause/Pair/Scan:** Press to play/pause audio. Press and hold to enter into pairing mode. Press to scan radio frequencies and save radio stations in **FM Radio Mode**.
5. **Source/Lights:** Press to change sources between Bluetooth, FM Radio, Aux in USB and SD. Press and hold to power LED lights ON/OFF.
6. **DC Power Input/ Aux in**
7. **USB Media Port**
8. **SD Card Media Port**

 
---

## Power

---

### AC Power

To charge the internal battery, plug the USB charging cable into the **DC Power Input** on the speaker, a USB power adapter (not included) and standard power outlet. Charging time is approximately 3 hours. Battery life is approximately 6 hours at 50% volume. **Note:** Battery life can be extended by playing at lower volume levels.

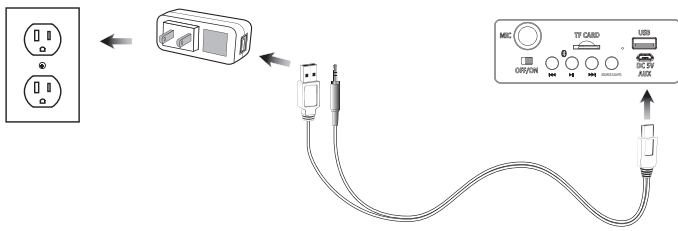

---

## Bluetooth

---

### Pairing & Playing Audio

When first powered on, the boombox defaults to Bluetooth Mode, indicated by a voice prompt.

1. Power ON the boombox by adjusting the Power Switch to the ON position. The boombox defaults to Bluetooth Mode and is ready to pair automatically. When pairing, remain within 3 feet of the Bluetooth device.
2. Using the controls on your Bluetooth device, select **BB200** in the Bluetooth Settings to pair. If need be, refer to the user's manual for your specific device for more information.
3. When successfully paired, a voice will announce, "Bluetooth is connected." Your Bluetooth device will now be heard through the boombox.
4. Use the controls on the connected Bluetooth device to select and play audio. Use the boombox controls or the connected Bluetooth device to play, pause, and adjust the volume level.
5. After initial pairing, the boombox will automatically connect to the last Bluetooth device used whenever it is in Bluetooth Mode. **Note:** If your device should become unpaired or you find it is unable to connect, press & hold the **Play/Pause/Pair/Scan** button to enter Pairing mode. A voice will announce, "Bluetooth is connecting," and you can connect to the boombox manually.

---

## FM Radio

---

### Radio Reception

An FM receiver is built into the boombox. Adjust the position of the boombox to improve FM radio reception.

### Radio Tuning and Saving Station Presets

 
1. Press the **Source** button to select **FM Radio Mode**, indicated by a voice prompt.
2. Press and hold the **Play/Pause/Pair/Scan** button to scan and save radio stations automatically.
3. Press the **Next/Previous** buttons to cycle through saved radio stations.

---

## Aux In

---

1. Connect the USB/3.5mm audio cable (included) to the **DC Power Input/Aux in** on the unit and the **audio output/headphone jack** on an audio device.
2. Press the **Source** button to select **Aux in Mode**, indicated by a voice prompt.
3. Use the controls on the connected device to select and play audio. Use the boombox controls or the connected Bluetooth device to play, pause, and adjust the volume level.

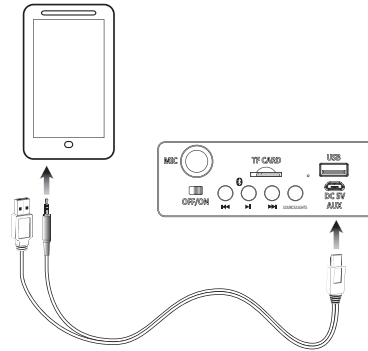


---

## USB Drive

 ---

1. Load a USB drive into the **USB Media Port**. The boombox will automatically switch to USB Mode, indicated by a voice prompt, and begin playing the media on the drive.
2. Use the controls on the boombox to select and play audio from the connected drive.

**Note:** When the battery is low, USB/SD mode may not work properly.

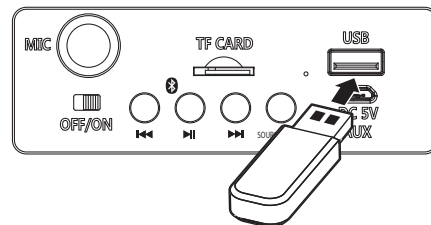

---

## SD Memory Card

---

1. Load a **SD memory card** into the **SD Card Media Port**. The boombox will automatically switch to SD Mode, indicated by a voice prompt, and begin playing the media on the card.
2. Use the controls on the boombox to select and play audio from the connected card.

**Note:** When the battery is low, USB/SD mode may not work properly.

---

## International Support

---

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: [www.gpx.com](http://www.gpx.com)

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: [www.gpx.com](http://www.gpx.com)

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: [www.gpx.com](http://www.gpx.com)

For Warranty Information and the most up-to-date version of this User's Guide, go to [www.gpx.com](http://www.gpx.com)

**Customer Service:** 1-888-999-4215 | **Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com) | **Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)

Copyright © 2020 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



**Protect for Today  
Sustain for Tomorrow**