

# **Classic Turntable Player with Bluetooth and Radio**

**Model: MT210-A**

## **BEFORE USE**

Choose a safe location and avoid placing the unit in direct sunlight or near any heat source.



Avoid locations subject to vibrations, excessive dust, cold or moisture.

Do not open the cabinet as this may result in electrical shock. If a foreign object is inserted accidentally contact your dealer.

Do not attempt to clean the unit with chemical solvents as this might damage the finishing. A clean, dry cloth is recommended for cleaning.

Keep this manual for future reference.



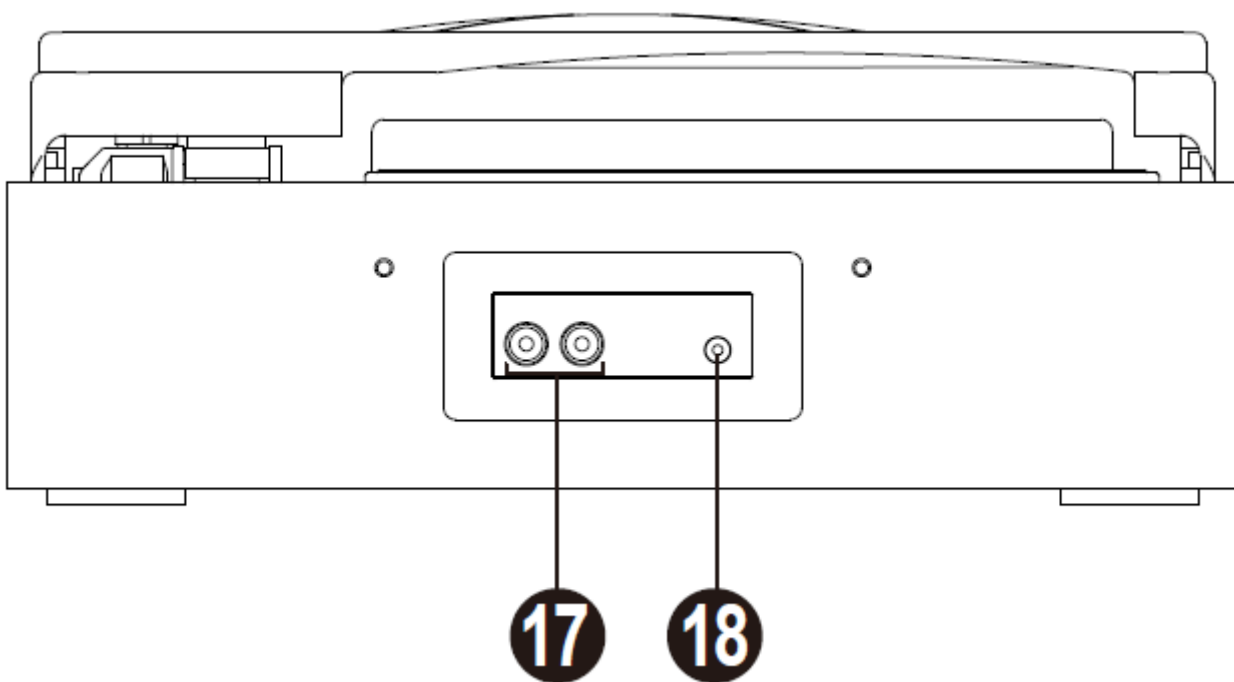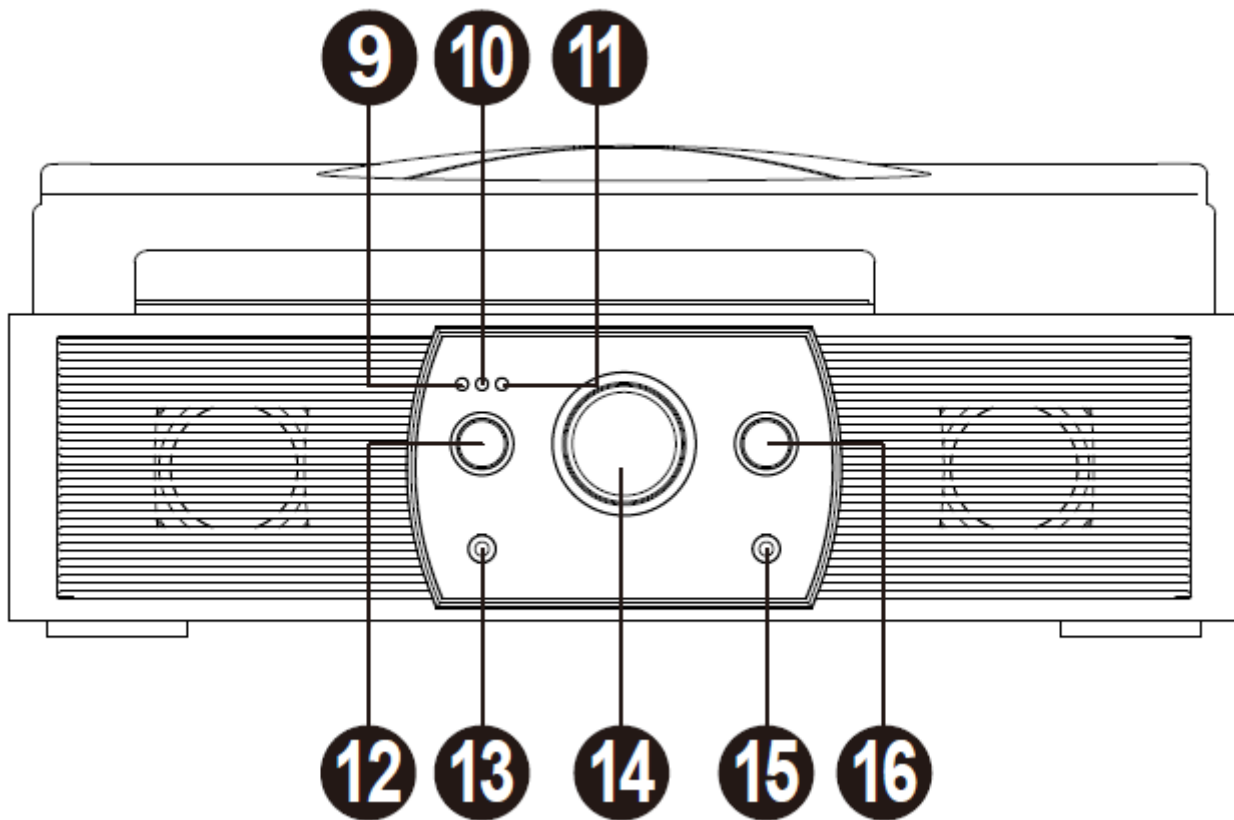

1. 45RPM adaptor
2. Tonearm
3. Platter shaft
4. AUTO-STOP ON/OFF switch
5. Speed switch
6. Platter
7. Tonearm lock
8. Cartridge with needle
9. FM radio mode indicator
10. Bluetooth mode indicator
11. Phono mode indicator
12. Function switch knob
13. Headphone jack
14. Radio station tuning knob
15. AUX IN jack
16. Power ON/OFF and volume knob
17. RCA output jack—for connecting external speaker system
18. DC IN jack

## Getting Started

1. Power Supply: Connect the Power Adaptor to the DC IN Jack located the rear of the turntable. And insert the plug of the power adaptor into an electrical wall outlet.
2. Power On: Rotate the Power ON/OFF and volume knob clockwise to turn the device ON.
3. Power Off: Rotate the Power ON/OFF and volume knob anticlockwise to turn the device OFF.

## LISTENING TO A RECORD

1. Raise the anti-dust cover and switch the function knob to PHONO mode.
2. Place a record on the turntable platter and set the player speed to match the record speed.

NOTE: when playing a 45RPM record with large centre holes, use the 45RPM adapter.

3. Turn the power & volume control knob clockwise.
4. Remove the stylus protective cover ; unlock the tonearm and remove the tonearm gently to the desired position over the record. Gently let the tonearm descend onto the record to start vinyl playback.

If the AUTO STOP ON/OFF Switch is turned ON, the record will stop automatically when finished. If Auto Stop Control is turned OFF, record will NOT stop automatically when finished. You have to stop it manually.

Remark: AUTO STOP function applies to most 33RPM vinyl records. However, for very few vinyl records, it will stop when it does not come to the end, or it will not stop when it comes to the end when AUTO STOP is ON.

Turn the VOLUME CONTROL KNOB to adjust the volume.

**Remark: During the PHONO mode, please make sure that the AUX IN jack was not plugged in with the audio cable.**

## LISTENING TO RADIO

Switch the function knob to FM radio mode to listen to radio stations. Adjust the radio station tuning knob to search stations.

FM reception can be improved by adjusting the pigtail FM Antenna on the rear.

Turn the VOLUME CONTROL KNOB to adjust the volume.

**Remark: During the radio mode, please make sure that the AUX IN jack was not plugged in with the audio cable.**

## **BLUETOOTH PLAYBACK**

Switch the function knob to Bluetooth mode; the BT indicator will become blue color flashing. Search the unit on your mobile phone or tablet PC, and you will find the device name **Vintage Turntable**. After pairing and connection, the BT indicator will become blue without flashing, you can enjoy the Bluetooth playback.

Turn the VOLUME CONTROL KNOB to adjust the volume. (The mobile phone or tablet PC's volume control may also impact on Volume Level so ensure this is also turned up).

**Remark: During the Bluetooth mode, please make sure that the AUX IN jack was not plugged in with the audio cable.**

## **AUX IN PLAYBACK**

1. In FM, RADIO, or PHONO mode, connect your iPod, MP3 player, mobile phones etc. to the AUX IN port with a 3.5mm-3.5mm audio cable (not included).
2. You can enjoy the music of iPod, MP3 player, mobile phones etc. at the turntable player.

Turn the VOLUME CONTROL KNOB to adjust the volume. (The iPod, MP3 player, mobile phones' volume control may also impact on Volume Level so ensure this is also turned up).

## **HOW TO REPLACE THE NEEDLE**

To replace the needle, please refer to the instructions below.

Removing the needle from the cartridge

1. Place a screwdriver at the tip of the stylus and push downward as shown in direction "A".
2. Remove the stylus by pulling the stylus forward and pushing downward.

Installing the Stylus

1. Hold the tip of the stylus and insert the stylus by pressing as shown in direction "B".
2. Push the stylus upward as in direction "C" until the stylus locks into the tip position.



## NOTES

We advise you to clean your records with an anti-static cloth to gain maximum enjoyment from them.

We would also point out that for the same reason your stylus should be replaced periodically (approximately every 250 playback hours)

## TIPS FOR BETTER TURNTABLE PERFORMANCE

1. When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip-use a soft brush in a "back-to-front" motion only.
4. If you must use a needle cleaning fluid, use very sparingly.
5. Gently wipe the anti-dust cover and turntable housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable and anti-dust cover.
6. Never apply harsh chemicals or solvents to any part of the turntable system.

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.